




TX3 Series

TELEPHONE ACCESS SYSTEMS

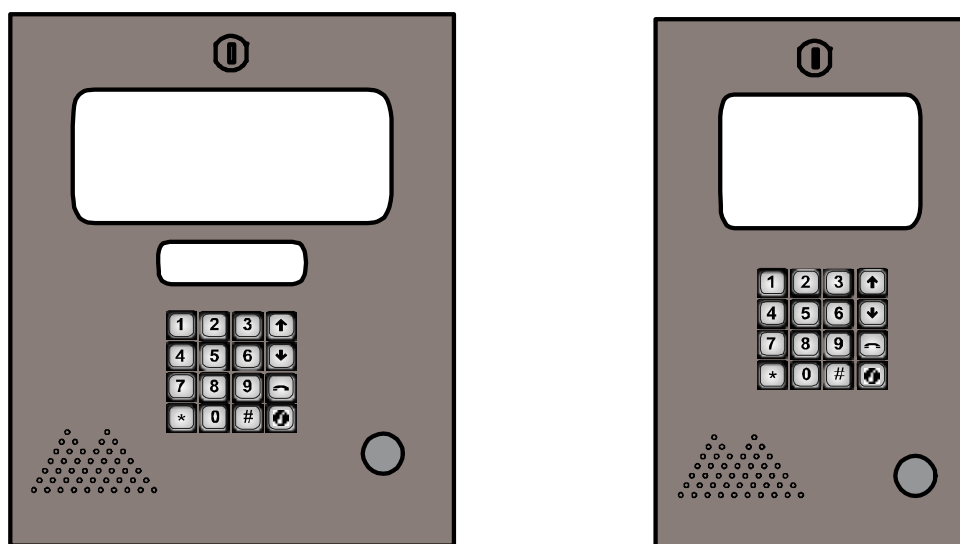

Installation and Operation Manual

Contents

1	Introduction	9
1.1	TX3 Systems	10
1.2	Features	11
1.3	Lobby Control Unit Enclosures	12
1.4	Lobby Control Unit Accessories	15
1.5	Warranty and Special Notices	16
1.6	About This Manual	16
1.7	Contact Us	17
2	Enclosure Installation	19
2.1	Grounding the Telephone Access System	20
2.2	Installing the Enclosures and Lobby Control Unit	20
2.3	Installing the Heater	26
2.4	TX3-2000-8K-A 8 Line Kiosk Installation	27
3	TX3 System	33
3.1	TX3 System	34
3.2	Single Lobby Control Unit	35
3.3	Dual Lobby Control Units	37
3.4	Three Lobby Control Unit Configuration	38
3.5	Multiple Lobby Control Units	40
3.6	Networking TX3 Panels	41
3.7	Lobby Control Unit Wiring	44
4	Lobby Control Unit Setup	45
4.1	Controller Board	46
4.2	Controller Board Connectors - Bottom	48
4.3	Controller Board Connectors - Top	52
4.4	Modem Board	54
4.5	MD-921 IP Module	55
4.6	MD-993 Module	56
4.7	Guard Phone Module	57
4.8	Guard Phone	57
4.9	Controller ID Setup	58
4.10	Configuration Using a PC	61
4.11	Updating Firmware	62
4.12	Beginning Configuration	62
5	NSL Relay Cabinet Installation and Wiring	65
5.1	NSL Relay Cabinet Mechanical Installation	66
5.2	NSL Relay Control Unit and Expanders	67
5.3	Wiring the TX3-NSL-8M Main Controller Board	70
5.4	Updating Firmware	86

6	Elevator Restriction Unit Installation and Configuration	87
6.1	Elevator Restriction Cabinet Mechanical Installation	88
6.2	Elevator Restriction Units	89
6.3	Wiring the Elevator Restriction Unit	91
6.4	Elevator Restriction Controller Backplane	94
6.5	2012E Elevator Restriction Relay Card	95
6.6	Elevator Restriction Unit Configuration	96
6.7	Updating Firmware	99
7	Adding Controllers	101
7.1	Adding a Controller	102
8	Appendix	103
8.1	Specifications	104
8.2	Kits - Electronic Scrolling Directory	106
8.3	Kits - Telephone Access Slim-line	108
8.4	Kits - Continental Series Enclosures	109
9	Resident Operating Instructions	111
9.1	NSL Resident Operating Instructions	112
9.2	ADC Resident Operating Instructions	114

Warranty & Warning Information 115

Special Notices 118

List of Figures

Figure 1	TX3-UFT Universal Series Flush Trim Ring	21
Figure 2	TX3-USFT Slim Line Universal Flush Trim Ring	24
Figure 3	Continental Enclosure Flush Mount	25
Figure 4	Heater TH-102 Installation Location	26
Figure 5	Dimensions of the 8 Line Kiosk (inches)	27
Figure 6	Reinforcement Bracket with bolts	28
Figure 7	Reinforcement Bracket with nuts	29
Figure 8	Kiosk Base Plate with bolts	29
Figure 9	Kiosk Mounting Holes	29
Figure 10	Base Plate Mounting Holes	30
Figure 11	Base Plate Dimensions (inches)	30
Figure 12	Fitting the Kiosk on the Base Plate	31
Figure 13	Fitting the Kiosk on the Base Plate (from below)	31
Figure 14	Attach the Kiosk to the base plate	32
Figure 15	Single Lobby Control Unit	35
Figure 16	Single Lobby Control Unit with ADC and NSL Lines	36
Figure 17	Single Entrance System Wiring	37
Figure 18	Dual Lobby Control Units	38
Figure 19	Multiple Lobby Control Units to Multiple Lines	39
Figure 20	Many Lobby Control Units to One Line	40
Figure 21	TX3 devices on an RS-485 network.	41
Figure 22	TX3 devices on an ethernet TCP/IP network.	42
Figure 23	Lobby control units using both ethernet and RS-485 networks	43
Figure 24	Lobby Control Unit Wiring	44
Figure 25	Lobby Control Unit Main Controller Board	46
Figure 26	Controller Board Connectors - Bottom	48
Figure 27	Tamper Switch	49
Figure 28	RS-485 Connections	50
Figure 29	Power Supply	51
Figure 30	Controller Board Connectors - Top	52
Figure 31	Main Door Dry Contact Wiring	53
Figure 32	Modem Module Telephone Connectors	55
Figure 33	IP Module Data and Ethernet Connectors	55
Figure 34	MD-993 Module	56
Figure 35	Guard Phone Module	57
Figure 36	NSL Relay Cabinet	66
Figure 37	TX3-NSL-8M Relay Control Unit	68
Figure 38	NSL Expanders	69
Figure 39	TX3-NSL-8M Main Controller Board	70
Figure 40	NSL System with Telephone Line	72
Figure 41	NSL Controller Telephone Lines	72
Figure 42	NSL Backplane	74
Figure 43	ADSL-100 Filter Module Installation	75
Figure 44	Backplane Number Section	76
Figure 45	2012 NSL Relay Board	79
Figure 46	CA-71A BIX Block Wiring Configuration	80
Figure 47	RJ-71C Punch-Down Block Wiring Configuration	83
Figure 48	Elevator Relay Cabinet	88

Figure 49	Lobby Control Unit with Elevator Restriction	89
Figure 50	Elevator Restriction Unit	90
Figure 51	Elevator Controller Board	91
Figure 52	Elevator Restriction Controller Board Wiring	93
Figure 53	Elevator Restriction Controller Backplane	94
Figure 54	2012E Elevator Restriction Relay Board	95

List of Tables

Table 1	MD-933 Jumper Settings	56
Table 2	Lobby Control Unit SW1 DIP Switch Settings	59
Table 3	NSL Relay Cabinet Dimensions	67
Table 4	Sample Backplane Relay Addresses	77
Table 5	CA-71A BIX Block Identification Form	81
Table 6	RJ-71C Punch-Down Block Identification Form	84
Table 7	Lobby Control Unit SW2 DIP Switch Settings	96

1 Introduction

This manual provides information about the installation and operation of the Telephone Access System, and must be read in its entirety before beginning any installation work.

Installation must be performed by a qualified technician and must adhere to the standards and special notices set by the local regulatory bodies.

Note: **Mircom periodically updates panel firmware and Configurator Software to add features and correct any minor inconsistencies. For information about the latest firmware or software visit the Mircom website at www.mircom.com.**

For warranty and special notices information see the Warranty and Special Notices chapter on page 115.

Warning: **The Telephone Access System assembly must be grounded by a qualified electrician. An improperly grounded unit can result in equipment malfunction and electrical shock.**

This manual explains

- Lobby Control Unit Installation and Operation
- NSL Control Unit Installation and Operation
- Elevator Restriction Unit Installation and Operation
- Card Reader Unit Integration

1.1 TX3 Systems

The Mircom's TX3 series of telephone access systems provide high quality two-way communication between residents and their visitors in a multi-unit dwelling establishment.

The basic TX3 system consists of the TX3 Lobby Control Unit and depending on the application, may be integrated with a combination of Mircom Elevator Restriction Units, Card Access Units and Touch Screens. All access systems may be networked together using either a peer-to-peer RS-485 connection, an ethernet TCP/IP connections, or an ethernet TCP/IP network with RS-485 subnetworks.

The TX3 system is capable of providing ADC or NSL type telephone access control from a single panel or from a networked system.

A maximum of 63 units are supported with any combination of Touch Screens, Lobby Control Units, Elevator Restriction Units and Card Access Units. Valid network addresses range from 1 to 63. One of the networked units with a real time clock, such as Touch Screen, Lobby Control or Card Access must have their network address set to 1. In addition, units can be connected to either an ethernet TCP/IP network or a combination ethernet TCP/IP network with RS-485 subnetworks, both of which allow more than 64 units to be networked. See Networking TX3 Panels on page 41 for more information.

The access system can be configured as an autodialer controller (ADC) or as a no subscriber line (NSL) system. Both system setups can be configured for multiple entrances with independent doors and control devices such as electric door locks, cameras, and garage doors.

1.1.1 ADC and NSL Capability

TX3 supports full ADC and NSL telephone connectivity from a single Telephone Access System panel or from a networked system. A single panel supports up to five ADC and/or NSL telephone lines.

An ADC connection requires a dedicated subscriber telephone line service connected to an outside telephone line. This connection lets the visitor call the tenant and access their voice mail.

An NSL type connection uses the existing building telephone lines for communication and does not require a separate telephone line. This system may consist of one or more Lobby Control Units connected to TX3-NSL-8M NSL

Units, typically located in the electrical/telephone room of a building. The NSL units intercept all telephone lines into the building's suites and communicate directly to the resident phone using the Lobby Control Unit.

Note: Non-configurable PBX systems are not supported. For more information, contact technical support at Mircom.

1.1.2 Elevator Restriction Units

The TX3-ER-8 or TX3-ER-8-A Elevator Restriction Units limit building accessibility by granting visitor access only to the destination floor.

1.1.3 Other Controllers

Other Mircom controllers, such as the Elevator Restrictor Unit and the Card Access controller, may be networked with the Lobby Control Unit. The network options include a peer-to-peer RS-485 network, an ethernet TCP/IP network, or a combination ethernet TCP/IP network with RS-485 subnetworks. See Networking TX3 Panels on page 41 for more information.

Notes: In order for a panel to connect to an ethernet TCP/IP network, it must satisfy the following conditions.

- It must be IP capable. Panels that are IP capable are usually denoted by a "-A" at the end of their model names.
- If the panel is not a Touch Screen, it must have a TX3-IP IP Module installed.

1.2 Features

Features of the TX3 series include:

- Stainless steel front panel
- Universal Series enclosure with a built-in rain hood
- Large scrolling 8 x 20 LCD display that eliminates the need for an external directory
- Back-lit 16 digit keypad with dedicated operational buttons for Page Up, Page Down, Call and Info
- Provisions for postal lock and camera
- Multilingual Display and Voice Greeting (English, French-Canadian and Spanish) that provides instructions on how to use the Lobby Control Unit

- Concierge/Security Desk/Guard Phone capability
- Card Access Interface
- Supports both Auto Dialer (ADC) and NSL (no phone bill)
- Ability to network panels together (peer-to-peer)
- Hands free, full duplex communication
- Flexible one to four digit resident dial codes
- Dials up to 18 digit telephone numbers
- System can be configured locally using the keypad or a computer with the TX3 configuration software
- Upload/download configuration files without taking the whole system off-line
- Programming from one location
- Records a maximum of 5000 event logs
- Elevator restriction capability
- Schedule based call restrictions provide more security and flexibility
- Auto Unlock to leave the main door based on the selected schedule
- Capability of one person testing the NSL controller without using the Lobby Control Unit
- Industry Canada and F.C.C. approved

1.3 Lobby Control Unit Enclosures

There are four series of enclosures for Lobby Control Units:

Universal Series. The Universal Series enclosure is an indoor/outdoor unit for the scrolling Lobby Control Unit.

Universal Slim-Line Series. The Universal Slim-Line enclosure is an indoor/outdoor unit that is narrower and longer than the Universal and Continental series, and is for the scrolling Lobby Control Unit. This series is also available as a kit.

Continental Series. The Continental Series is a stainless steel indoor unit larger than the Universal Series and is for the scrolling Lobby Control Unit.

Kiosk Free Standing.

1.3.1 Universal Series

The Universal Series enclosures are surface or semi-flush mounted with the Lobby Control Units. Optional flush trim rings are available for semi-flush and flush installations. A rain hood is included allowing for outdoor use.

The following Universal Panel models use the Scrolling Directory:

TX3-120U and TX3-120U-A. Stainless steel finish entry panel with speaker, microswitch for postal lock, 200 name main controller board, 4x20 LCD display, 120 name paper directory and one PS-4P transformer plug. Designed for outdoor applications. The TX3-120U-A is IP capable.

TX3-200-8U and TX3-200-8U-A. Stainless steel finish entry panel with speaker, microswitch for postal lock, 200 name main controller board, 8x20 LCD display and one PS-4P transformer plug. Designed for outdoor applications. The TX3-200-8U-A is IP capable.

TX3-1000-8U and TX3-1000-8U-A. Stainless steel finish entry panel with speaker, microswitch for postal lock, 1000 name main controller board, 8x20 LCD display and one PS-4P transformer plug. Designed for outdoor applications. The TX3-1000-8U-A is IP capable.

TX3-2000-8U and TX3-2000-8U-A. Stainless steel finish entry panel with speaker, microswitch for postal lock, comes with a 2000 name main controller board, 8x20 LCD display and one PS-4P transformer plug. Designed for outdoor applications. The TX3-2000-8U-A is IP capable.

1.3.2 Universal Slim-Line Series

The Universal Slim-Line series enclosure houses the following models and can be surface or semi-flush mounted:

TX3-200-4U and TX3-200-4U-A. Stainless steel finish slim-line entry panel with speaker, microswitch for postal lock, 200 name main controller board, a 4x20 LCD display and one PS-4P transformer plug. Designed for outdoor applications. The TX3-200-4U-A is IP capable.

TX3-1000-4U and TX3-1000-4U-A. Stainless steel finish slim-line entry panel with speaker, microswitch for postal lock, 1000 name main controller board, a 4x20 LCD display and one PS-4P transformer plug. Designed for outdoor applications. The TX3-1000-4U-A is IP capable.

TX3-2000-4U and TX3-2000-4U-A. Stainless steel finish slim-line entry panel with speaker, microswitch for postal lock, 2000 name main controller board, a 4x20 LCD display and one PS-4P transformer plug. Designed for outdoor applications. The TX3-2000-4U-A is IP capable.

1.3.3 Universal Slim-Line Kit

The Universal Slim-Line series is available as a kit:

TX3-NSL-12K. The TX3-NSL-12K kit consists of:

- TX3-200-4U slim-line entry panel with speaker and microswitch for postal lock
- 4x20 LCD display

- PS-4P transformer plug
- TX3-NSL-8M Master NSL Relay Cabinet with one PS-4P transformer plug
- 2012K Twelve Telephone Relay Kit with a 2012 Twelve Telephone Relay board and a 9106 Cable
- RJ-71C Punch Down Block for outdoor applications

TX3-NSL-12K-A. This is the IP capable version of the TX3-NSL-12K and comes with the TX3-200-4U-A panel instead of the TX3-200-4U.

The Universal Panel Accessories consist of the following:

Model TX3-UFT. Universal Flush mounting trim for use with TX3-120U, TX3-200-8U, TX3-1000-8U and TX3-2000-8U. Stainless steel.

Model TX3-USFT. Universal Slim-Line Flush mounting trim for TX3-200-4U. Stainless steel.

1.3.4 Continental Series

The Continental Series enclosure for Lobby Control Units are flush mounted and for indoor use only. The following Continental Series models use the Scrolling Directory:

TX3-120C and TX3-120C-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, 120 name paper directory, flush mounting back box and a PS-4P transformer plug. Designed for indoor use. The TX3-120C-A is IP capable.

TX3-200-8C and TX3-200-8C-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, 200 name main controller board, 8x20 LCD display, flush mounting back box and one PS-4P transformer plug. Designed for indoor use. The TX3-200-8C-A is IP capable.

TX3-1000-8C and TX3-1000-8C-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, 1000 name main controller board, 8x20 LCD display, flush mounting back box and one PS-4P transformer plug. Designed for indoor use. The TX3-1000-8C-A is IP capable.

TX3-2000-8C and TX3-2000-8C-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, 2000 name main controller board, 8x20 LCD display, flush mounting back box and one PS-4P transformer plug. Designed for indoor use. The TX3-2000-8C-A is IP capable.

TX3-200-8CH and TX3-200-8CH-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, 200 name main controller board, 8x20 LCD display, handset, flush mounting back box and one PS-4P transformer plug. Designed for indoor use. The TX3-200-8CH-A is IP capable.

TX3-1000-8CH and TX3-1000-8CH-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, 1000 name main controller board, 8x20 LCD display, handset, flush mounting back box and one PS-4P transformer plug. Designed for indoor use. The TX3-1000-8CH-A is IP capable.

TX3-2000-8CH and TX3-2000-8CH-A. Stainless steel finish Lobby Control Unit with speaker, microswitch for postal lock, comes with a 2000 name main controller board, 8x20 LCD display, handset, flush mounting back box and one PS-4P transformer plug. Designed for indoor use. The TX3-2000-8CH-A is IP capable.

1.3.5 Kiosk Free Standing

TX3-2000-8K-A: 8 line Voice Entry panel, Kiosk style mount for 2000 names.

1.4 Lobby Control Unit Accessories

The Lobby Control Unit accessories consist of the following items:

- TX3-UFT Universal series flush trim ring.
- TX3-USFT Slim line Universal Series flush trim ring.
- TX3-UGA Gooseneck mounting adapter designed for use with the standard Universal Series enclosure for pedestals.
- TX3-USGA Gooseneck mounting adapter designed for use with the TX3-200-4U Slim Line Universal enclosure pedestals.
- TH-102 Thermostat Heater with one PS-24P Transformer Plug
- CAM-2 TX3 Camera
- TX3-MDM Modem Module
- TX3-GPM Guard Phone Module
- TX3-USB-AD Kit
- TX3-IP IP Module

1.5 Warranty and Special Notices

Mircom values your business and always attempts to provide you with the very best service.

Please see the Warranty and Special Notices chapter on page 115 for information about the warranty and special notices about equipment use.

1.6 About This Manual

This manual provides comprehensive information on the installation and configuration of the TX3 Series Telephone Access System by the installation technician. Tasks are described in the order that they are likely to be performed.

This manual applies to the following models:

- TX3-120/200-4 and TX3-120/200-4-A (4x20 LCD)
- TX3-200-8 and TX3-200-8-A (8x20 LCD)
- TX3-1000-4 and TX3-1000-4-A (4x20 LCD)
- TX3-1000-8 and TX3-1000-8-A (8x20 LCD)
- TX3-2000-4 and TX3-2000-4-A (4x20 LCD)
- TX3-2000-8 and TX3-2000-8-A (8x20 LCD)

Chapter 9 describes the Telephone Access System resident operating instructions for NSL and ADC systems.

1.6.1 Version Control

The version number appears on the front cover and changes whenever there is a major or minor update to any part of the system regarding operation or configuration.

The following convention indicates major or minor changes:

Initial release. Version 1.00.0

Major change. Version 2.00.0

Minor change. Version 2.01.0

Pre-release changes. Version 2.01.1

1.6.2 Additional Documentation

For additional documentation, see the following Mircom literature:

- TX3-CX Touch Screen Administrators Guide LT-995
- TX3-CX Card Access System Installation and Operation Manual LT-980

- LT-1160 TX3-CX-A8 Aperio Interface Panel Installation and Operation Manual.
- TX3 Telephone Access System User's Guide LT-968
- TX3 Two Door Card Access System Kit Catalogue Number 6531
- TX3 Series Elevator Restriction Accessories Catalogue Number 6532

1.7 Contact Us

Mircom fosters a collaborative support process and environment in providing early feedback to meet your specific needs.



You can contact us from Monday to Friday 8:00 A.M. to 5:00 P.M. E.S.T.

1.7.1 General Inquiries

For general inquiries call us at the following numbers:

Toll Free: 1-888-660-4655

Local: 905-660-4655

1.7.2 Customer Service

Customer service is available at the following numbers:

Toll Free: 1-888-MIRCOM5

Local: 905-695-3535

Local Fax: 905-660-4113

Toll-Free Fax: 1-888-660-4113

1.7.3 Website

Visit the Mircom website, at **www.mircom.com**, to find the product information you are looking for and to learn about troubleshooting, training and technical support options.

The website provides avenues for customers to ask questions about new and existing technologies, and receive expert technical support about software and products. Visit **www.mircom.com/chat**.

1.7.4 Email

As a customer you quickly become informed on how we can help with new products and technologies. Contact Mircom at **mail@mircom.com**.

1.7.5 Technical Support

For technical support contact Mircom's Technical Support Department between 8 A.M. and 5 P.M. (EST) Monday through Friday, excluding holidays.

Toll Free: 1-888-MIRCOM5

Local: 905-695-3535

Local Phone: 905-660-4655

Toll Free Phone: 1-888-660-4655

Email: techsupport@mircom.com

2 Enclosure Installation

This chapter provides information on how to install the various enclosures and panels.

This chapter explains

- Enclosure installation
- Lobby Control Unit installation
- Heater installation
- 8 Line Kiosk Installation

2.1 **Grounding the Telephone Access System**

Grounding reduces the risk of electrical shock by providing an alternate escape route for the electrical current. Telephone Access System is equipped with a 16 gauge electrical wire attached to the panel chassis ground post.

To ground the Telephone Access System attach one end of the supplied cable to a suitable grounding wire and connect it to the site ground.

2.2 **Installing the Enclosures and Lobby Control Unit**

Lobby Control Units use one of the following three types of Lobby Control Unit enclosures:

Universal Series. The Universal Series are surface or semi-flush mounted with the lobby Lobby Control Units. Optional flush trim rings are available for semi-flush and flush installations. The semi-flush trim is the TX3-UFT. A rain hood is included allowing for outdoor use.

Universal Slim-Line Series. The Universal Slim-Line series enclosure houses the TX3-200-4U model and can be surface or semi-flush mounted. The semi-flush trim is the TX3-USFT.

Continental Series. The Continental Series enclosure for Lobby Control Units are flush mounted.

2.2.1 Installing the Universal enclosure

The Universal enclosure mounts inside the wall with or without the TX3-UFT Universal Series Flush Trim Ring TX3-UFT. This Trim Ring houses the universal series enclosure as shown in Figure 1.

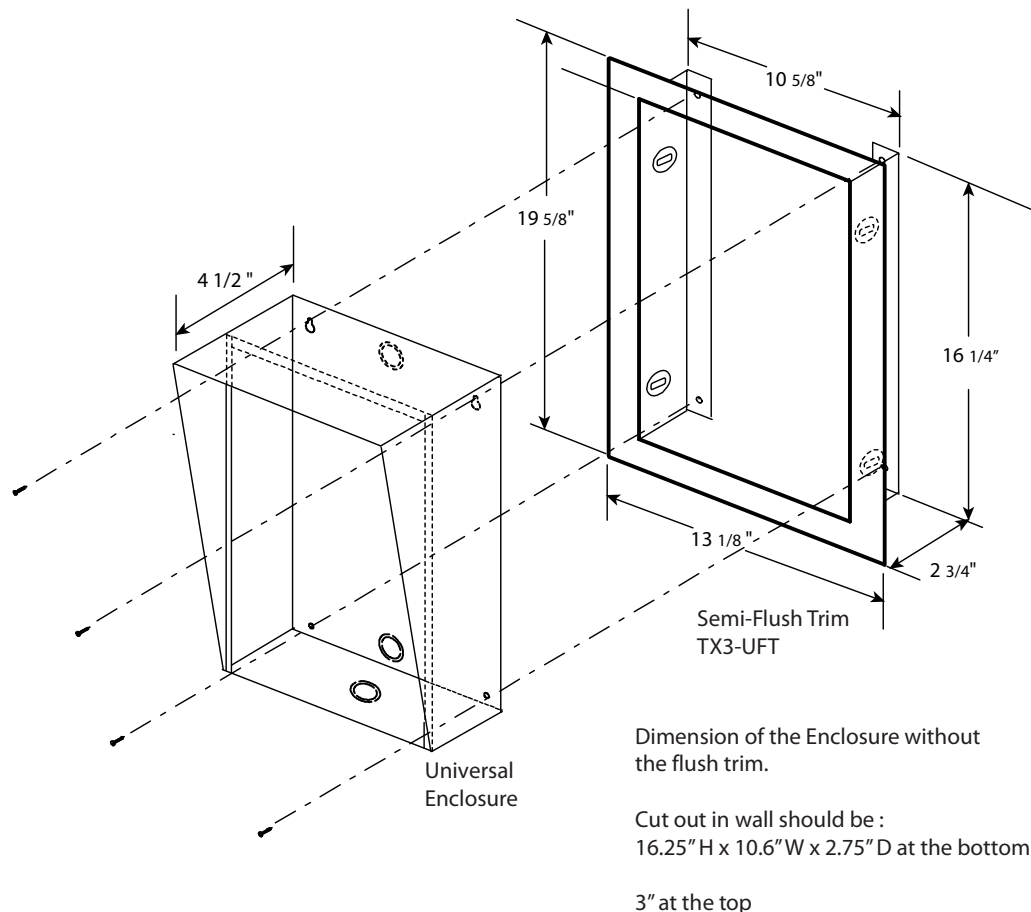


Figure 1. TX3-UFT Universal Series Flush Trim Ring

To install the Universal enclosure with the Flush Trim Ring to the wall stud

1. Find a suitable location for the enclosure next to a wall stud.
2. Using the enclosure as a template, trace an opening in the wall for the cut out with one side aligned with the side of the wall stud.
3. Cut an opening in the wall ensuring that one side is aligned with the wall stud.

4. Using the semi-flush trim ring as a template, insert the trim ring into the wall cut out and mark the top mounting hole location as shown in Figure 1. Ensure that at least one side is beside a wall stud.
5. Place the screw halfway into the wall into the marked hole location using the supplied screw.
6. Hang the Trim Ring onto the top screw.
7. Screw the lower two screw at the bottom of the trim ring halfway into the wall.
8. Tighten the two screws into place.
9. Insert the universal enclosure with the rain hood inside the trim ring.
10. Secure the universal enclosure into the trim ring using the supplied four screws as shown in Figure 1.

To surface mount the Universal enclosure

1. Find a suitable location for the Universal enclosure over a wall stud.
2. Using the Universal enclosure as a template, mark the two side mounting hole locations as indicated in Figure 1. Ensure that at least one side is over a wall stud.
3. Remove the enclosure and place the screws halfway into the marked hole location and wall stud using the supplied screws.
4. Place the Universal enclosure onto the two screws.
5. Screw the two side screws of the Universal enclosure halfway into the wall.
6. Tighten all four screws into place.

Note: The enclosure can also be mounted directly onto the drywall using anchors.

To install the Universal enclosure with the Flush Trim Ring to the back wall

1. Find a suitable location for the enclosure. Using the enclosure as a template trace an opening in the wall for the cut out.
2. Cut an opening in the wall.

3. Using the semi-flush trim ring as a template, insert the trim ring into the wall cut out and mark the top two mounting hole locations as shown in Figure 1.
4. Place the screws halfway into the wall into the marked hole location using the supplied screws.
5. Place the Trim Ring onto the two screws.
6. Screw the lower two screws at the bottom of the trim ring halfway into the wall.
7. Remove the screws and trim ring.
8. Place the universal enclosure with the rain hood, inside the trim ring and insert into the wall cut out.
9. Tighten all four screws into place.

To install the Universal enclosure without the Flush Trim Ring to the back wall

1. Using the semi-flush trim ring as a template, insert the Universal enclosure into the wall cut out and mark the top two mounting hole locations as indicated in Figure 1.
2. Place the screws halfway into the wall into the marked hole location using the supplied screws.
3. Place the Universal enclosure onto the two screws.
4. Screw the lower two screws at the bottom of the Universal enclosure halfway into the wall.
5. Tighten all four screws into place.

2.2.2 Installing the Universal Slim-line enclosure

The Universal enclosure mounts inside the wall with or without the Universal Series Flush Trim Ring TX3-USFT. The Trim Ring houses the universal series enclosure as shown in Figure 2

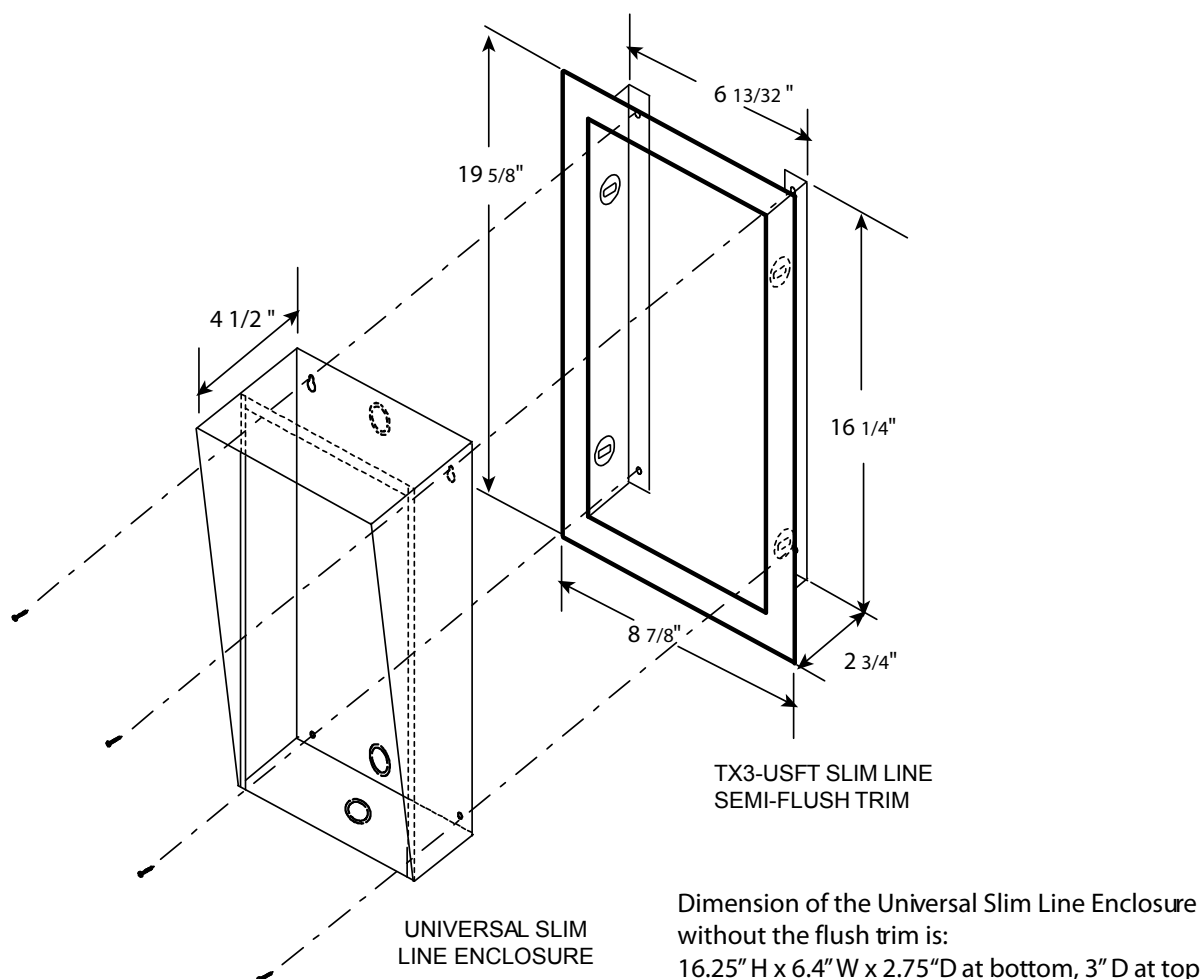


Figure 2. TX3-USFT Slim Line Universal Flush Trim Ring

To install the Universal Slim-line enclosure with or without the Flush Trim Ring

1. Follow the instructions in section 2.2.1 using the Universal Slim-line enclosure.

2.2.3 Installing the Continental enclosure

The Continental enclosure flush mounts directly inside the wall to the wall stud as shown in Figure 3. Mount the back box flush with the wall and right-side up (the ground screw location is at the bottom).

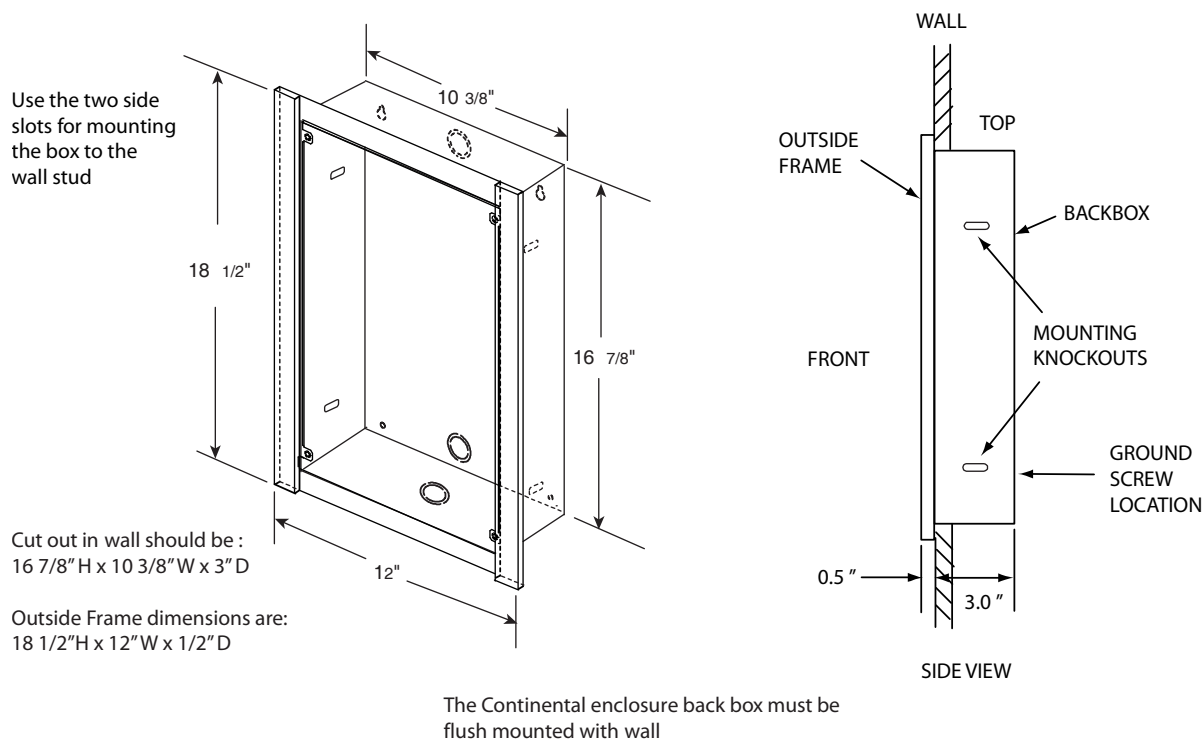


Figure 3. Continental Enclosure Flush Mount

To install the Continental enclosure

1. Find a suitable location for the Continental enclosure beside a wall stud.
2. Using the enclosure as a template, trace an opening in the wall for the cut out with one side aligned with the side of the wall stud.
3. Cut an opening in the wall ensuring that one side is aligned with the wall stud.
4. Insert the enclosure into the wall cutout and using the enclosure as a template mark the top mounting hole location as shown in the side view in Figure 3. Ensure that at least one side is beside a wall stud.
5. Remove the enclosure and place the screw halfway into the wall into the marked hole location using the supplied screw.
6. Place the enclosure onto the top screw.
7. Screw the lower two screw at the bottom of the trim ring halfway into the wall.
8. Tighten the two screws into place.

2.3 Installing the Heater

For temperatures where the Telephone Access System operates below 0°C (32°F) at any time, a heater must be installed inside the Universal enclosure as shown in Figure 4.

For additional information refer to LT-653 TH-102 Heater Installation Instructions.

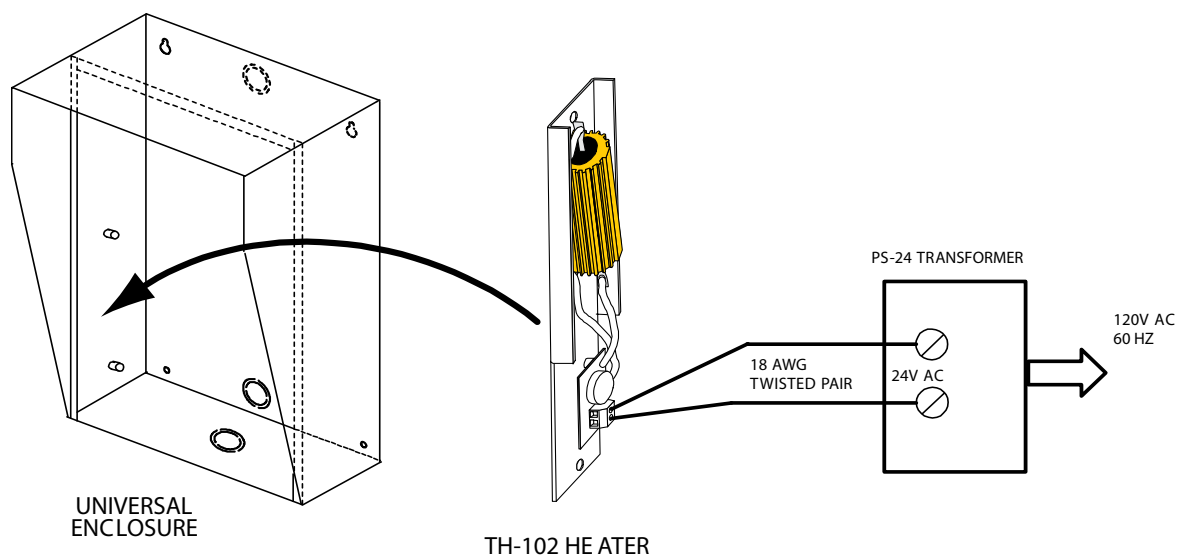


Figure 4. Heater TH-102 Installation Location

To install the heater

1. Place the TH-102 Heater into the bottom left hand corner of the Universal enclosure and secure using the two supplied spacers and two hex nuts.
2. Connect the TH-102 heater to the PS-24 Transformer 24 Vac terminal screws using a pair of #18 AWG wires.

Note: The transformer must be installed outside the enclosure.

2.4 TX3-2000-8K-A 8 Line Kiosk Installation

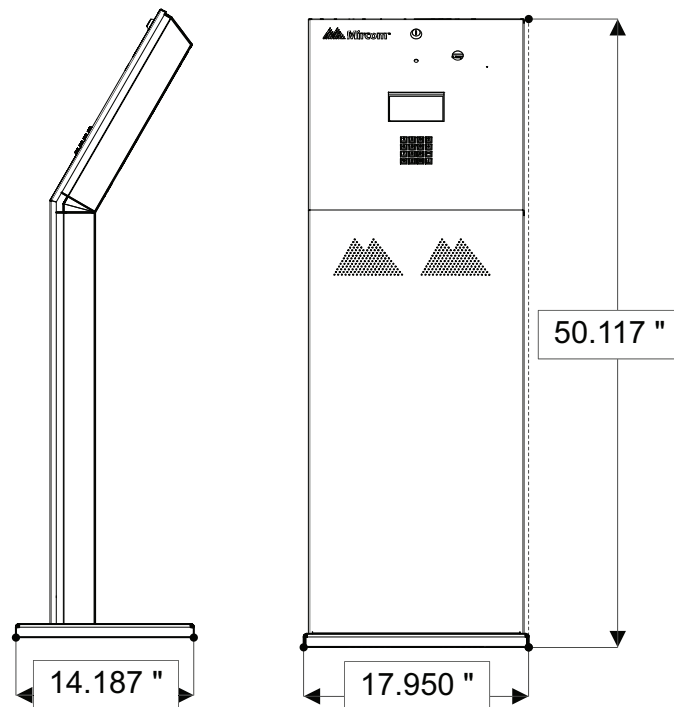


Figure 5 Dimensions of the 8 Line Kiosk (inches)

The Kiosk mounts to the floor inside the building near the entrance, close to the power source and telephone infrastructure. Access for the power and communication cables is provided through a cutout in the base plate.

To install the Kiosk you must:

- Remove the reinforcement bracket and the base plate.
- Attach the base plate to the floor, and run the wiring through the base plate opening.
- Attach the Kiosk to the base plate.
- Attach the reinforcement bracket to the Kiosk.

Follow the instructions below to complete these steps.

You will need:

4 bolts to attach the base plate to the floor. The holes in the base plate are 0.406" in diameter.

To install the Touch Screen Kiosk base plate

1. Find a suitable location for the Kiosk next to the building entrance and above the building electrical and communications conduit.
2. Remove the door from the Kiosk.
3. Remove the 4 bolts from the reinforcement bracket, as shown in Figure 6

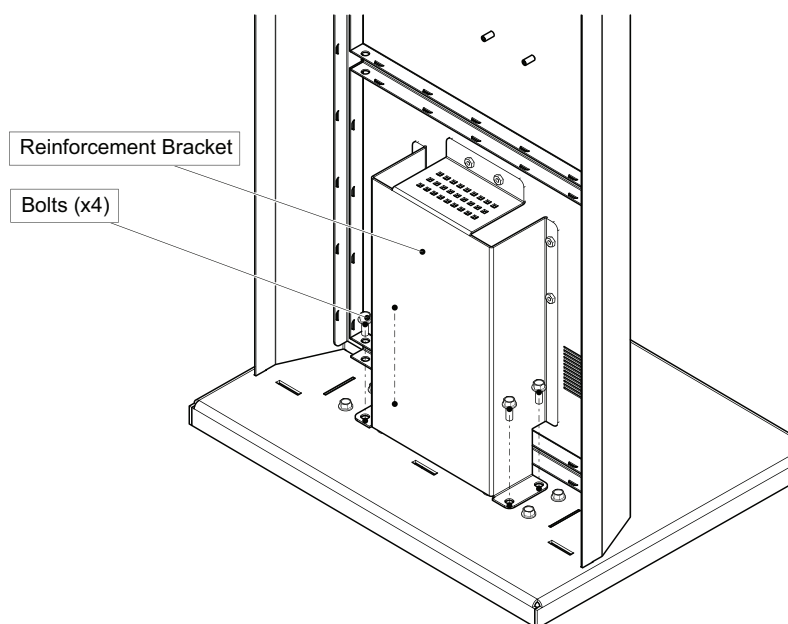


Figure 6 Reinforcement Bracket with bolts

4. Remove the 6 nuts on the reinforcement bracket, as show in Figure 7, and then remove the bracket.

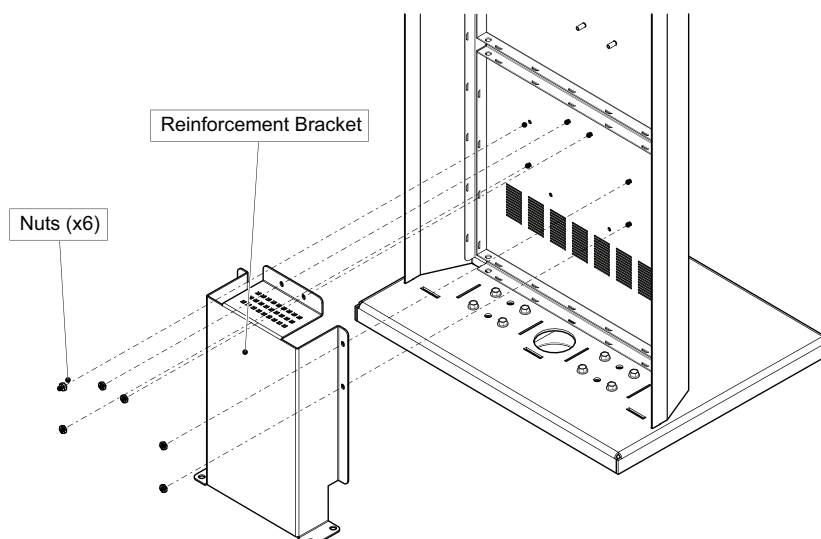


Figure 7 Reinforcement Bracket with nuts

5. Remove the remaining 8 bolts that attach the Kiosk to the base plate, as shown in Figure 8.

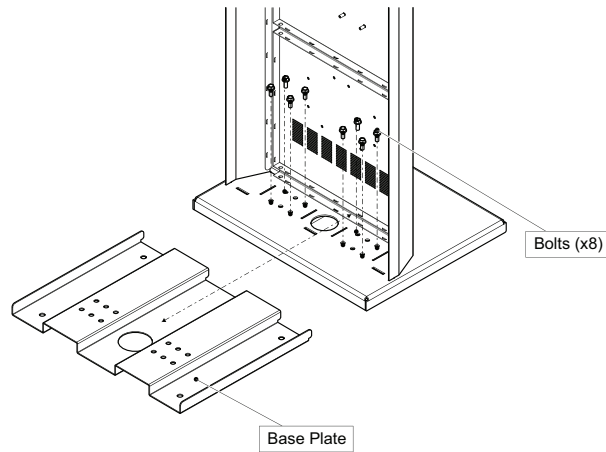


Figure 8 Kiosk Base Plate with bolts

The 12 Kiosk mounting holes in the base plate are shown in Figure 9.

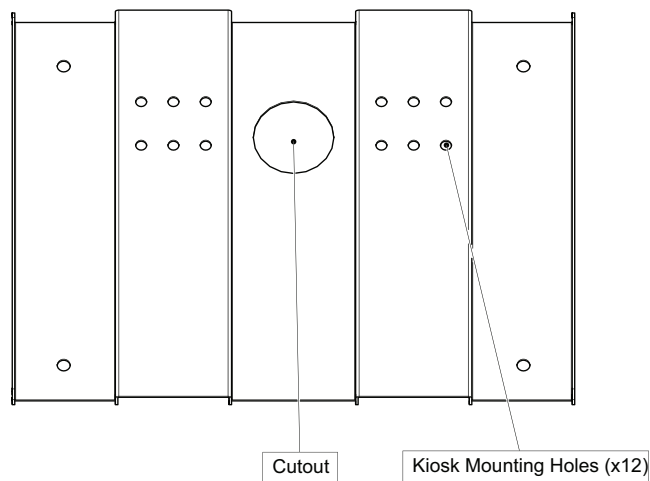


Figure 9 Kiosk Mounting Holes

6. Using the Kiosk base plate as a template, trace an opening in the floor for the cutout and mark the 4 base plate mounting hole locations as shown in Figure 10. Ensure that the base plate is aligned with the electrical conduit.

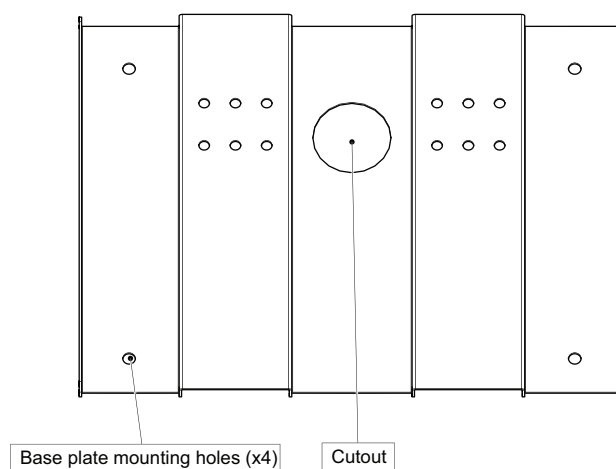


Figure 10 Base Plate Mounting Holes

Figure 11 shows the dimensions of the base plate.

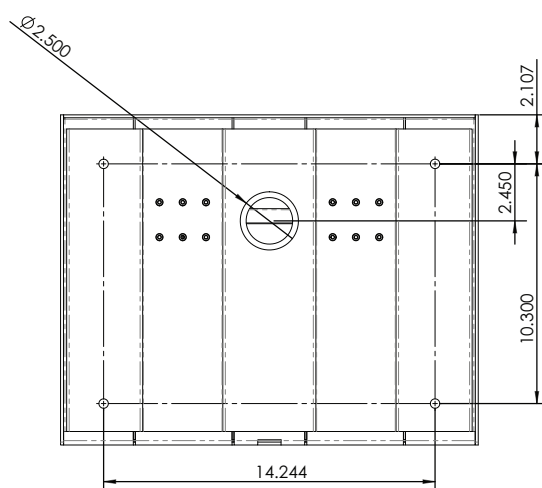


Figure 11 Base Plate Dimensions (inches)

7. Cut an opening in the floor for the electrical and communication cables.
8. Run the wires through the base plate opening.
9. Secure the base plate to the floor using 4 bolts in the base plate mounting holes shown in Figure 10. The holes are 0.406" in diameter.

To fit the Touch Screen Kiosk on the base plate

1. Fit the back lip of the Kiosk into the notches in the baseplate, and tilt the Kiosk forwards so that it rests on top of the base plate.

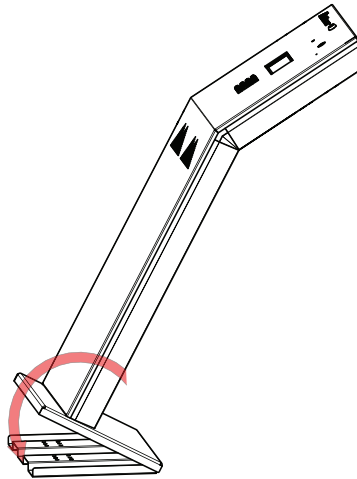


Figure 12 Fitting the Kiosk on the Base Plate

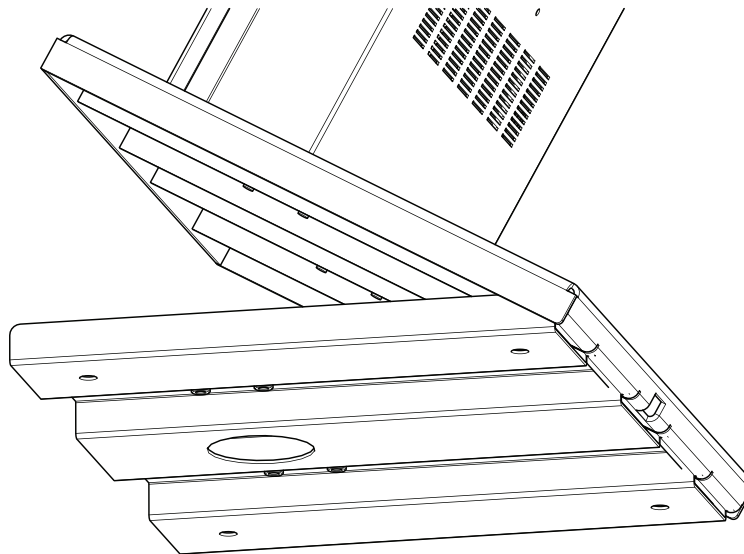


Figure 13 Fitting the Kiosk on the Base Plate (from below)

2. Secure the Kiosk onto the base plate using the 8 of the 12 base plate bolts in the holes shown in Figure 14.

Attach the Kiosk to the base plate
with bolts in these holes first

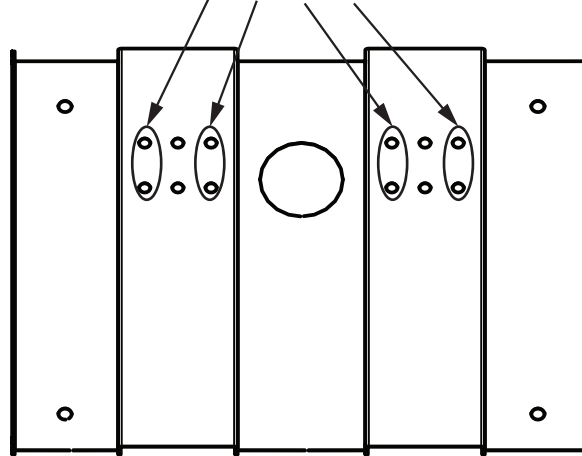


Figure 14 Attach the Kiosk to the base plate

3. Position the reinforcement bracket over the 6 studs on the inside of the Kiosk, and screw the 6 nuts on to the studs as shown in Figure 7.
4. Secure the reinforcement bracket to the base plate using the remaining 4 base plate bolts in the remaining 4 holes in the base plate.
5. Fit the door to the Kiosk.

3 TX3 System

This chapter provides information about the TX3 System and its use.

This chapter explains

- The TX3 System
- Single Lobby Control Unit
- Dual Lobby Control Unit
- Multiple Lobby Control Units
- Three Lobby Control Unit Configuration
- Single Entrance System Wiring Application
- Ethernet Network Configuration

3.1 TX3 System

The TX3 Lobby Control Unit may be networked with a combination of Elevator Restriction Units and Card Access Units through a peer-to-peer RS-485 connection.

The TX3 system is capable of providing ADC or NSL telephone access from a single panel or from a networked system.

The No Subscriber Line (NSL) controller does not require an outside telephone service and calls residents directly using the existing building's resident telephone lines. The NSL system uses the TX3-NSL-8M NSL units and TX3-8EC/16 NSL expanders situated in the electrical/telephone rooms.

The Auto Dialer Controller (ADC) uses the existing outside telephone lines to call residents.

Each outside telephone line requires a separate line to the entry control panel.

The following figures depict various TX3 network scenarios.

Note: Install all transformers outside the Lobby Control Unit enclosure.

All wiring is a maximum length of 1000 ft. The RS-485 wiring maximum length is 4000 ft.

All units use the PS-4P transformer for the power supply. The door strike power supply depends on the door strike power requirements.

3.2 Single Lobby Control Unit

Figure 15 shows the simplest configuration.

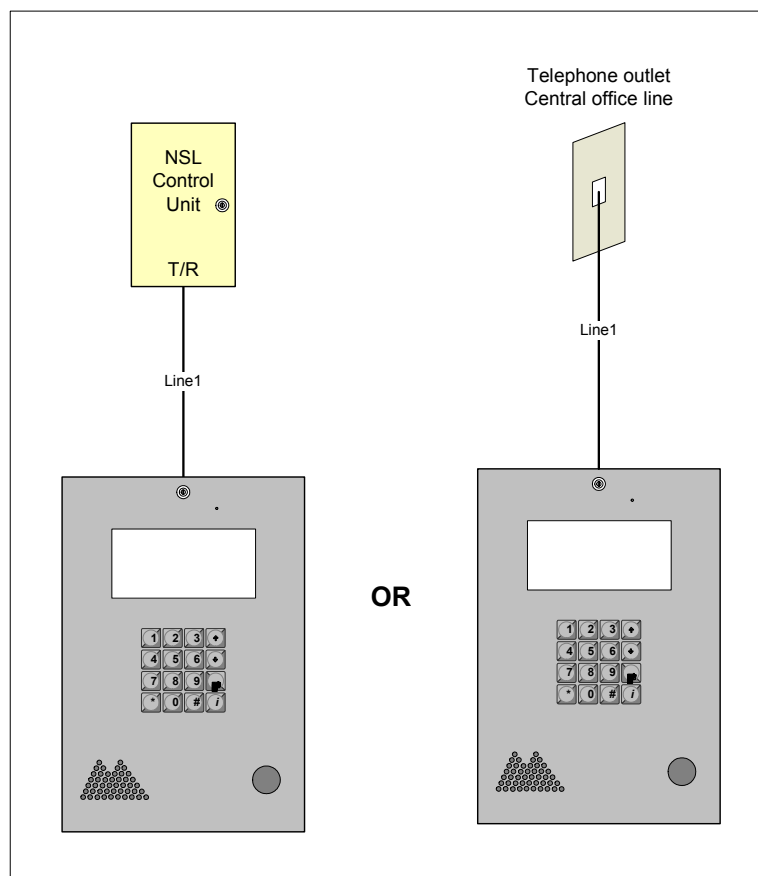


Figure 15. Single Lobby Control Unit

Figure 16 shows a configuration using one Lobby Control Unit connected to one ADC line and four NSL lines.

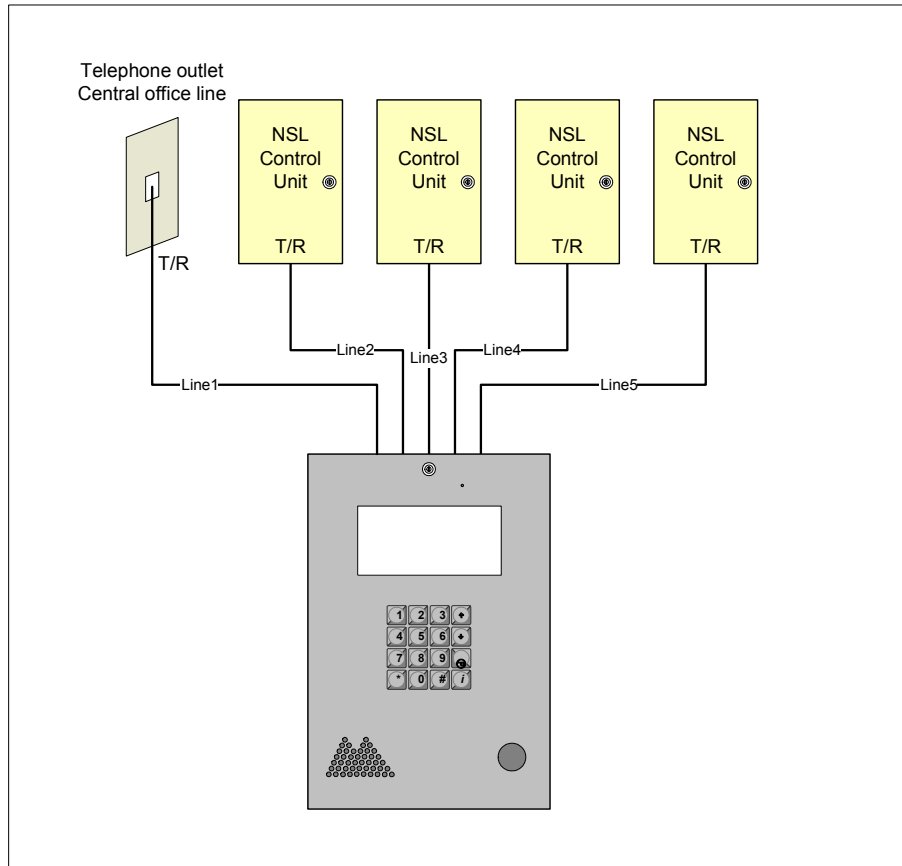


Figure 16. Single Lobby Control Unit with ADC and NSL Lines

Figure 17 shows the various inputs to the panels.

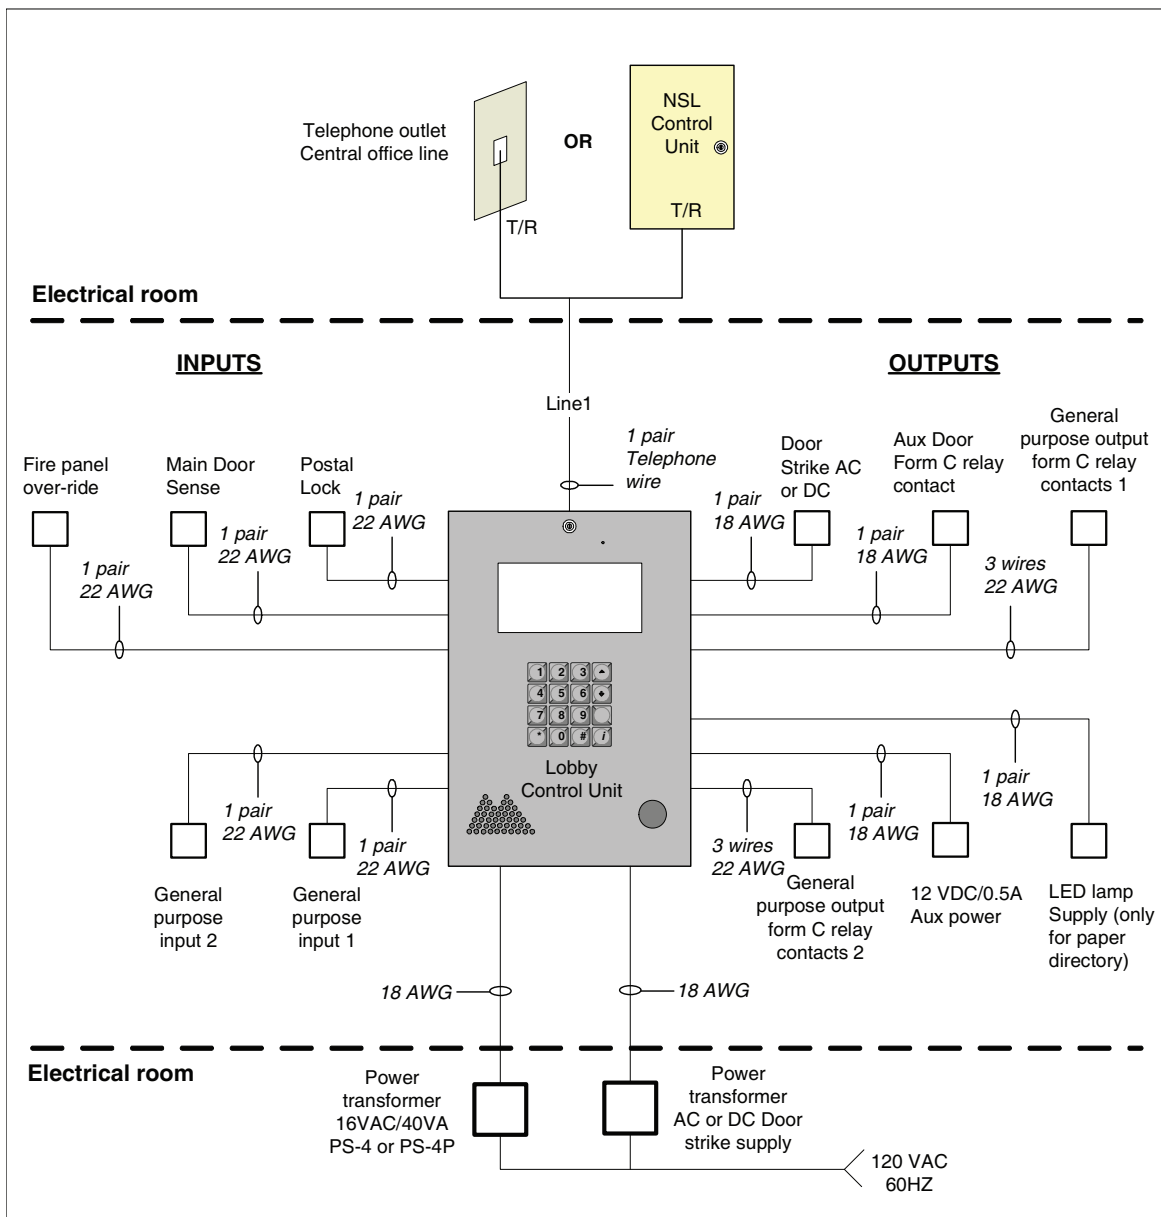


Figure 17. Single Entrance System Wiring

3.3 Dual Lobby Control Units

Figure 18 shows a dual entry application for either an NSL type or ADC connection type. The phone line from either the NSL control unit or an ADC dedicated phone line is shared by both Lobby Control Units.

The Lobby Control Unit senses whether the line is in use. If one of the Lobby Control Units is in use and the user tries to make a call, the other lobby indicates that the line is in use.

The RS-485 network connection is optional and is only required if the user decides to connect a PC configurator on one of the panels to configure and/or monitor both systems.

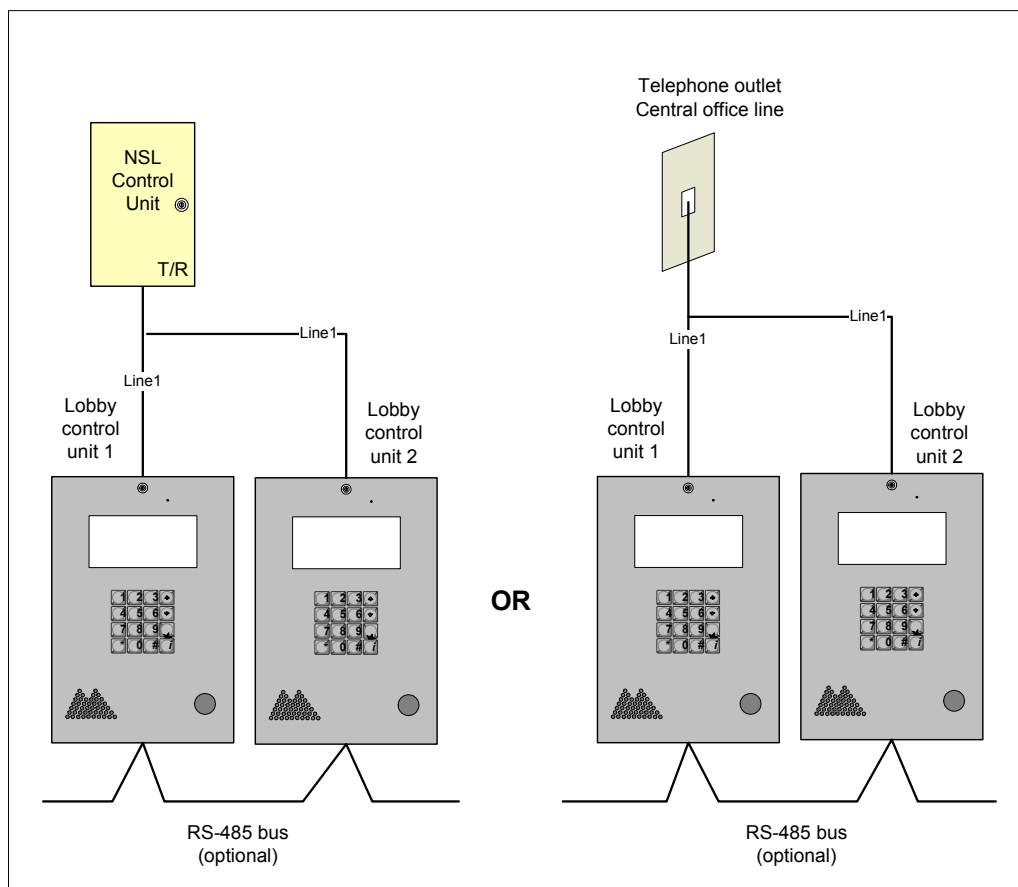


Figure 18. Dual Lobby Control Units

3.4 Three Lobby Control Unit Configuration

Figure 19 shows a configuration with many Lobby Control Units connected to many phone lines using combined ADC and NSL connection types. Line 1 and Line 2 connect to NSL Control Units while Line 3 connects to a dedicated phone line.

Lobby Control Units 1, 2 and 3 can make simultaneous calls as long as a line is not in use by another Lobby Control Unit. For example, if Lobby Control Unit 1 uses line1, Lobby Control Unit 2 can use Line 2 and Lobby Control Unit 3 can use line 3.

When Lobby Control Unit 1 is using line 1 and Lobby Control Unit 2 also wants to use line 1, which is busy, then a line busy message displays on Lobby Control Unit 2.

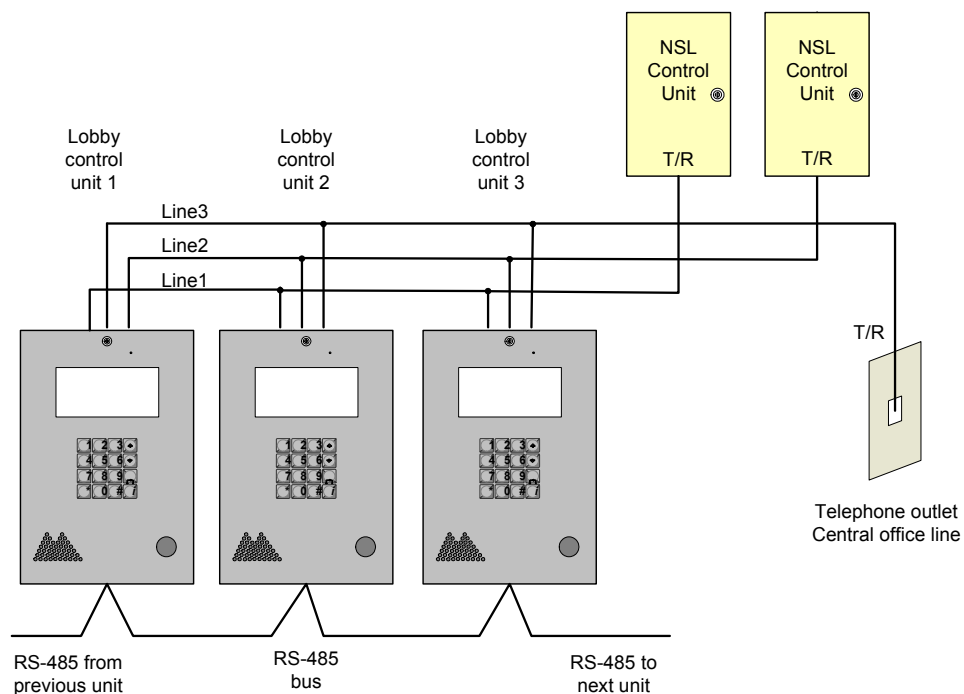


Figure 19. Multiple Lobby Control Units to Multiple Lines

3.5 Multiple Lobby Control Units

Figure 20 shows a configuration of many Lobby Control Units to one phone line. The phone can be either a dedicated phone line from the phone company or an NSL phone line from the NSL Control Unit.

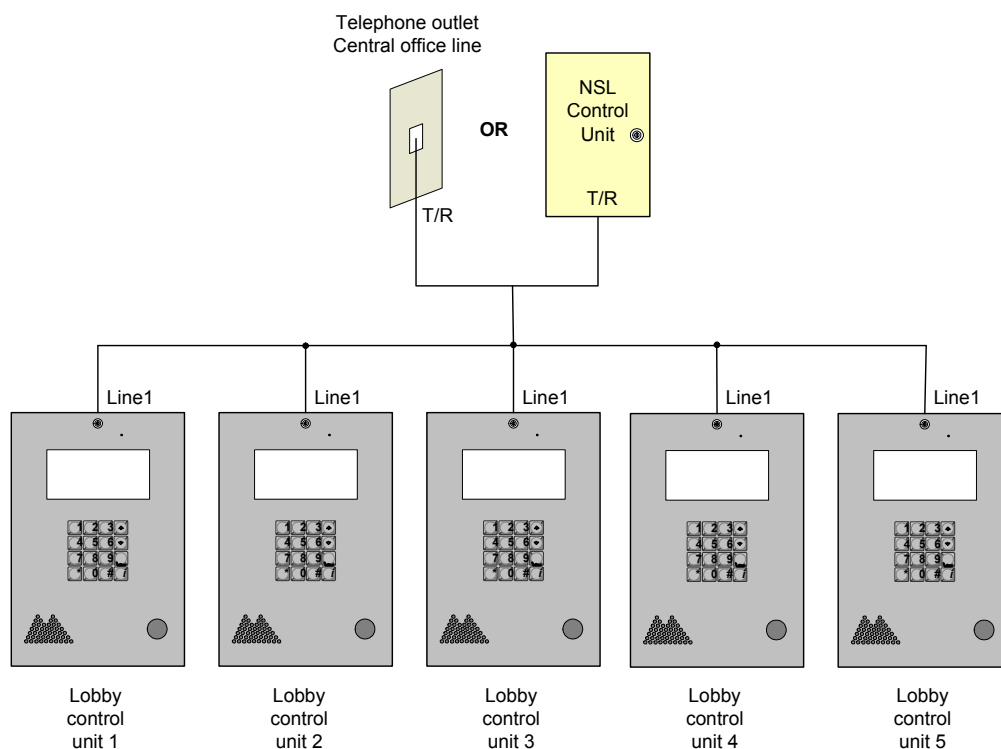


Figure 20. Many Lobby Control Units to One Line

3.6 Networking TX3 Panels

Mircom devices such as the Lobby Control Unit, the Card Access Controller, and the Touch Screen can be networked with the TX3 system through a peer-to-peer RS-485 network, an ethernet TCP/IP network, or a combination of ethernet and RS-485 networks.

The TX3 Configurator software can connect to any of these network configurations. How you connect to the network (that is, through TCP/IP, USB, a modem, or the COM port) determines what devices you can configure on the network using the TX3 Configurator. The different network configurations are explained in the rest of this section.

Figure 21 shows a configuration with TX3 controllers connected on an RS-485 network. Each controller has to have a unique network address on the RS-485 network. Up to 63 unique network addresses can be assigned. If you connect to any device on the RS-485 network (using USB, a modem, or the COM port), you can also connect to and configure any other device on the RS-485 network using the TX3 Configurator.

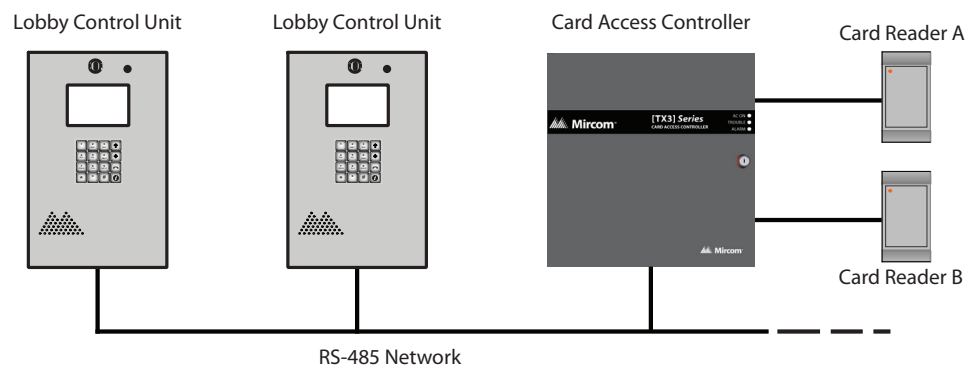


Figure 21. TX3 devices on an RS-485 network.

Figure 22 shows a configuration with TX3 devices connected to an ethernet TCP/IP network. This configuration removes the 63 device limitation that you have on an RS-485 network. The devices connected to an ethernet TCP/IP network are called Master Nodes. If you connect to the TCP/IP network with the TX3 Configurator, you can connect to and configure any of the Master Nodes on the

ethernet TCP/IP network. If you connect directly to one of the Master Nodes using USB, a modem, or a COM port, you will be able to configure that device but not any other device.

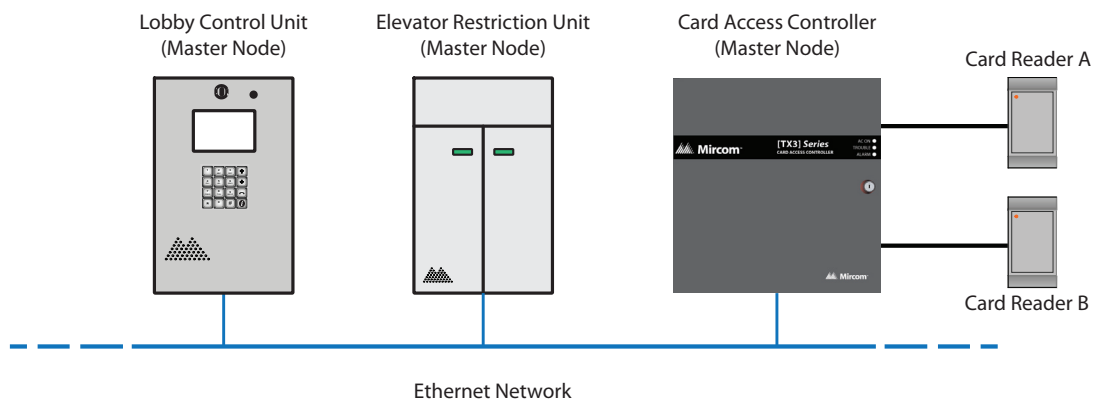


Figure 22. TX3 devices on an ethernet TCP/IP network.

-
- Notes:** In order for a panel to be a Master Node it must satisfy the following conditions.
- It must be IP capable. Panels that are IP capable are usually denoted by a “-A” at the end of their model names.
 - If the panel is not a Touch Screen, it must have a TX3-IP IP Module installed.
-

Figure 23 shows a configuration with TX3 devices connected on both an ethernet TCP/IP network and on RS-485 subnetworks. Devices connected to a Master Node's RS-485 subnetwork are Slave Nodes to the Master Node. Each RS-485 subnetwork can have up to 63 devices connected to it; you can still have more than 63 Master Nodes connected to the ethernet network.

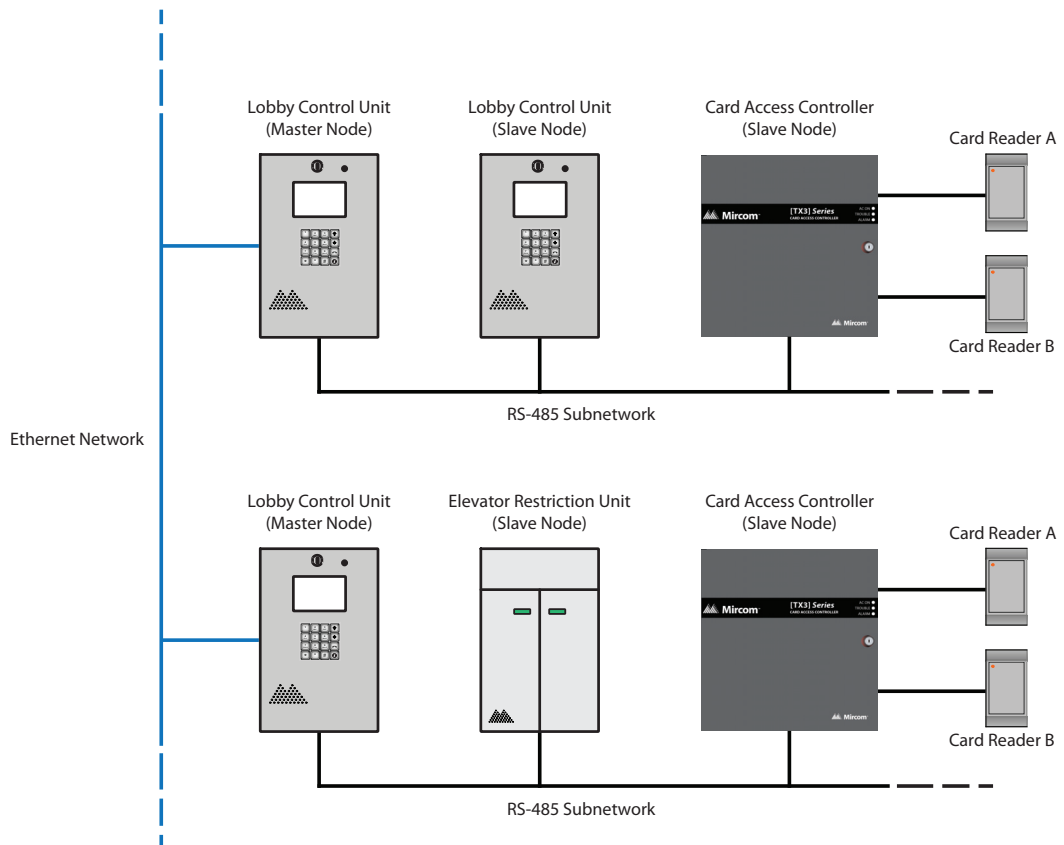


Figure 23. Lobby control units using both ethernet and RS-485 networks

If you connect to the ethernet TCP/IP network with the TX3 Configurator, you can configure any of the nodes in this configuration. If you connect directly to a device using USB, a modem, or a COM port, you will only be able to configure devices that are on the same RS-485 subnetwork as that device.

Note: There can only be **one** Master Node on an RS-485 subnetwork. That is, you cannot connect one RS-485 subnetwork to another RS-485 subnetwork.

3.7 Lobby Control Unit Wiring

All units use the PS-4P transformer for the power supply. All wiring is a maximum length of 1000 ft. The door strike power supply depends on the door strike power requirements.

Figure 24 shows a typical wiring arrangement for the Lobby Control Unit.

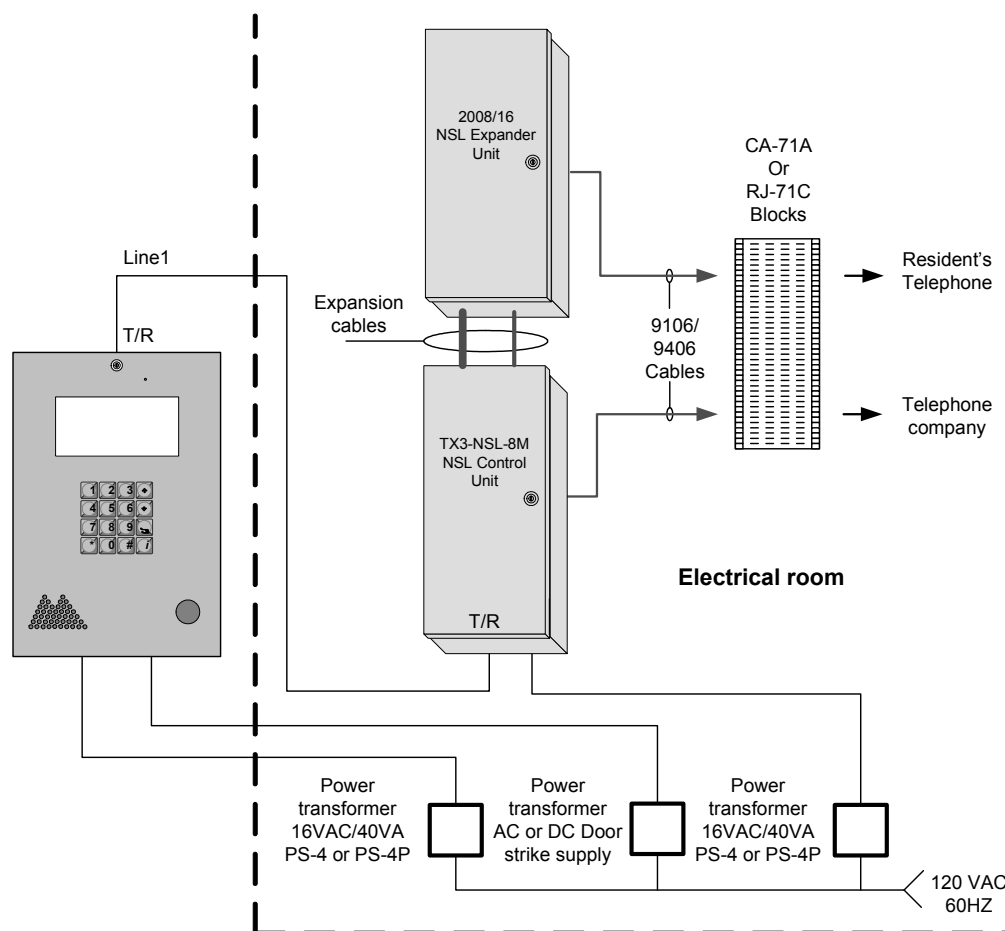


Figure 24. Lobby Control Unit Wiring

Note: Install all transformers outside the Lobby Control Unit enclosure.

4 Lobby Control Unit Setup

This chapter describes the Lobby Control Unit controller board components and provides information about its operation and setup

This chapter explains

- Lobby Control Unit controller board
- Lobby Control Unit Setup
- PC Configuration of the Controller
- Firmware Update

4.1 Controller Board

Figure 25 shows the general layout of the Lobby Control Unit main controller board. See Figure 26 and Figure 30 for a detailed description of the connectors at the bottom and top of the controller board.

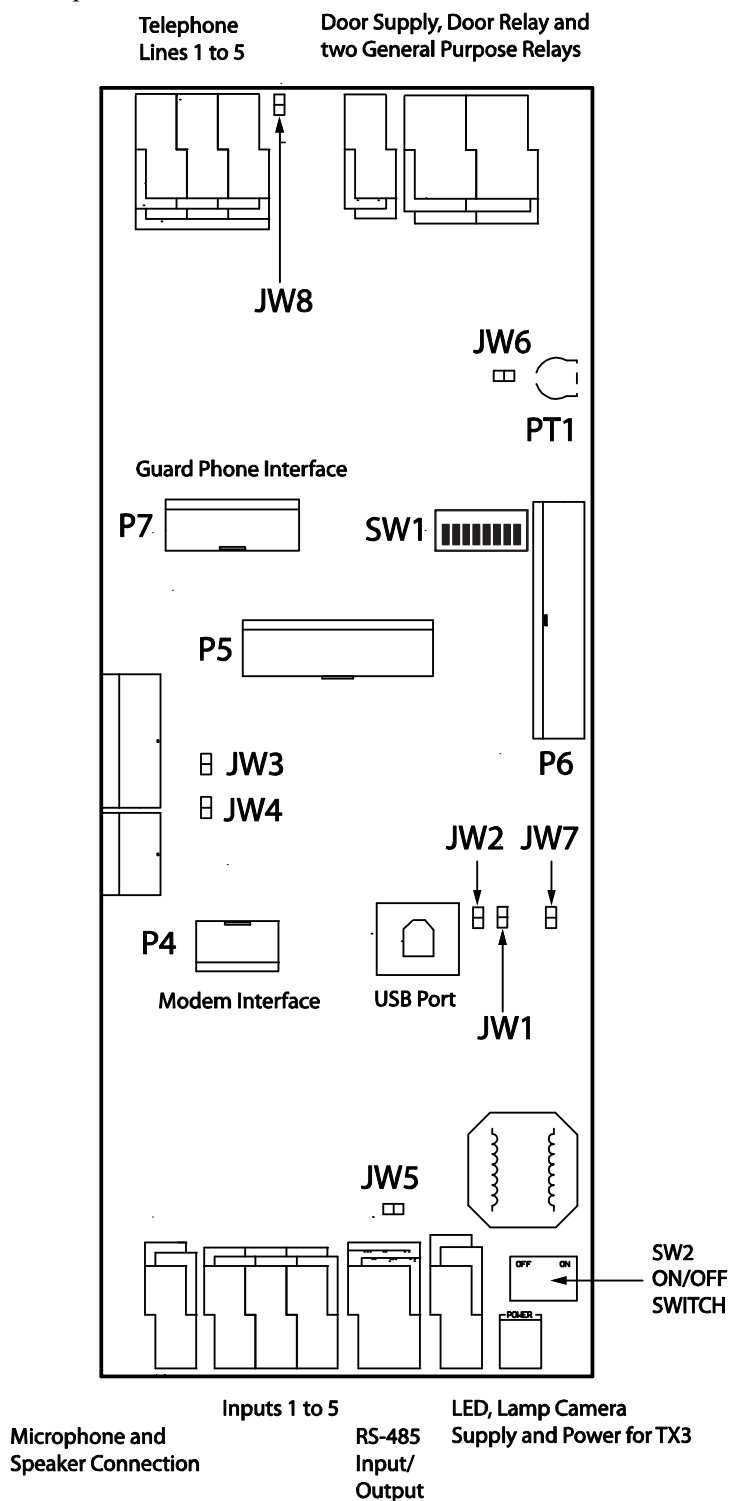


Figure 25. Lobby Control Unit Main Controller Board

4.1.1 Connectors

USB. Computer connection for firmware download and configuration.

P4. TX3-MDM Modem Board connector.

P5. MD-921 IP Module Board connector.

P6. Key pad and front door LCD display.

P7. Guard Phone Board connector.

4.1.2 Potentiometer

PT1. Pulse phone potentiometer. This potentiometer is normally factory set and does not require adjustment.

4.1.3 Switches

SW1. SW1 sets the unit's RS-485 ID (node address) and the IP addressing mode.

SW2. SW2 turns the unit's power ON and OFF for servicing, or to re-start the unit.

4.1.4 Jumpers

JW1. JW1 is used for updating firmware and is normally open.

JW2. JW2 is used for updating firmware and is normally open.

JW3. JW3 is not used and is left open.

JW4. JW4 is not used and is left open.

JW5. JW5 is not used and is left open.

JW6. JW6 is left closed.

JW7. JW7 is not used and is left open.

JW8. JW8 defines the operating state of the door strike relay as normally open or normally closed. A jumper wire connects to either the normally open (position 2 - top) or normally closed pin (position 1 - bottom).

4.2 Controller Board Connectors - Bottom

Figure 26 shows the connectors at the bottom of the controller board.

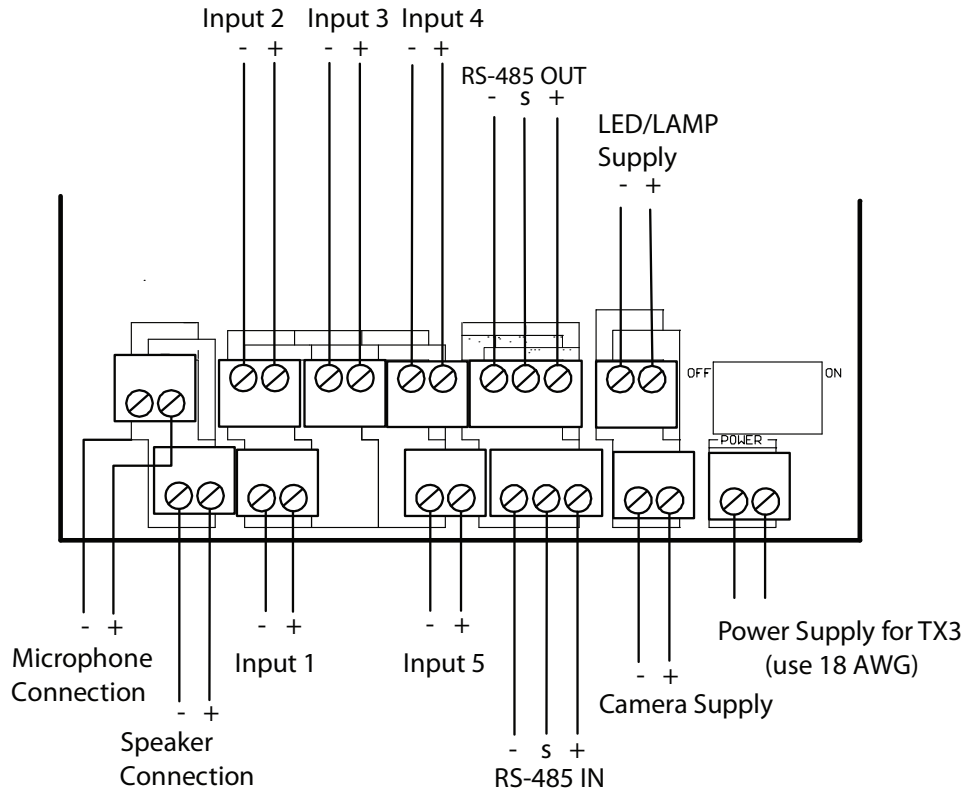


Figure 26. Controller Board Connectors - Bottom

4.2.1 Microphone Connection

The microphone connection is situated at the bottom left of the main controller board. It connects to the front display and is factory set.

4.2.2 Speaker Connection

The speaker connection is situated at the bottom left of the main controller board. It connects to the front display and is factory set.

4.2.3 Inputs 1 to 5

Inputs 1 to 5 are situated at the bottom of the main controller board and are assigned specific functions. Inputs 1 to 3 have pre-defined functions and connect to specific devices. Inputs 4 and 5 are general purpose inputs that can be correlated to activate a general purpose output.

Inputs 1 to 5 are designated as follows (see Figure 26):

Input 1. Postal Lock. Input 1 connects to the Postal Lock. Activation of this input unlocks the main door and starts the main door timer. The door locks when the timer expires or when the door sense input is activated. Daily usage is set as unlimited or limited. When set as limited daily usage is set according to a pre-defined number. Any attempt to use the postal lock beyond a set daily limit causes a warning message to appear and the system to return to normal operation. Input 1 also, when configured, activates a general purpose output to perform any required function.

Input 2. Fire Panel. Input 2 connects to the fire alarm panel and receives fire notification. Activation of this input unlocks the main and auxiliary doors. These outputs are active as long as the fire panel input is active. Input 2 also, when configured, activates a general purpose output to perform any required function.

Input 3. Main Door Sense. Input 3 connects to the door sense switch. Unlocking the main door activates the main door open timer. Activation of the Main Door Sense locks the main door and resets the main door open timer. This function is typically used to prevent ‘tailgating’. Input 3 also, when configured, activates a general purpose output to perform any required function.

Input 4. General Purpose. Input 4 is a general purpose input that, when configured, activates a general purpose output to perform any required function. An example of a typical application is the use of an optional tamper switch (see Figure 27).

Input 5. General Purpose. Input 5 is a general purpose input that, when configured, activates a general purpose output to perform any required function.

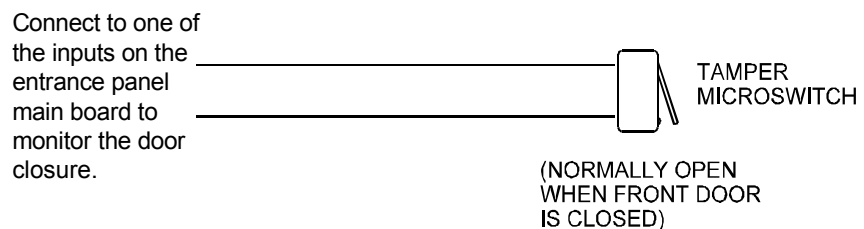


Figure 27. Tamper Switch

4.2.4 RS-485

An RS-485 terminal lets you easily connect multiple telephone, card access and elevator restriction controllers across a network. The RS-485 connection is situated at the bottom middle of the main controller board and consists of two separate terminals, each for an input and output. See Figure 28.

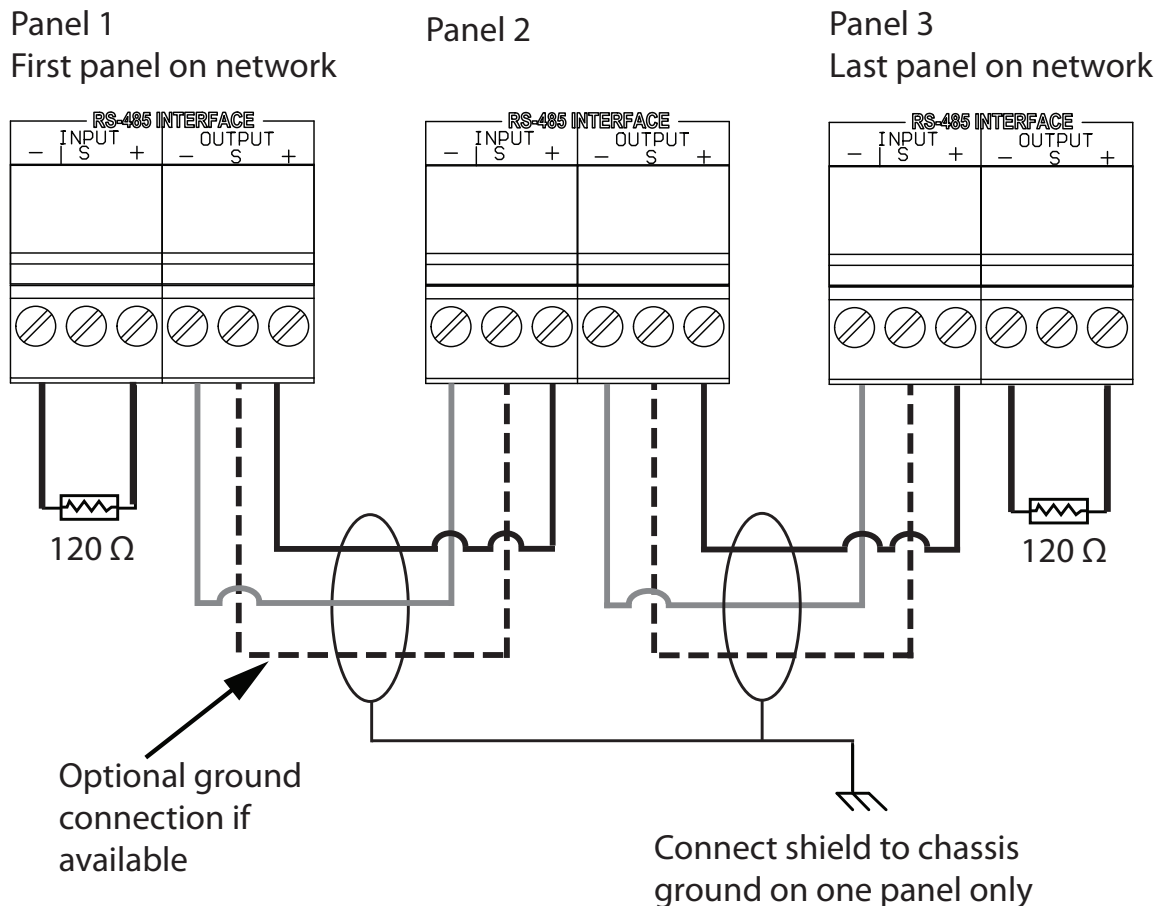


Figure 28. RS-485 Connections

4.2.5 Auxiliary Camera Supply

The camera supply connection is situated at the bottom right of the main controller board and provides + 12 Vdc, 600 mA. The camera is controlled by one of the general outputs. The camera's positive terminal connects to the normally open (NO) general output relay contact. The common (C) contact of the general output relay connects to the + 12 Vdc supply terminal. The camera is typically configured to operate when the main door is open.

4.2.6 LED/Lamp Supply

The LED/Lamp connection is situated at the bottom right of the main controller board. This lamp is used with the paper directory models to illuminate the paper directory.

4.2.7 Power Supply

The power supply connection is situated at the bottom right of the main controller board and receives 16 Vac, 40 VA. An external PS-4 or PS-4P plug-in transformer connects to the power terminals. Refer to Figure 26 and Figure 29.

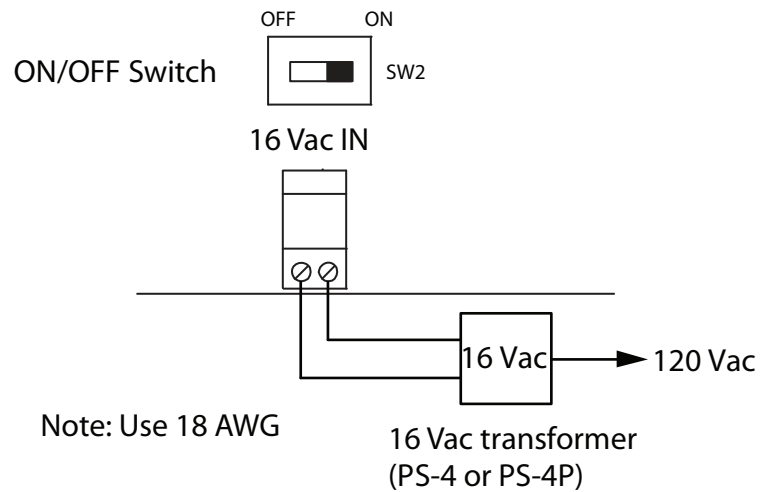


Figure 29. Power Supply

4.3 Controller Board Connectors - Top

Figure 30 shows the connectors at the top of the controller board.

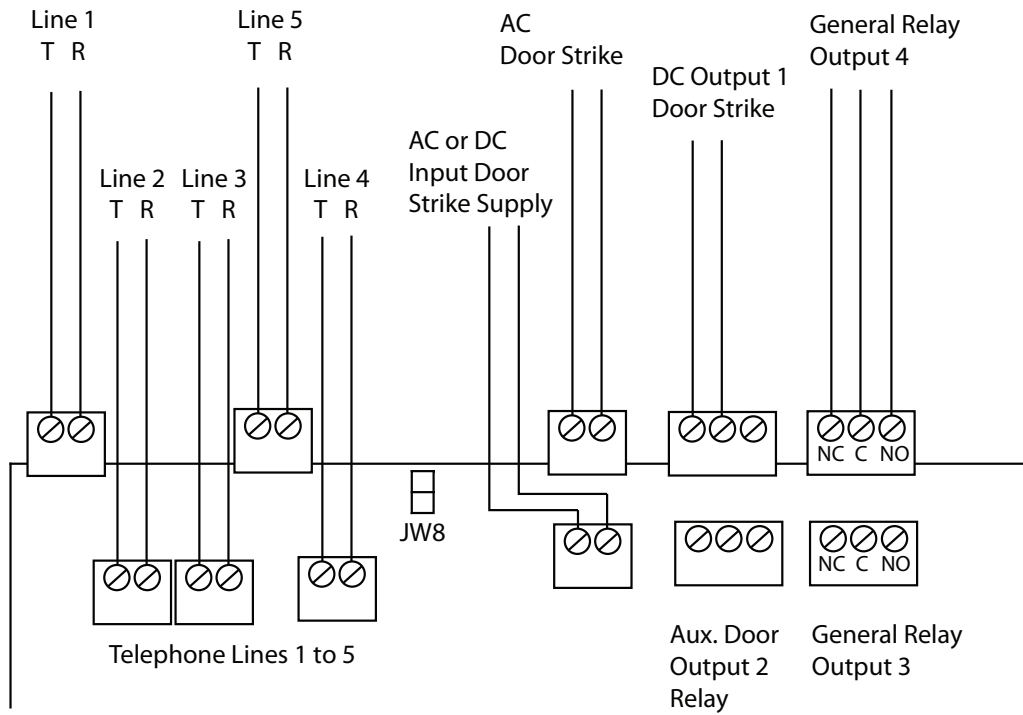


Figure 30. Controller Board Connectors - Top

4.3.1 Telephone Lines 1 to 5

The telephone lines are situated at the top left of the main controller board.

Both NSL and ADC lines can be connected. Each T/R line is polarity insensitive and can be reversed.

Note: Non-configurable PBX systems are not supported. For more information, contact technical support at Mircom.

4.3.2 JW8

JW8 must be set to define the operating state of the door strike relay as normally open or normally closed. Use the jumper wire to connect to either the normally open (position 2 - top) or the normally closed pin (position 1 - bottom). For example, when using a maglock, connect the jumper wire to the normally closed pin (position 1).

4.3.3 AC or DC Input Door Strike Supply

The power for the door strike is customer supplied and provides AC or DC power for one of the door strike outputs.

Note: The controller is able to convert an AC supply to a DC output. The reverse is not true. Consequently, an AC door strike will not work with a DC power supply.

The maximum supply for the AC or DC Input Door Strike is not to exceed:

- 30 Vdc \ 3 amp
- 30 Vac \ 1 amp

4.3.4 AC Output Door Strike

The AC Output Door Strike receives power from the AC Input Door Strike supply. The AC power output remains the same as the power supplied to the AC Input Door Strike.

The AC Output Door Strike is configured for activation by the resident's telephone keypad.

4.3.5 DC Output Door Strike

The DC Output Door Strike receives power from the AC or DC Input Door Strike supply and is configured for activation by the resident's telephone keypad. When using a DC input supply, the DC power output remains the same as the input.

When using a dry contact for the main door instead of a door strike or maglock, wire the external controller to the left hand terminals of the AC Door Supply and Input Door Supply as shown in Figure 31. JW8 controls whether the contact is normally open or normally closed.

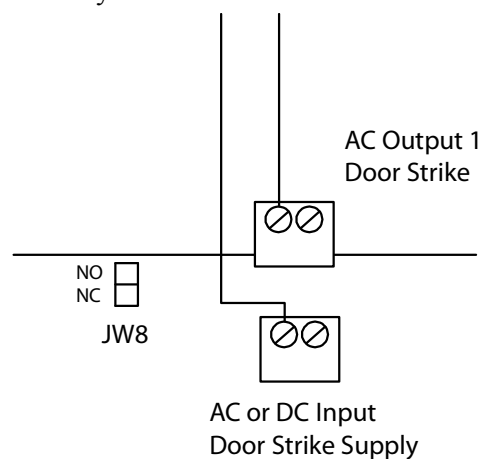


Figure 31. Main Door Dry Contact Wiring

4.3.6 Auxiliary Door Relay

The auxiliary door output is configured for activation by the resident's telephone keypad and can be configured to activate general outputs. This relay is a relay contact programmable output with the same characteristics as a general output relay.

4.3.7 General Output Relays 3 and 4

Outputs 3 and 4 are relay contact programmable outputs with the following characteristics.

- normally open (NO)
- normally closed (NC) available
- 30 Vdc rated, 3 Amperes (NO)
- 30 Vac rated, 5 Amperes (NO)
- 30 Vdc rated, 1 Amperes (NC)
- 30 Vac rated, 2 Amperes (NC)

The general output relays can be correlated to operate for the following events:

- when inputs 1 to 5 are active
- call is started
- call is finished
- call is connected
- access is granted
- access is denied
- system is normal

4.4 Modem Board

Note: The TX3-MDM Modem Module is designed to work only with POTS (plain old telephone system) lines.

The TX3-MDM Modem Module is located above the TX3 Lobby Control Unit controller board on the bottom left hand side. See Figure 25.

The module has two telephone connectors; an RJ-11 connector and a terminal block as shown in Figure 32. The terminal block T/R line is polarity insensitive and can be reversed.

The TX3-MDM ribbon cable connects to the P4 connector on the controller board.

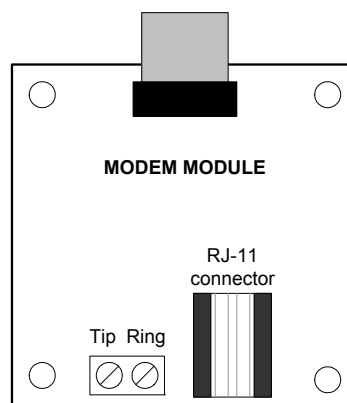


Figure 32. Modem Module Telephone Connectors

For a description on how to install the modem board see the Modem Manual Installation Instructions LT-971.

4.5 MD-921 IP Module

The MD-921 IP Module connects the Lobby Control Unit to an ethernet TCP/IP network. The MD-921 IP Module ribbon cable connects to the P5 connector on the controller board (see Figure 25). This allows you to configure and monitor the TX3 devices on your system using a computer and an ethernet connection.

The IP Module has an RJ-45 connector that connects to the ethernet network using a standard ethernet cable as shown in Figure 33.

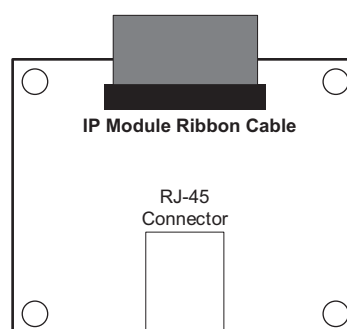


Figure 33. IP Module Data and Ethernet Connectors

For a description on how to install the IP Module, see LT-1161 MD-921 IP Module Installation Instructions.

Note: The MD-921 IP Module can only be installed on models that end with "-A" (for example, TX3-ER-8-A).

4.6 MD-993 Module

The MD-993 Module converts RS-485 signals to USB and is part of the TX3-USB-AD Kit. The MD-993 Module ribbon cable connects to the P4 connector on the controller board. See Figure 25.

The module has an RS-485 connector as shown in Figure 34.

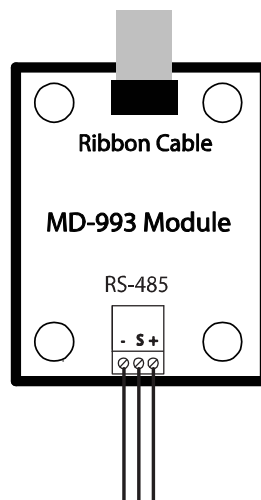


Figure 34. MD-993 Module

For a description on how to install the MD-993 Module see the TX3-USB-AD Kit Installation Instructions LT-6027.

Table 1: MD-993 Jumper Settings

Mode	JW1	JW2
No termination	Open	Open
AC termination 120R + 1nF	Short	Open
No termination	Open	Short
DC termination 120R (Factory Default)	Short	Short

Note: For the main application of the MD-993 JW1 and JW2 should both be shorted.

4.7 Guard Phone Module

The TX3-GPM Guard Phone Module mounts above the TX3 Lobby Control Unit main board on the top left hand side. See Figure 25.

The module has two connectors, an RJ-11 connector and a ribbon cable as shown in Figure 35.

The TX3-GPM ribbon cable connects to the P7 connector on the TX3 Lobby Control Unit main board. The guard phone uses a telephone cable to connect to the RJ-11 connector.

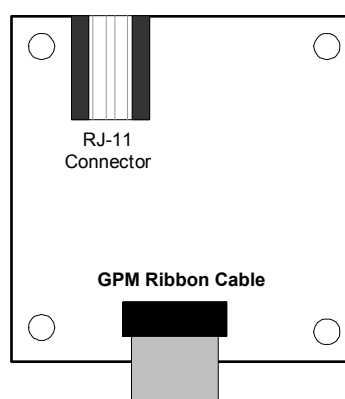


Figure 35. Guard Phone Module

For a description on how to install the modem board see the Guard Phone Manual Installation Instructions LT-972.

4.8 Guard Phone

The Guard phone is an auxiliary phone that plugs into the RJ-11 connector on the Guard Phone Module on the Lobby Control Unit. This phone provides most of the same features as a normal telephone and lets you do the following:

- Place calls to the Lobby Control Unit.
- Receive calls from the Lobby Control Unit.
- Place calls to residents.

To call the Lobby Control Unit phone

1. Pick up the guard phone, wait for the dial tone and dial *9997. The guard phone connects to the Lobby Control Unit.
2. Press the # key on the guard phone. The main door unlocks.

To receive a call from the Lobby Control Unit

1. When a visitor dials 9997 on the Lobby Control Unit the guard phone rings. Pick up the phone. The Lobby Control Unit is now connected to the guard phone.
2. Press the # key on the guard phone. The main door unlocks.

To call a resident from the guard phone

1. Pick up the guard phone and wait for the dial tone.
2. Dial *DDDD (where DDDD is the resident's four digit dial code). The resident phone rings. When the resident picks up the phone, the connection is established.
3. Press the # key on the guard phone. The main door unlocks.

4.9 Controller ID Setup

Use the SW1 DIP switches on the Lobby Control Unit main controller board to set the unit's ID address on the RS-485 network. The individual switches are numbered 1 to 8 from left to right, and are marked as either ON or OFF. The first six switches (1, 2, 3, 4, 5 and 6) set the address ID.

Every TX3 System Lobby Control Unit requires a unique unit ID. The unit ID settings do not need to be in sequence but it is recommended to assign IDs starting from 1, using increments of one (for example, 1, 2, 3, 4, and so on). Unit IDs must not be duplicated.

Note: One of the networked units with a real time clock, such as Touch Screen, Lobby Control or Card Access must have their network address set to 1.

DIP switch SW1 is found at the top central portion of the controller board, see Figure 25.

Table 2 shows the SW1 DIP switch settings for each Lobby Control Unit.

Note: DIP switch 7 is not used and must be left at the default factory setting.

Note: For units with and IP Module installed, DIP Switch 8 determines how the IP address is assigned to the IP Module.

- **DIP Switch 8 OFF:** The IP address is assigned using a DHCP server. This is the default factory setting.
- **DIP switch 8 ON:** The IP address is assigned using the TX3 Configurator software.

Table 2: Lobby Control Unit SW1 DIP Switch Settings

Lobby Control Unit ID #	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
0 (not allowed as a Lobby Control Unit ID 0 is used for PC ID)	OFF	OFF	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF
17	ON	OFF	OFF	OFF	ON	OFF
18	OFF	ON	OFF	OFF	ON	OFF
19	ON	ON	OFF	OFF	ON	OFF
20	OFF	OFF	ON	OFF	ON	OFF
21	ON	OFF	ON	OFF	ON	OFF
22	OFF	ON	ON	OFF	ON	OFF
23	ON	ON	ON	OFF	ON	OFF
24	OFF	OFF	OFF	ON	ON	OFF
25	ON	OFF	OFF	ON	ON	OFF
26	OFF	ON	OFF	ON	ON	OFF

Table 2: Lobby Control Unit SW1 DIP Switch Settings

Lobby Control Unit ID #	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
27	ON	ON	OFF	ON	ON	OFF
28	OFF	OFF	ON	ON	ON	OFF
29	ON	OFF	ON	ON	ON	OFF
30	OFF	ON	ON	ON	ON	OFF
31	ON	ON	ON	ON	ON	OFF
32	OFF	OFF	OFF	OFF	OFF	ON
33	ON	OFF	OFF	OFF	OFF	ON
34	OFF	ON	OFF	OFF	OFF	ON
35	ON	ON	OFF	OFF	OFF	ON
36	OFF	OFF	ON	OFF	OFF	ON
37	ON	OFF	ON	OFF	OFF	ON
38	OFF	ON	ON	OFF	OFF	ON
39	ON	ON	ON	OFF	OFF	ON
40	OFF	OFF	OFF	ON	OFF	ON
41	ON	OFF	OFF	ON	OFF	ON
42	OFF	ON	OFF	ON	OFF	ON
43	ON	ON	OFF	ON	OFF	ON
44	OFF	OFF	ON	ON	OFF	ON
45	ON	OFF	ON	ON	OFF	ON
46	OFF	ON	ON	ON	OFF	ON
47	ON	ON	ON	ON	OFF	ON
48	OFF	OFF	OFF	OFF	ON	ON
49	ON	OFF	OFF	OFF	ON	ON
50	OFF	ON	OFF	OFF	ON	ON
51	ON	ON	OFF	OFF	ON	ON
52	OFF	OFF	ON	OFF	ON	ON
53	ON	OFF	ON	OFF	ON	ON
54	OFF	ON	ON	OFF	ON	ON
55	ON	ON	ON	OFF	ON	ON
56	OFF	OFF	OFF	ON	ON	ON
57	ON	OFF	OFF	ON	ON	ON
58	OFF	ON	OFF	ON	ON	ON
59	ON	ON	OFF	ON	ON	ON
60	OFF	OFF	ON	ON	ON	ON
61	ON	OFF	ON	ON	ON	ON
62	OFF	ON	ON	ON	ON	ON
63	ON	ON	ON	ON	ON	ON

4.10 Configuration Using a PC

In order to correctly utilize the capabilities of the TX3 Telephone Access System you must first plan and establish how you want to configure the system for your application.

The easiest way to configure the Lobby Control Unit is with the Mircom TX3-MSW Configuration Software. This software is provided on a single CD-ROM or USB flash drive.

The PC connects to the Lobby Control unit controller board using one of the following methods:

- USB cable from the PC to the TX3 Main Lobby board
- Ethernet connection (Lobby Control Unit must have an IP Module)
- Modem connection (Lobby Control Unit must have a Modem Module)

The TX3 system is compatible with the following modems:

- TrendNet TFM-560U High Speed USB 2.0 Fax Modem
- TrendNet TFM-561U High Speed USB 2.0 Fax Modem
- Hiro H50113 56K V.92 USB Fax Modem
- StarTech USB56KEM2 56k V.92 USB Fax Modem
- Zoom 56K V.92 56K USB Mini External Fax Modem

Additional modems are currently being tested for compatibility.

The TX3 configuration is set using either the unit's own keypad and display or via the PC Configuration Software.

4.10.1 PC System Requirements

The minimum system requirements are as follows:

- Windows 7 (32 bit)
- Windows XP SP2/ Vista (32 bit)
- 512 MB RAM
- 1 GHZ CPU
- 600M disk space
- 1 USB port

Note: Firmware upgrade is not supported on 64-bit systems.

4.11 Updating Firmware

You can update the firmware on your panel with the TX3 Configurator software by using one of the following methods.

- Firmware Upgrade Wizard
- Network Firmware Upgrade

The Firmware Upgrade Wizard can be used to update only one panel at a time. It will work on any panel. This method does not work on 64-bit versions of Windows.

The Network Firmware Upgrade procedure can update more than one panel at the same time. In order to use the Network Firmware Upgrade, all of the panels must already have firmware that supports this feature installed on them.

Refer to LT-995, TX3 Configuration and Administrator Manual, for instructions on how to perform both of these firmware upgrade methods. LT-995 can be found on the TX3 Configurator Software installation CD, USB flash drive, or on the Mircom website.

4.11.1 Firmware Version Control

The firmware version number is accessible from the configurator software and changes whenever there is a major, minor or revision update.

The following convention is used whenever there is a major, minor or revision change:

Initial release. Version 1.00.0

Major change. Version 2.00.0

Minor change. Version 2.01.0

Revision changes. Version 2.01.1

4.12 Beginning Configuration

The Lobby Control Unit controller is now ready for configuration using the USB. An optional method is to use the RS-485 or modem connection.

For a complete description of the configuration and on how to establish a connection to the Lobby Control Unit using USB, ethernet, RS-485, or modem, see the following documentation:

- LT-995 Configuration and Administration Guide

- LT-973 TX3 Configurator Quick Start

Verify the following:

- Ensure that the controller and all connected devices and components are fully operational.
- Ensure the controller DIP Switches (SW1) are set with a unique network address.
- Ensure the Configurator software is set with the correct controller network address.
- Ensure that your PC and the Configurator are set with the correct date and time.

To start the configuration

1. Connect the PC to the controller using the USB port.
2. Launch the Configurator and click **Connect**. Once connected the connection icon appears in the Configurator tool bar.
3. Configure the Telephone Access system using the instructions in the Configurator Software Program TX3-MSW or the LT-995 Configuration and Administration Guide.

5

NSL Relay Cabinet Installation and Wiring

This chapter provides information about the NSL Relay Cabinet Installation and Wiring.

This chapter explains

- NSL Control Unit Relay Cabinet Mechanical Installation
- NSL Control Unit and Expanders
- Wiring the TX3-NSL-8M Main Controller Board

5.1 NSL Relay Cabinet Mechanical Installation

The NSL Relay cabinets contain the telephone switching equipment and are typically mounted in the electrical/telephone room of a building.

NSL Relay cabinets are factory assembled in one of the following enclosure sizes:

- TX3-NSL-8M NSL Unit: 27 inch high enclosure
- TX3-8EC NSL Expander: 13 15/16 inch high enclosure
- TX3-16EC NSL Expander: 27 inch high enclosure

The TX3-8EC NSL Expander includes the 13 15/16 inch enclosure. The TX3-NSL-8M Relay Cabinet includes the 27 inch enclosure. The TX3-16EC NSL Expander includes the 27 inch enclosure. See Figure 36 and Table 3.

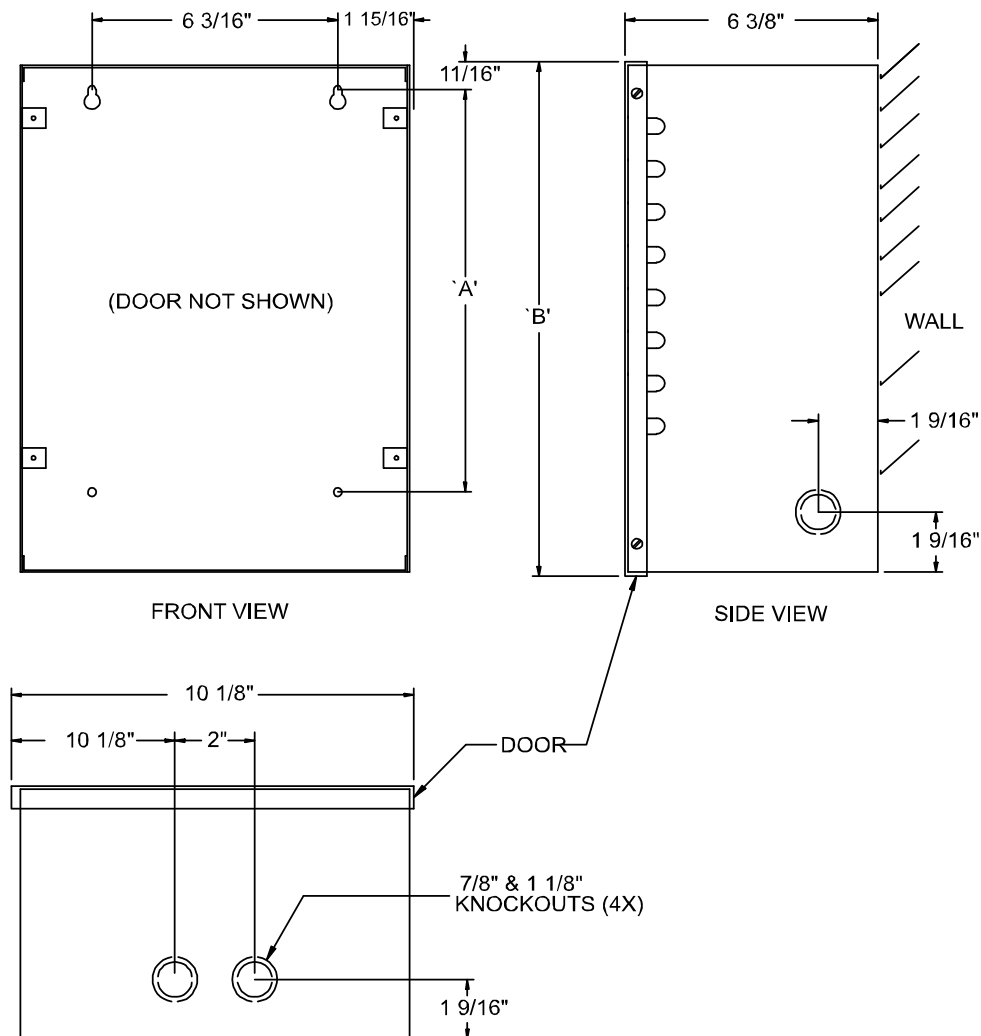


Figure 36. NSL Relay Cabinet

The top two mounting holes are 6 3/16 inches apart.

Table 3: NSL Relay Cabinet Dimensions

Model Number	Dim 'A'	Dim 'B'
TX3-8EC	10 1/8"	13 15/16"
TX3-NSL-8M	23 3/16"	27"
TX3-16EC	23 3/16"	27"

To mount the NSL Relay Cabinet

1. Using the back cover as a template mark the top two mounting hole locations 6 3/16 inches apart as shown in Figure 36.
2. Place the screws halfway into the wall in the position shown using a suitable screw.
3. Hang the box onto the two screws.
4. Screw the other two screws at the bottom of the panel.
5. Tighten all four screws into place.

5.2 NSL Relay Control Unit and Expanders

The TX3-NSL-8M NSL Relay Control Unit, TX3-8EC and TX3-16EC NSL Relay Backplane Expanders perform the following functions:

- Telephone switching functionality to facilitate voice communication between the resident's phone and the lobby
- Generating call waiting tones to the resident if the line is busy.
- Provide access control by the resident using the telephone keypad.
- Low power operation from one 16V AC transformer.

5.2.1 TX3-NSL-8M NSL Control Unit

The TX3-NSL-8M Relay Control Unit consists of:

- NSL Main Controller Board
- NSL Backplane Board

Figure 37 shows a TX3-NSL-8M Relay Control Unit.

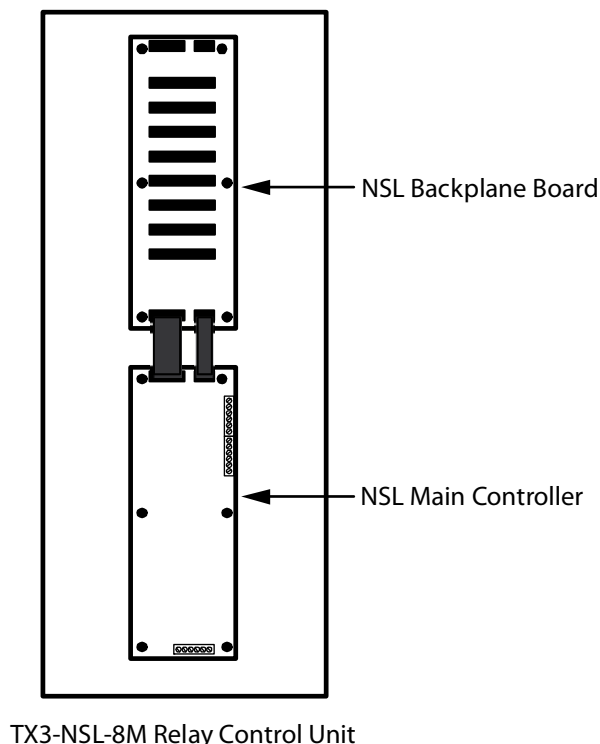


Figure 37. TX3-NSL-8M Relay Control Unit

5.2.2 2012 NSL Relay

The NSL Backplane board contains up to eight 2012 NSL Relay Boards. Each 2012 NSL Relay Board has 12 relays, allowing for a total of 96 relays.

5.2.3 NSL Expanders

NSL expanders plug into the NSL Backplane Board connectors and consist of:

- TX3-8EC NSL Eight Relay Card Backplane Expander
- TX3-16EC NSL 16 Relay Card Backplane Expander

Extension cables provide connections between adjacent enclosures using the expansion connectors. See Section 5.3 for a description of the NSL Backplane Board connectors.

The TX3-8EC NSL Eight Relay Backplane Expander and the TX3-16EC NSL 16 Relay Backplane Expander are housed in their own cabinet and can be connected with two cables to provide an additional capacity for 8 or 16 relay boards respectively.

The expanders allow a total of 16 backplanes to be installed, allowing for up to 1535 relays.

Note: The TX3-NSL-8M and any TX3-8EC and/or TX3-16EC must all be adjacent to each other, mounted on the same wall and in the same room.

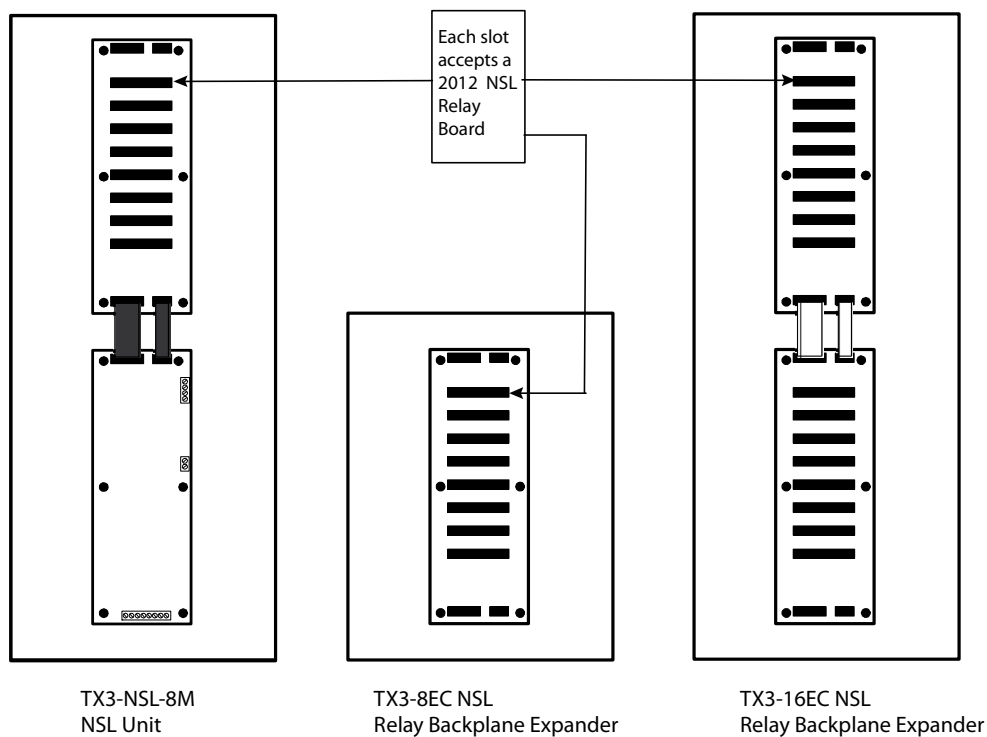


Figure 38. NSL Expanders

5.3 Wiring the TX3-NSL-8M Main Controller Board

The TX3-NSL-8M NSL Main Controller Board has both ribbon cable sockets and screw terminals.

Attention: High voltages are present on this board during the ringing of suite telephones.

Figure 39 shows the general layout of the TX3-NSL-8M Main Controller board components.

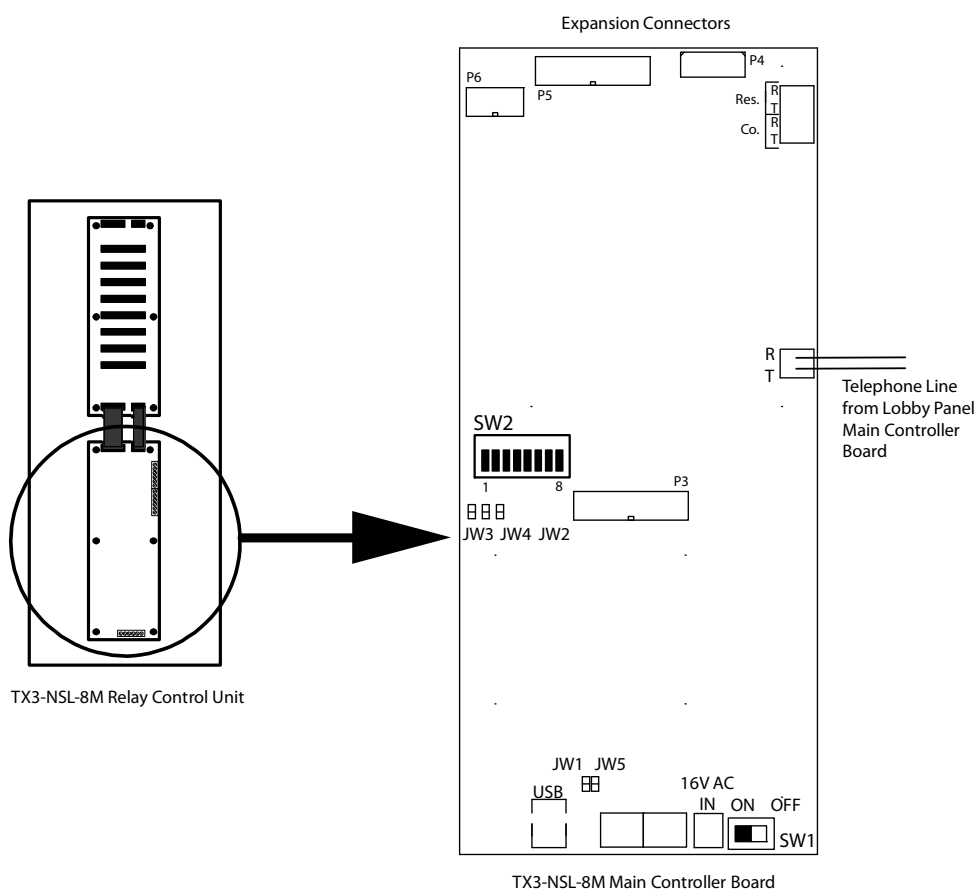


Figure 39. TX3-NSL-8M Main Controller Board

5.3.1 Connectors

USB. Computer connection for firmware download.

P3. Not used.

P4. Expansion to the NSL Controller back-plane.

P5. Expansion to the NSL Controller back-plane.

P6. Not used.

5.3.2 Switches

SW1. Turns the unit's power ON and OFF for servicing, or to re-start the unit.

SW2. Not used.

5.3.3 Jumpers

JW1. JW1 is used for updating firmware and is normally open.

JW2. JW2 is used for updating firmware and is normally open.

All other jumpers are not used.

5.3.4 Telephone Line

Each NSL control unit provides a single telephone line connection to the Lobby Control Unit. See Figure 40 and Figure 41.

Each Lobby Control Unit panel can use any one of the five telephone lines on the Lobby Control Unit Main Controller Board to communicate to an ADC telephone system or to an NSL relay control unit.

There are many possibilities for connecting Entry Control panels and NSL control units, but each main Lobby Control Unit requires one individual telephone line to each NSL control unit.

Lobby Control Units connect to the NSL and control units through telephone lines. Telephone lines are not connected to expansion units.

Expansion relay control units do not require an individual telephone line.

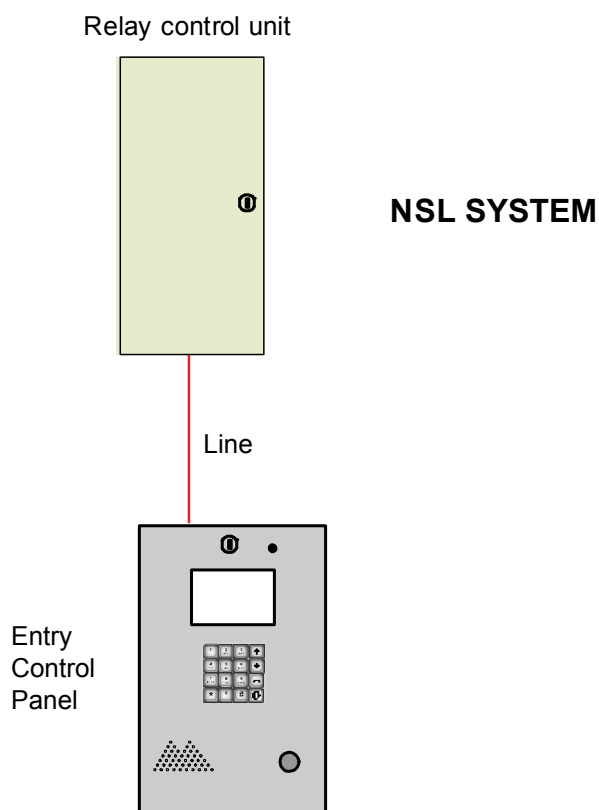


Figure 40. NSL System with Telephone Line

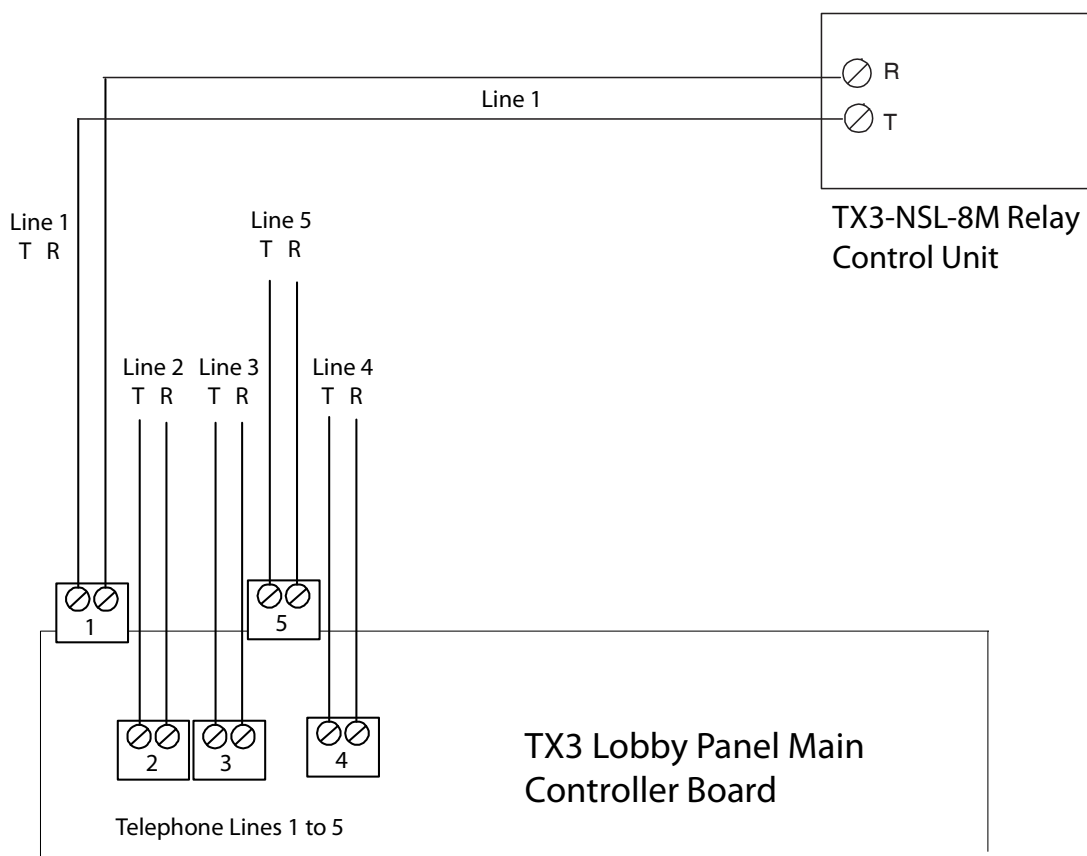


Figure 41. NSL Controller Telephone Lines

To test the TX3-8M-NSL Relay Control unit

1. Connect a telephone to the TX3-8M-NSL Relay Control unit telephone terminal block (see Figure 39).
2. Pick up the telephone. A dial tone is heard.
3. Dial *RRRR#, where RRRR is the relay code. A resident line LED relay card light turns on.
4. Hang up. The resident line LED relay card light turns off. The TX3-8M-NSL Relay Control unit is operational.
5. Perform the same test for all of the relay codes.

Note: Resident telephones associated with the relay card will ring. If the resident picks up their telephone a connection will be established.

6. Disconnect the telephone and proceed with the installation.

5.3.5 Connecting to an NSL line

Use the following calling pattern when connecting to the NSL Panel.

*RRRRPPNNC#

Note: PP and NN and C are optional

where:

RRRR is the relay code.

PP is the ring pattern.

NN is the maximum number of rings.

C is call transfer key.

To connect to an NSL line

1. Dial *RRRRPPNNC#.

5.3.6 TX3-NSL-8M/TX3-8EC/TX3-16EC NSL Unit Relay Backplane Boards

The TX3-NSL-8M / TX3-8EC / TX3-16EC NSL Unit Relay Backplane Boards have both ribbon cable sockets and relay board sockets.

Figure 42 shows the general layout of the TX3-NSL-8M NSL Unit controller board components.

5.3.7 Connectors

Up to 16 NSL backplanes connect to an NSL main controller board. Each has a set of 16 positions for a jumper plug. The first backplane is jumpered for "1", the next for "2", and so on up to "16".

P1. Expansion from the previous controller or the NSL main controller board.

P2. Expansion from the previous controller or the NSL main controller board.

P3 to P10. Connectors for the 2012 NSL Relay Boards. (eight relay boards per backplane.)

P11. Expansion to the next backplane.

P12. Expansion to the next backplane.

NSL Backplane Number Selector. (located between P1 and P2).

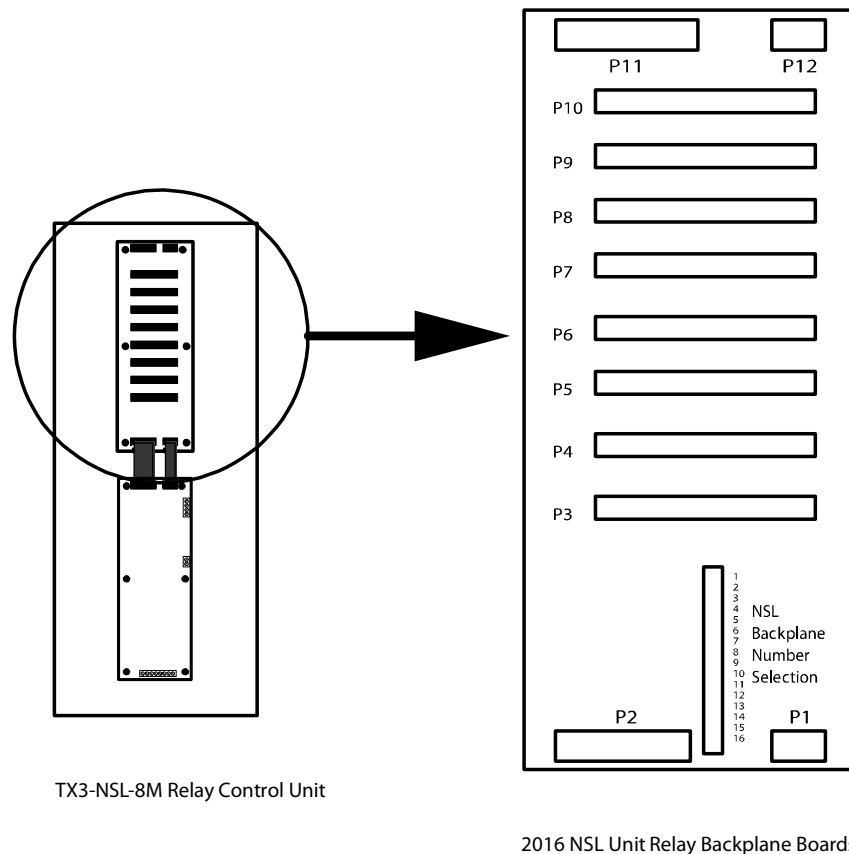


Figure 42. NSL Backplane

Attention: High voltages are present on this board during the ringing of suite telephones.

5.3.8 Using NSL with Phone Lines that Provide DSL Service

If the building's telephone lines provide both DSL (digital subscriber line) and POT (plain old telephone) services then the ADSL-100 filter module is required to filter data signals. This filter module is installed between P4 on the NSL Controller board and P1 on the first Back Plane board that connects to it. Refer to the figure below for details on connecting the ADSL-100 module.

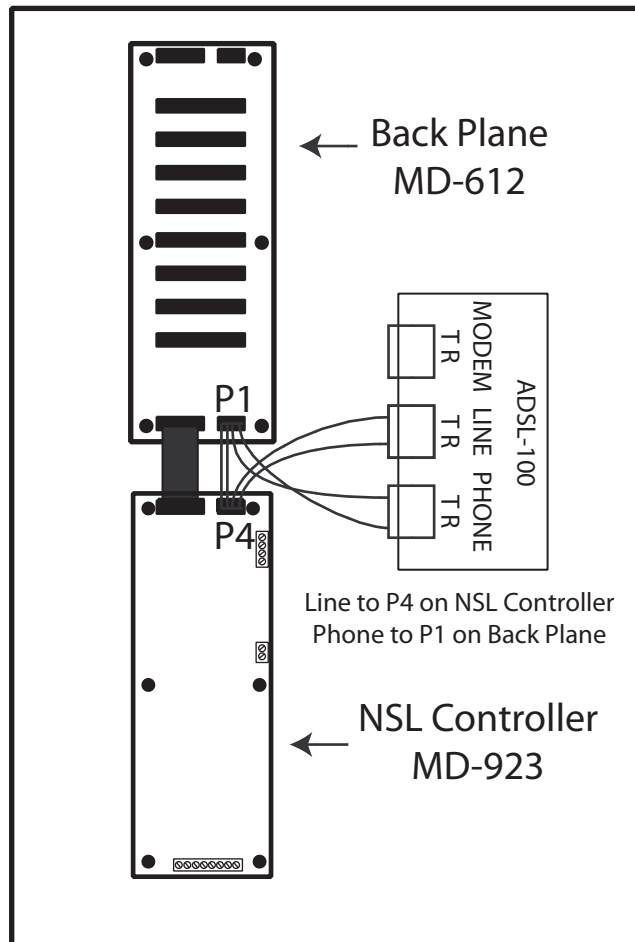


Figure 43. ADSL-100 Filter Module Installation

5.3.9 Setting the Backplane Number

Relay addresses are numbered to show the relay card's connector location and backplane number setting. Table 4 provides sample addresses for the first three backplane number jumper settings.

For example, when the backplane number jumper setting is set to 1, the first relay on P3 relay board has an address of 1. When the backplane number setting is set to 2, the first relay on P3 relay board has an address of 97.

To set the backplane number

1. Determine the relay address according to the relay card's connector location and backplane number setting.
2. Using a jumper, set the backplane number across the Backplane Number Selection pins as shown in Figure 44.

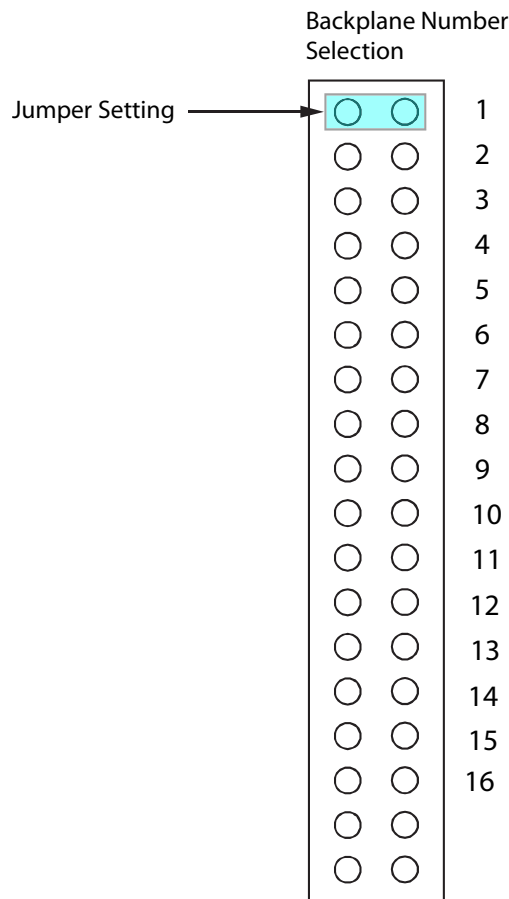


Figure 44. Backplane Number Section

Table 4: Sample Backplane Relay Addresses

Connector	Backplane Number Setting		
	Jumper 1 Address 1-96	Jumper 2 Address 97-192	Jumper 3 Address 193-288
P3	1 to 12	97 to 108	193 to 204
P4	13 to 24	109 to 120	205 to 216
P5	25 to 36	121 to 132	217 to 228
P6	37 to 48	133 to 144	229 to 240
P7	49 to 60	145 to 156	241 to 252
P8	61 to 72	157 to 168	253 to 264
P9	73 to 84	169 to 180	265 to 276
P10	85 to 96	181 to 192	277 to 288

5.3.10 2012 NSL Relay Board Wiring

The 2012 NSL Relay Board plugs into the backplane boards of the NSL units. There may be up to eight relay boards in each backplane board (to a maximum of 128 relay boards for 16 NSL backplane boards).

In each NSL backplane the relay boards are numbered 1 to 8, starting from the bottom of the backplane and going to the top. Each relay board provides 12 resident telephone lines connections, for a maximum of 1536 telephone lines per system.

Connections are made via the CA-71A BIX Block or RJ-71C Punch Down Block Wiring Configuration as follows:

CA-71A BIX Block. The CA-71A (for Canada) wiring configurations of BIX and Punch Down Block are shown in Figure 46 and Table 5.

RJ-71C Punch Down Block. The RJ-71C (for U.S.A.) wiring configurations of BIX and Punch Down Block are shown in Figure 47 and Table 6.

Normally, the required blocks are installed by the telephone company. Each block serves up to 12 telephone lines.

The 50-pin amphenol connector on the BIX block connects to the 2012 relay card using the standard 9106 cable.

To connect the 2012 NSL Relay Board

1. Contact the telephone company at least three weeks before the actual installation to order the required blocks.
2. Complete the CA-71A or RJ-71C Block Identification Forms (Table 5 and Table 6) for the telephone installer. The form shows the telephone installer how the telephone lines connect to the BIX/Punch Down Blocks.
3. Install all BIX Blocks as close as possible to the NSL unit to which they connect.
4. Plug the 2012 NSL Relay Board into the NSL unit's backplane board.
5. Connect the 50-pin amphenol connector on the BIX block to the 2012 relay card using the 9106 cable.
6. Connect the CA-71A BIX Block or RJ-71C Punch Down Block Wiring Configuration.
7. See the warranty section on page 115 and provide the following information to the telephone company:
 - Telephone numbers of the lines to which the TX3 system will be connected.
 - The Industry Canada registration number for Canada or the FCC registration number for U.S.A.
 - The Ringer Equivalence Number (REN) of the TX3 system.

Note: RJ-71C wiring configuration is not recognized by all telephone companies. For Bell Canada who has jurisdiction for Ontario and Quebec, refer to CA-71A block for interconnect to the telephone entry systems.

Note: Since there are two types of block wiring configuration, CA-71A and RJ-71C, Mircom recommends that you contact the telephone company as to what block wiring configuration is available. We suggest using Mircom's standard 9106 cable for CA-71A or RJ-71C configured blocks since they are straightforward and easy to use.

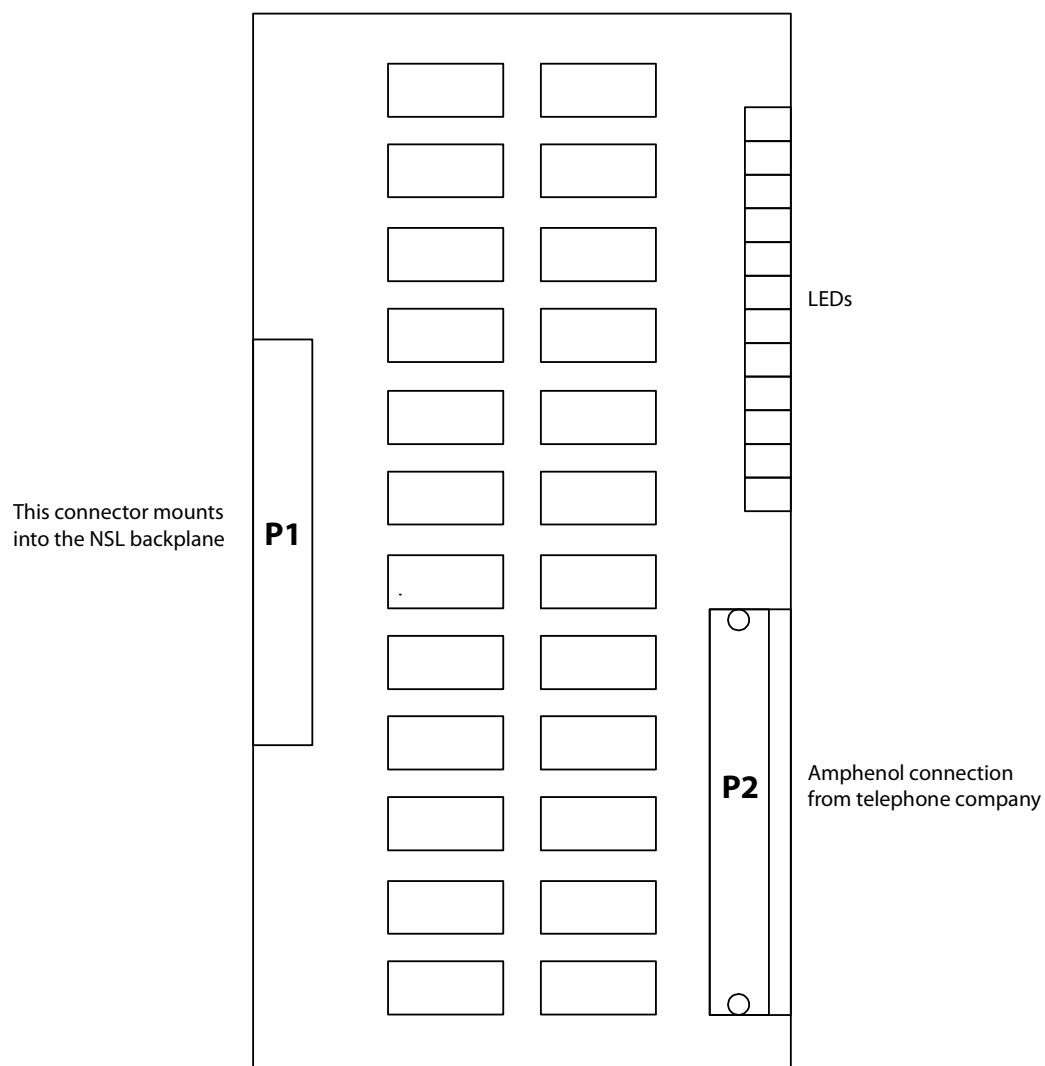


Figure 45. 2012 NSL Relay Board

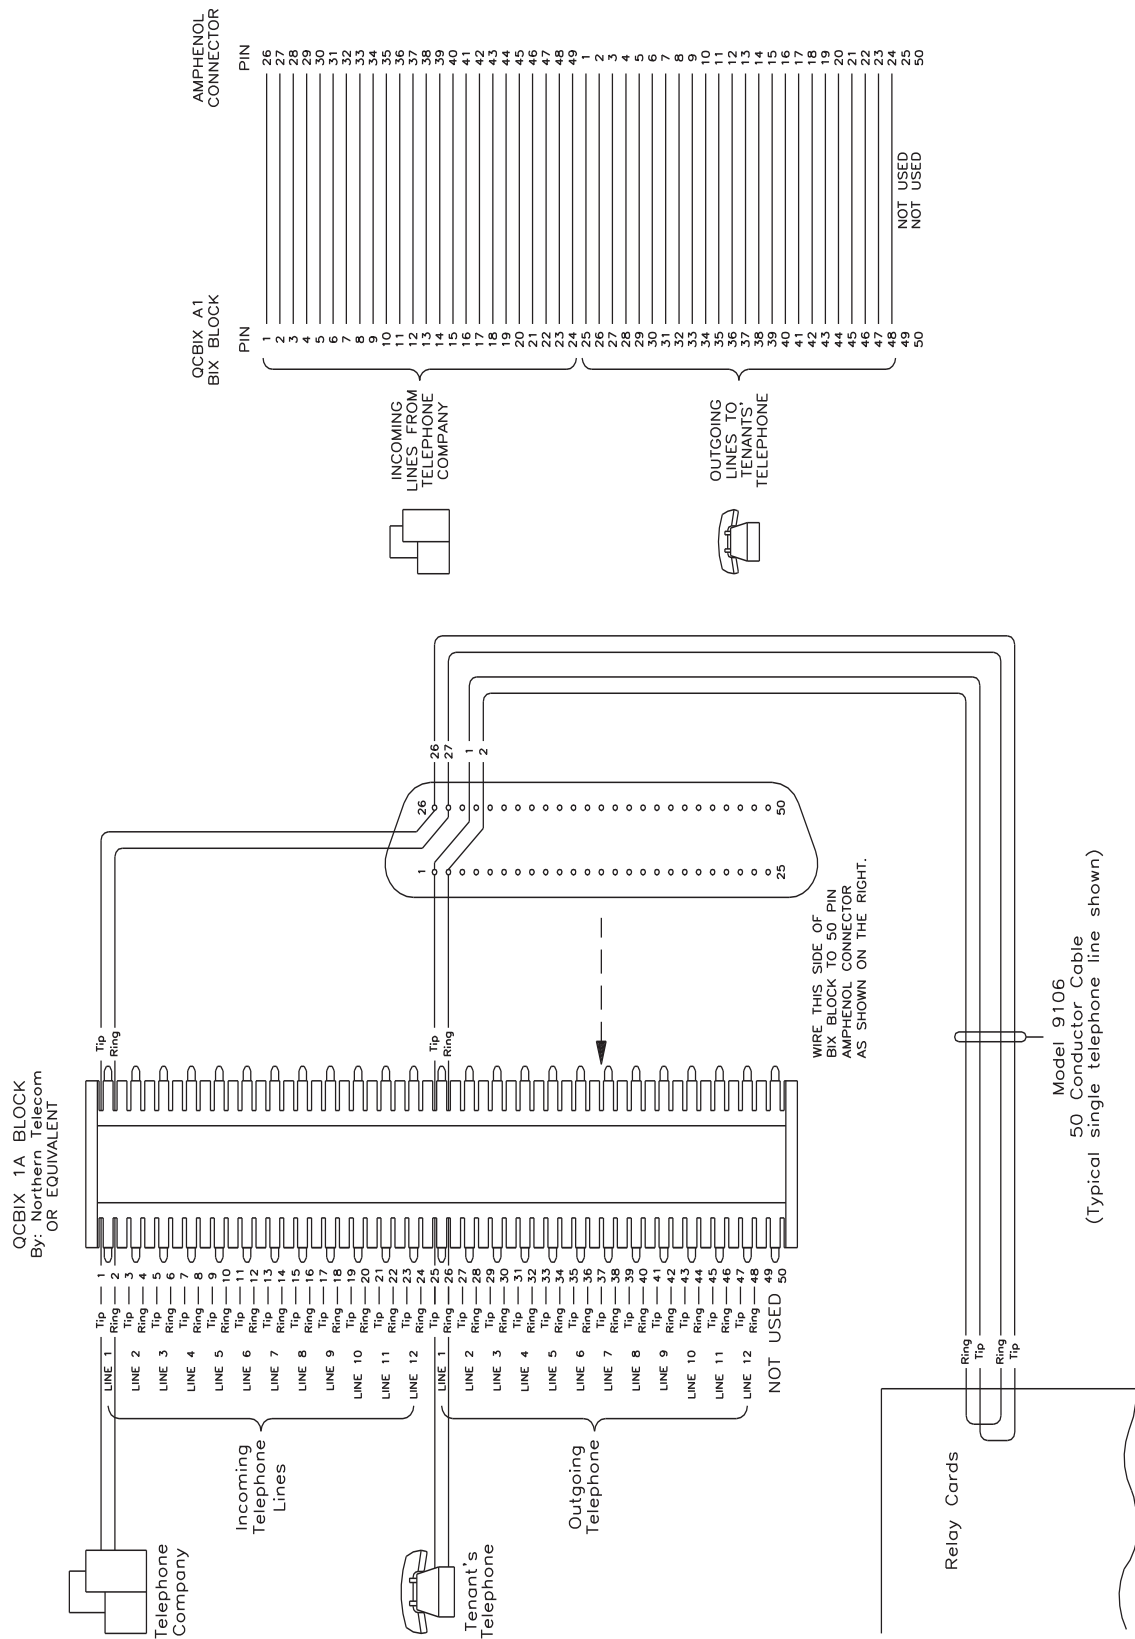


Figure 46. CA-71A BIX Block Wiring Configuration

Table 5: CA-71A BIX Block Identification Form

Relay Cabinet No. _____ of _____ Decoder/Mother Board No. _____

Relay Card/Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res. #	Apt. #	Dial Code	Relay/Relay Line #	Relay Card/Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res. #	Apt. #	Dial Code	Relay/Relay Line #
1		1,2/25,26			0001	5		1,2/25,26			0049
		3,4/27,28			0002			3,4/27,28			0050
		5,6/29,30			0003			5,6/29,30			0051
		7,8/31,32			0004			7,8/31,32			0052
		9,10/33,34			0005			9,10/33,34			0053
		11,12/35,36			0006			11,12/35,36			0054
		13,14/37,38			0007			13,14/37,38			0055
		15,16/39,40			0008			15,16/39,40			0056
		17,18/41,42			0009			17,18/41,42			0057
		19,20/43,44			0010			19,20/43,44			0058
		21,22/45,46			0011			21,22/45,46			0059
		23,24/47,48			0012			23,24/47,48			0060
2		1,2/25,26			0013	6		1,2/25,26			0067
		3,4/27,28			0014			3,4/27,28			0062
		5,6/29,30			0015			5,6/29,30			0063
		7,8/31,32			0016			7,8/31,32			0064
		9,10/33,34			0017			9,10/33,34			0065
		11,12/35,36			0018			11,12/35,36			0066
		13,14/37,38			0019			13,14/37,38			0067
		15,16/39,40			0020			15,16/39,40			0068
		17,18/41,42			0021			17,18/41,42			0069
		19,20/43,44			0022			19,20/43,44			0070
		21,22/45,46			0023			21,22/45,46			0071
		23,24/47,48			0024			23,24/47,48			0072

Table 5: CA-71A BIX Block Identification Form

Relay Cabinet No. _____ of _____ Decoder/Mother Board No. _____

Relay Card/Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res.	Apt. #	Dial Code	Relay/Line #	Relay Card/Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res.	Apt. #	Dial Code	Relay/Line #
3		1,2/25,26			0025	7		1,2/25,26			0073
		3,4/27,28			0026			3,4/27,28			0074
		5,6/29,30			0027			5,6/29,30			0075
		7,8/31,32			0028			7,8/31,32			0076
		9,10/33,34			0029			9,10/33,34			0077
		11,12/35,36			0030			11,12/35,36			0078
		13,14/37,38			0031			13,14/37,38			0079
		15,16/39,40			0032			15,16/39,40			0080
		17,18/41,42			0033			17,18/41,42			0081
		19,20/43,44			0034			19,20/43,44			0082
		21,22/45,46			0035			21,22/45,46			0083
		23,24/47,48			0036			23,24/47,48			0084
4		1,2/25,26			0037	8		1,2/25,26			0085
		3,4/27,28			0038			3,4/27,28			0086
		5,6/29,30			0039			5,6/29,30			0087
		7,8/31,32			0040			7,8/31,32			0088
		9,10/33,34			0041			9,10/33,34			0089
		11,12/35,36			0042			11,12/35,36			0090
		13,14/37,38			0043			13,14/37,38			0091
		15,16/39,40			0044			15,16/39,40			0092
		17,18/41,42			0045			17,18/41,42			0093
		19,20/43,44			0046			19,20/43,44			0094
		21,22/45,46			0047			21,22/45,46			0095
		23,24/47,48			0048			23,24/47,48			0096

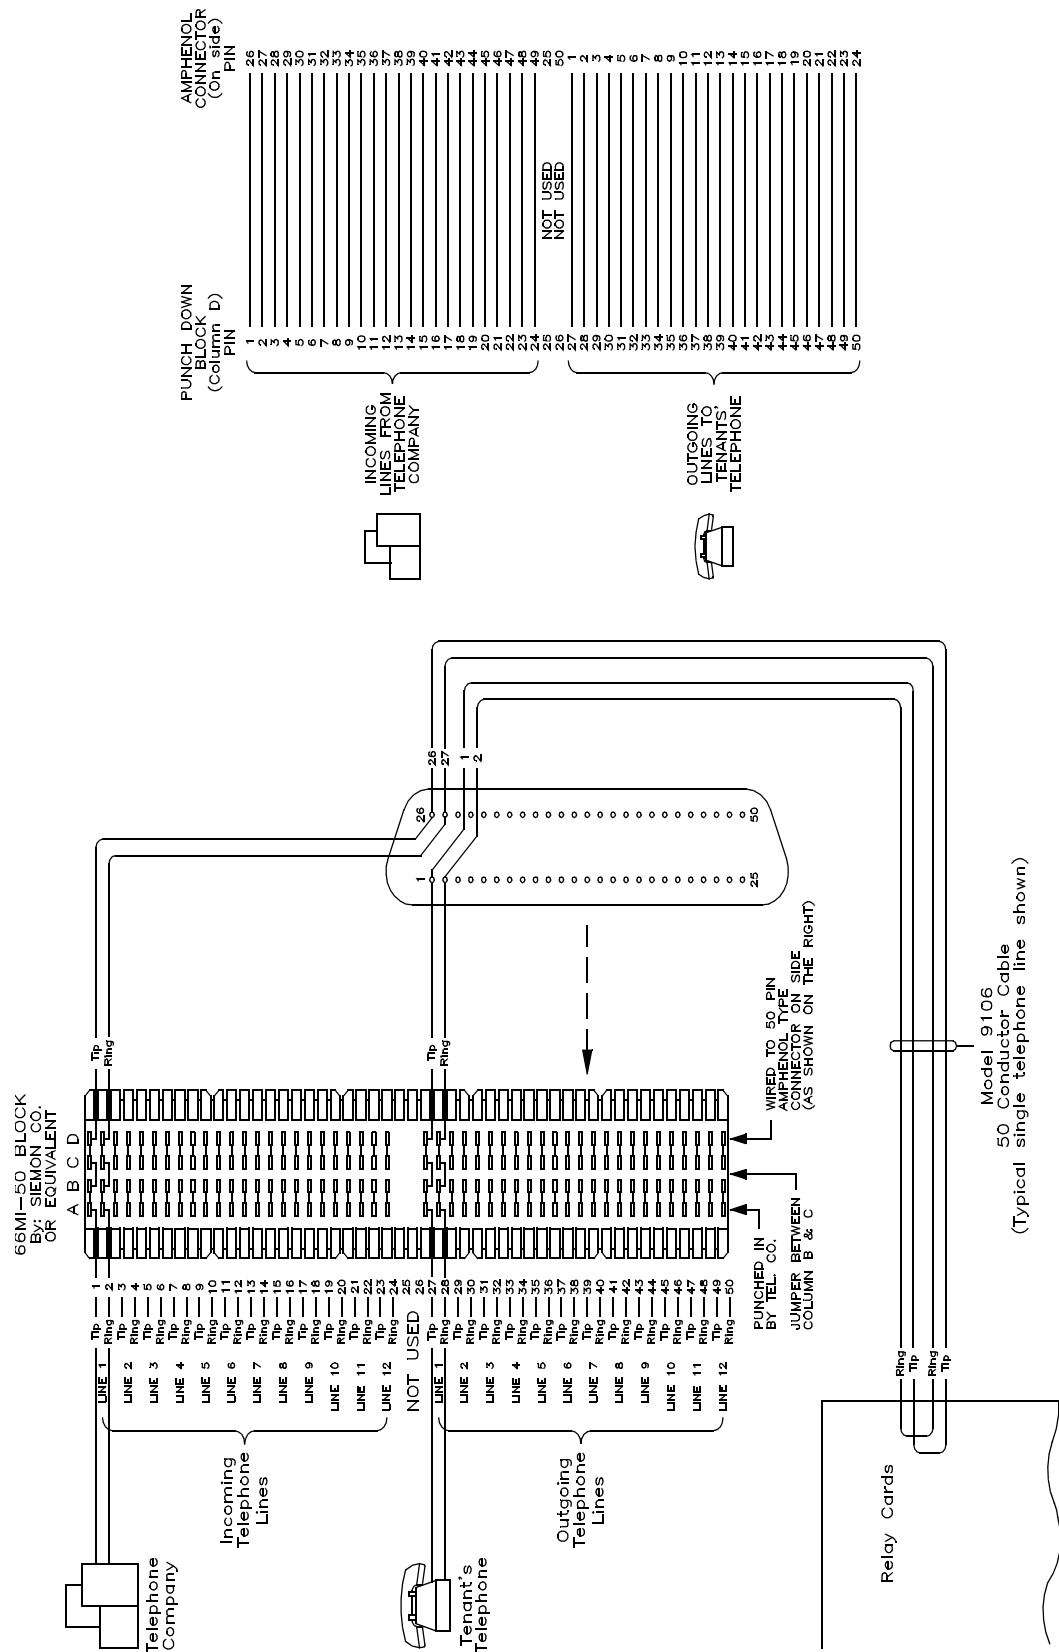


Figure 47. RJ-71C Punch-Down Block Wiring Configuration

Table 6: RJ-71C Punch-Down Block Identification Form

Relay Cabinet No. _____ of _____ Decoder/Mother Board No. _____

Relay Card/ Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res.	Apt. #	Dial Code	Relay/Line #	Relay Card/ Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res.	Apt. #	Dial Code	Relay/Line #
1		1,2/27,28			0001	5		1,2/27,28			0049
		3,4/29,30			0002			3,4/29,30			0050
		5,6/31,32			0003			5,6/31,32			0051
		7,8/33,34			0004			7,8/33,34			0052
		9,10/35,36			0005			9,10/35,36			0053
		11,12/37,38			0006			11,12/37,38			0054
		13,14/39,40			0007			13,14/39,40			0055
		15,16/41,42			0008			15,16/41,42			0056
		17,18/43,44			0009			17,18/43,44			0057
		19,20/45,46			0010			19,20/45,46			0058
		21,22/47,48			0011			21,22/47,48			0059
		23,24/49,50			0012			23,24/49,50			0060
2		1,2/27,28			0013	6		1,2/27,28			0067
		3,4/29,30			0014			3,4/29,30			0062
		5,6/31,32			0015			5,6/31,32			0063
		7,8/33,34			0016			7,8/33,34			0064
		9,10/35,36			0017			9,10/35,36			0065
		11,12/37,38			0018			11,12/37,38			0066
		13,14/39,40			0019			13,14/39,40			0067
		15,16/41,42			0020			15,16/41,42			0068
		17,18/43,44			0021			17,18/43,44			0069
		19,20/45,46			0022			19,20/45,46			0070
		21,22/47,48			0023			21,22/47,48			0071
		23,24/49,50			0024			23,24/49,50			0072

Table 6: RJ-71C Punch-Down Block Identification Form

Relay Cabinet No. ____ of ____ Decoder/Mother Board No. ____

Relay Card/ Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res.	Apt. #	Dial Code	Relay/Line #	Relay Card/ Amp. Jack #	Telephone Number	Block Pins Tel. Co./Res.	Apt. #	Dial Code	Relay/Line #
3		1,2/27,28			0025	7		1,2/27,28			0073
		3,4/29,30			0026			3,4/29,30			0074
		5,6/31,32			0027			5,6/31,32			0075
		7,8/33,34			0028			7,8/33,34			0076
		9,10/35,36			0029			9,10/35,36			0077
		11,12/37,38			0030			11,12/37,38			0078
		13,14/39,40			0031			13,14/39,40			0079
		15,16/41,42			0032			15,16/41,42			0080
		17,18/43,44			0033			17,18/43,44			0081
		19,20/45,46			0034			19,20/45,46			0082
		21,22/47,48			0035			21,22/47,48			0083
		23,24/49,50			0036			23,24/49,50			0084
4		1,2/27,28			0037	8		1,2/27,28			0085
		3,4/29,30			0038			3,4/29,30			0086
		5,6/31,32			0039			5,6/31,32			0087
		7,8/33,34			0040			7,8/33,34			0088
		9,10/35,36			0041			9,10/35,36			0089
		11,12/37,38			0042			11,12/37,38			0090
		13,14/39,40			0043			13,14/39,40			0091
		15,16/41,42			0044			15,16/41,42			0092
		17,18/43,44			0045			17,18/43,44			0093
		19,20/45,46			0046			19,20/45,46			0094
		21,22/47,48			0047			21,22/47,48			0095
		23,24/49,50			0048			23,24/49,50			0096

5.4 Updating Firmware

After completion of the TX3-NSL-8M NSL Main Controller wiring and configuration, use the TX3-MSW Configuration Software to complete the firmware update.

To update firmware

1. Turn the power OFF by using SW1 on the bottom right side of the card access controller board.
2. Short JW1 and JW2 using a jumper.
3. Turn the power ON.
4. Wait for 15 seconds.
5. Turn power OFF and remove jumper JW2.
6. Connect the USB cable to the card access controller board.
7. Turn the power ON.
8. Proceed with the firmware update using the configurator software.
9. When you are finished updating the firmware, turn the power OFF.
10. Unplug the USB cable.
11. Turn the power back ON.

6 Elevator Restriction Unit Installation and Configuration

This chapter provides information about the TX3-ER-8 and TX3-ER-8-A Elevator Restriction Unit models.

This chapter explains

- Elevator Restriction Cabinet Mechanical Installation
- Elevator Restriction Units
- Wiring the Elevator Restriction Unit
- Elevator Restriction Unit Backplane
- 2012E Elevator Restriction Relay Card
- Elevator Restriction Unit Configuration

6.1 Elevator Restriction Cabinet Mechanical Installation

The Elevator Restriction cabinet contains the elevator access equipment and is typically mounted in the electrical/telephone room of a building. The unit is factory assembled in one cabinet size shown below.

The back cover is 10 1/8 inches wide by 27 inches long. The top two mounting holes are 6 3/16 inches apart.

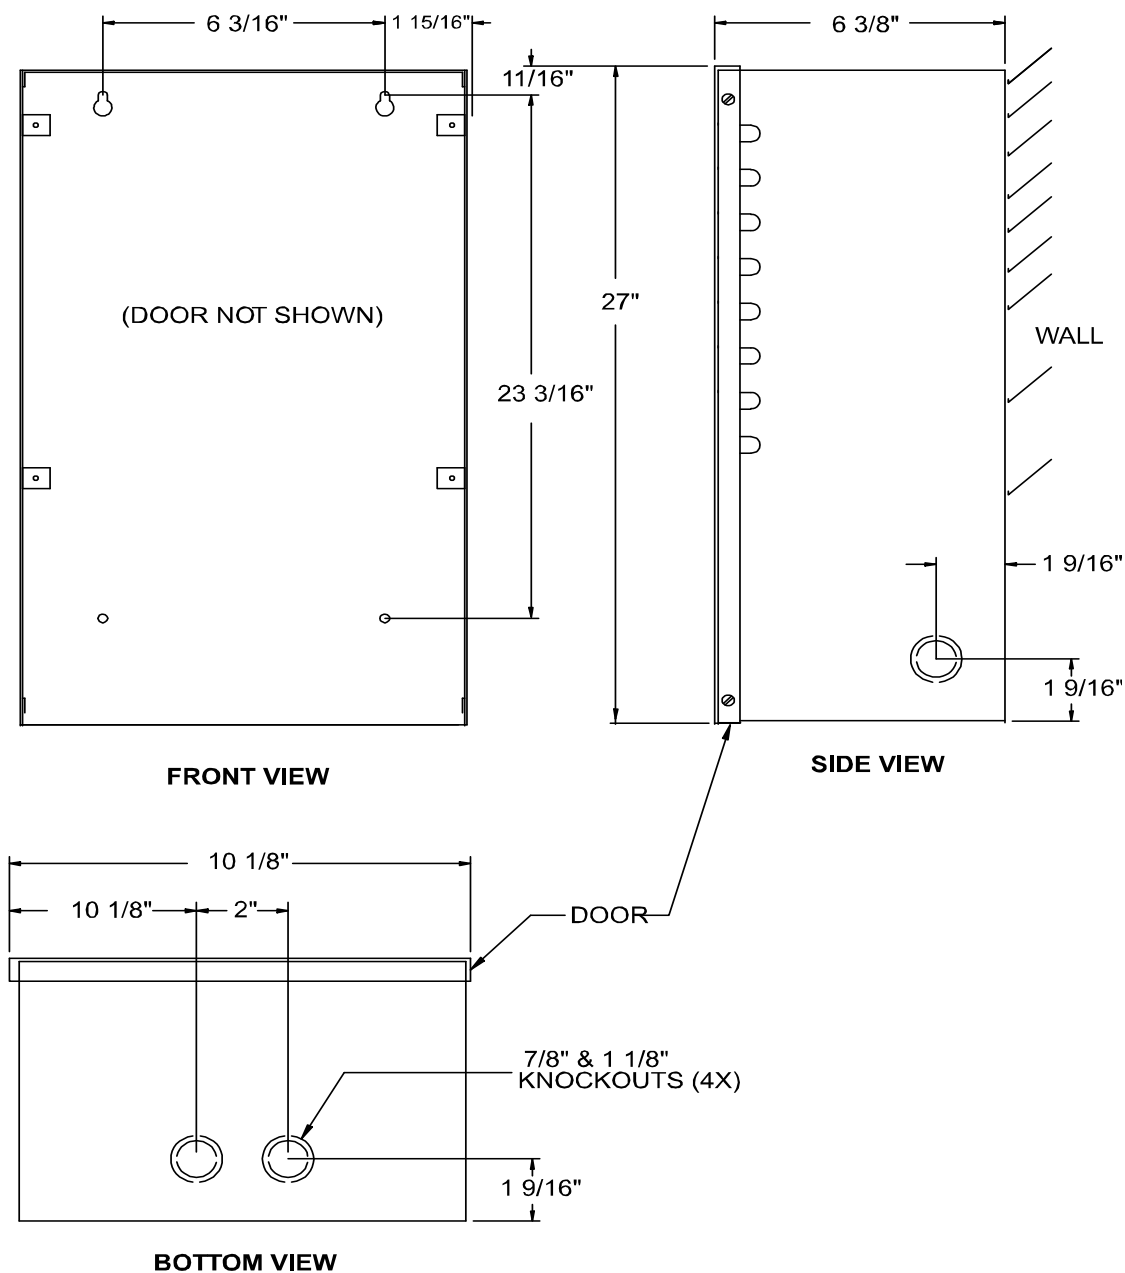


Figure 48. Elevator Relay Cabinet

To mount the Elevator Restriction Unit Cabinet

1. Using the back cover as a template mark the top two mounting hole locations 6 3/16 inches apart as shown in Figure 48.
2. Place the screws halfway into the wall in the position shown using a suitable screw.
3. Hang the box onto the two screws.
4. Screw the other two screws at the bottom of the panel.
5. Tighten all four screws into place.

6.2 Elevator Restriction Units

The Elevator Restriction Unit limits building accessibility by granting visitor access only to the destination floor. Figure 49 shows a Lobby Control Unit with an Elevator Restriction Unit.


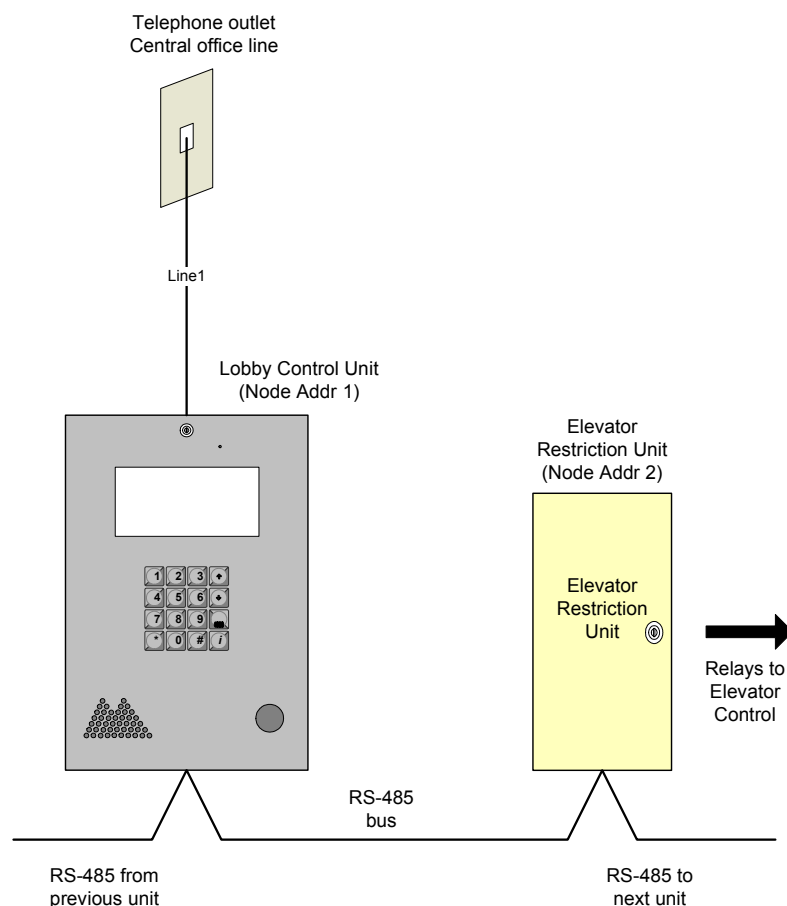


Figure 49. Lobby Control Unit with Elevator Restriction

The elevator restriction unit consists of the main elevator restriction controller board and the elevator backplane. Up to eight 2012E Elevator Relay Boards may be installed, allowing for 96 elevator floors for access in this enclosure. See Figure 50.

The Elevator Restriction Unit performs the following functions:

- Provides time dependent relay contacts which can be used for either elevator or video control.
- User set timer for relay contacts for each Elevator Restriction Unit at each Lobby Control Unit.
- RS-485 Interface to network to other Units.
- Low Power operation from one 16 Vac transformer.

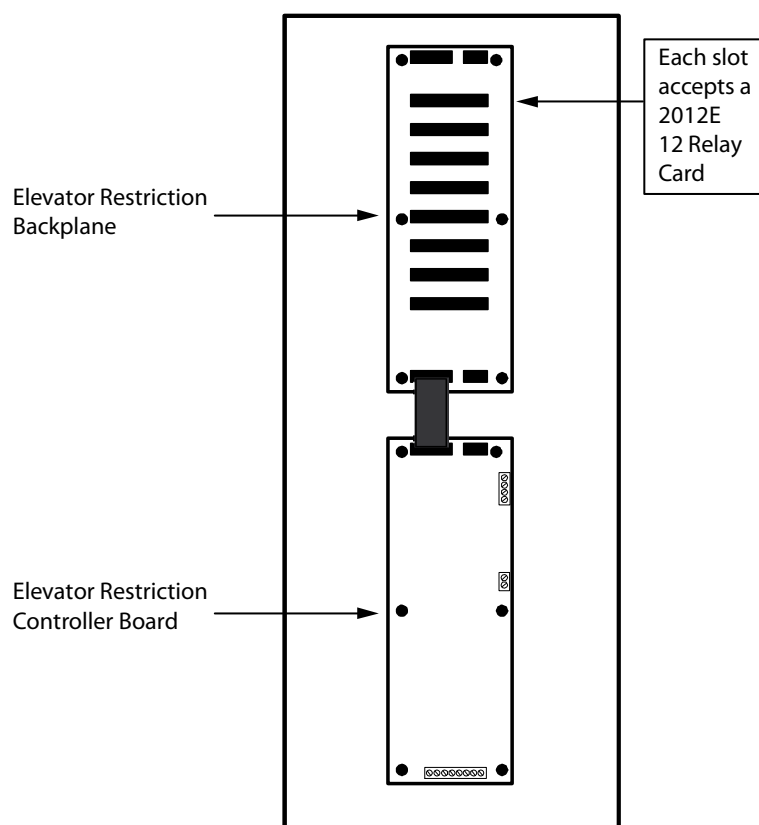

TX3-ER-8 Elevator Restriction Unit

Figure 50. Elevator Restriction Unit

6.3 Wiring the Elevator Restriction Unit

The Elevator Restriction Backplane use a ribbon cable to connect to the Elevator Restriction Main Controller board.

The Elevator Restriction Controller has eight sockets for the 2012E Relay Boards.

6.3.1 Elevator Controller Board

Figure 51 shows the general layout of the Elevator Controller board components.

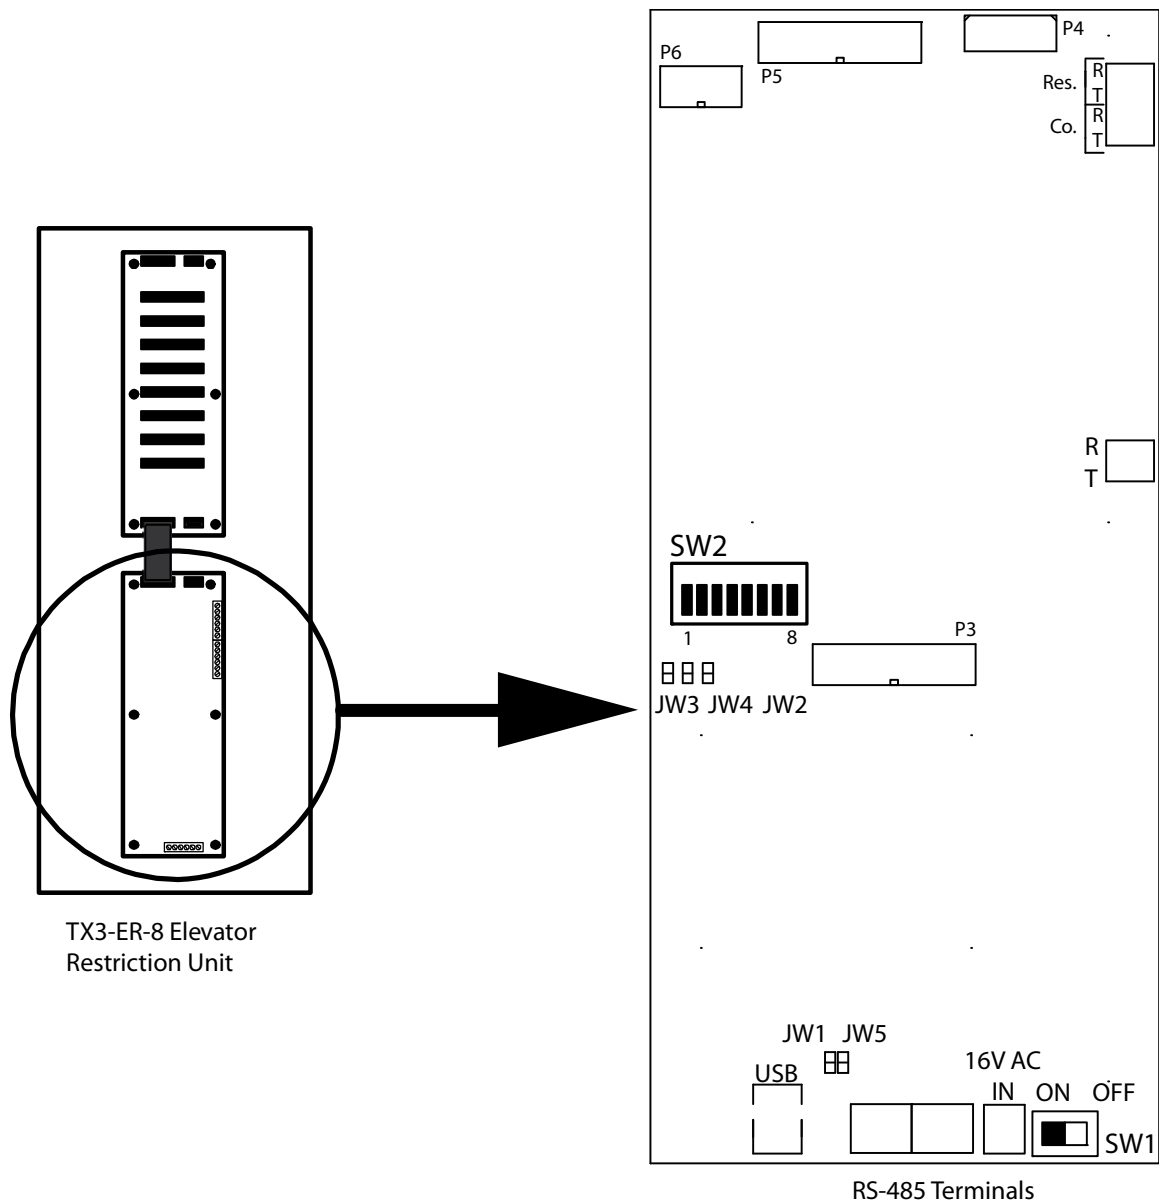


Figure 51. Elevator Controller Board

6.3.2 Connectors

USB. Computer connection for firmware download.

P1. Not normally used. Used for debugging purposes only.

P2. Not used.

P3. Connector for the MD-921 IP Module (for the TX3-ER-8-A model only).

P4. Not used.

P5. Expansion to the elevator restriction backplane.

P6. Not used.

6.3.3 DIP Switches

SW1. Turns the unit's power ON and OFF for servicing, or to re-start the unit.

SW2. Sets the unit's RS-485 ID (node address) and the IP addressing mode.

6.3.4 Jumpers

JW1. JW1 is used for updating firmware and is normally open.

JW2. JW2 is used for updating firmware and is normally open.

All other jumpers are not used.

6.3.5 USB

The USB port is used for updating firmware.

6.3.6 RS-485

Figure 52 shows the RS-485 elevator restriction unit wiring.

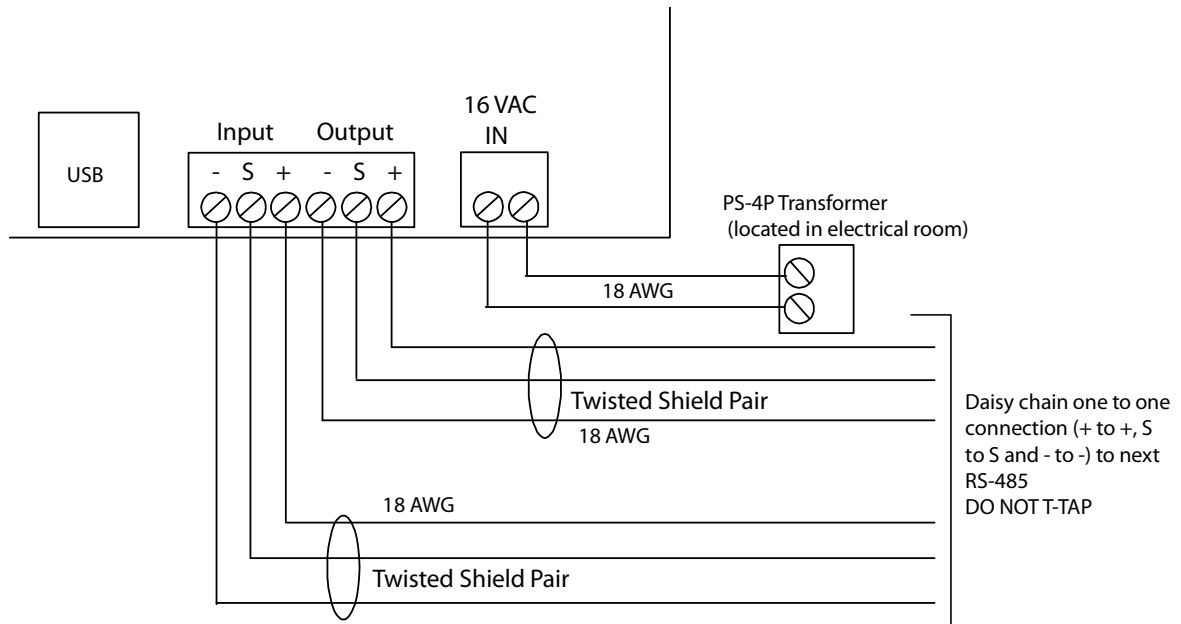


Figure 52. Elevator Restriction Controller Board Wiring

6.4 Elevator Restriction Controller Backplane

The Elevator Restriction Unit Backplane has ribbon cables to connect to the Elevator Restriction Main Controller board and eight sockets for 2012E Relay Boards.

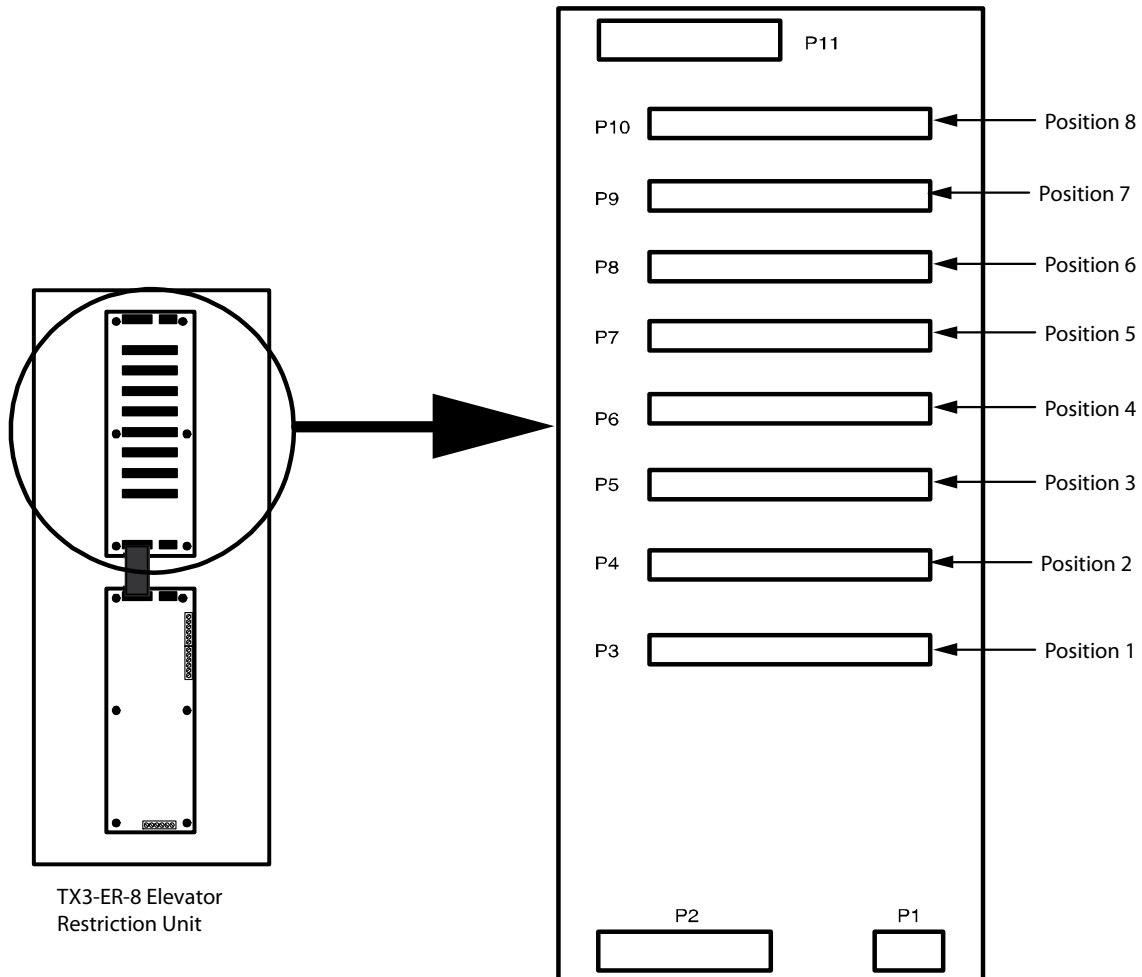


Figure 53. Elevator Restriction Controller Backplane

6.4.1 Connectors

P1. Not used.

P2. Ribbon cable connector from the elevator restriction main controller board.

P3 to 10. Connectors for the elevator restriction 2012E Relay Boards (maximum eight relay boards per backplane and one backplane per elevator). Boards are mounted starting from Position 1, 2, 3 up to Position 8.

P11. Not used.

6.5 2012E Elevator Restriction Relay Card

The 2012E Elevator Restriction Relay Boards plug into the backplane portion of the Elevator Restriction Unit. They number from one to eight starting from the bottom slot and moving towards the top.

Each relay board has 12 Form “A” or “B” relay contacts rated at 28 VDC, 0.5 amperes. Each jumper is selectable as normally open or normally closed.

There may be a total of 96 elevator restriction relays in each Elevator Restriction Unit.

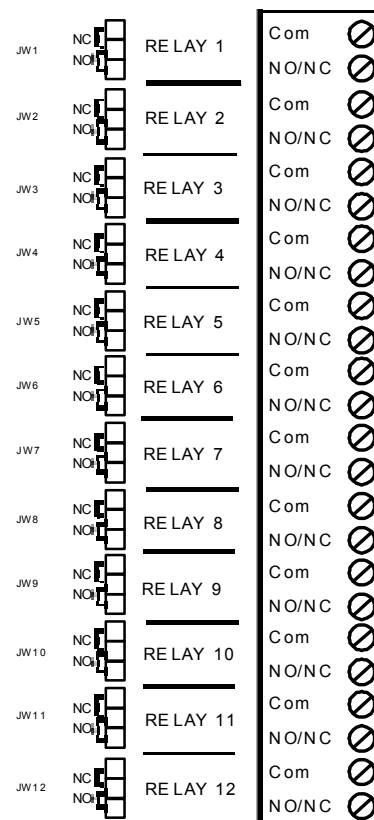


Figure 54.2012E Elevator Restriction Relay Board

6.5.1 Relay Board Components

JW1-12. Jumpers for selecting normally open or normally closed relay operation.

I1-12. LEDs indicating when each relay is active.

Relays 1 to 12. Screw terminal contacts for each relay.

6.6 Elevator Restriction Unit Configuration

The Elevator Restriction Unit ID is set using the eight position DIP Switch labelled SW2 as shown in Figure 51.

The individual switches are numbered 1 to 8 from left to right, and are marked as either ON or OFF. The first six switches (1, 2, 3, 4, 5 and 6) set the ID.

Note: Every Elevator Restriction Unit in a given TX3 System requires a unique ID. Unit IDs must not be duplicated.

Table 7: Lobby Control Unit SW2 DIP Switch Settings

Lobby Control Unit ID #	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
0 (not allowed as a Lobby Control Unit ID 0 is used for PC ID)	OFF	OFF	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF
17	ON	OFF	OFF	OFF	ON	OFF
18	OFF	ON	OFF	OFF	ON	OFF
19	ON	ON	OFF	OFF	ON	OFF
20	OFF	OFF	ON	OFF	ON	OFF
21	ON	OFF	ON	OFF	ON	OFF
22	OFF	ON	ON	OFF	ON	OFF
23	ON	ON	ON	OFF	ON	OFF
24	OFF	OFF	OFF	ON	ON	OFF
25	ON	OFF	OFF	ON	ON	OFF
26	OFF	ON	OFF	ON	ON	OFF
27	ON	ON	OFF	ON	ON	OFF

Table 7: Lobby Control Unit SW2 DIP Switch Settings

Lobby Control Unit ID #	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
28	OFF	OFF	ON	ON	ON	OFF
29	ON	OFF	ON	ON	ON	OFF
30	OFF	ON	ON	ON	ON	OFF
31	ON	ON	ON	ON	ON	OFF
32	OFF	OFF	OFF	OFF	OFF	ON
33	ON	OFF	OFF	OFF	OFF	ON
34	OFF	ON	OFF	OFF	OFF	ON
35	ON	ON	OFF	OFF	OFF	ON
36	OFF	OFF	ON	OFF	OFF	ON
37	ON	OFF	ON	OFF	OFF	ON
38	OFF	ON	ON	OFF	OFF	ON
39	ON	ON	ON	OFF	OFF	ON
40	OFF	OFF	OFF	ON	OFF	ON
41	ON	OFF	OFF	ON	OFF	ON
42	OFF	ON	OFF	ON	OFF	ON
43	ON	ON	OFF	ON	OFF	ON
44	OFF	OFF	ON	ON	OFF	ON
45	ON	OFF	ON	ON	OFF	ON
46	OFF	ON	ON	ON	OFF	ON
47	ON	ON	ON	ON	OFF	ON
48	OFF	OFF	OFF	OFF	ON	ON
49	ON	OFF	OFF	OFF	ON	ON
50	OFF	ON	OFF	OFF	ON	ON
51	ON	ON	OFF	OFF	ON	ON
52	OFF	OFF	ON	OFF	ON	ON
53	ON	OFF	ON	OFF	ON	ON
54	OFF	ON	ON	OFF	ON	ON
55	ON	ON	ON	OFF	ON	ON
56	OFF	OFF	OFF	ON	ON	ON
57	ON	OFF	OFF	ON	ON	ON
58	OFF	ON	OFF	ON	ON	ON
59	ON	ON	OFF	ON	ON	ON
60	OFF	OFF	ON	ON	ON	ON
61	ON	OFF	ON	ON	ON	ON
62	OFF	ON	ON	ON	ON	ON
63	ON	ON	ON	ON	ON	ON

Note: DIP switch 7 is not used and must be left at the default factory setting.

Note: For units with an MD-921 IP Module installed, DIP Switch 8 determines how the IP address is assigned to the IP Module.

- **DIP Switch 8 OFF:** The IP address is assigned using a DHCP server. This is the default factory setting.
- **DIP switch 8 ON:** The IP address is assigned using the TX3 Configurator software.

6.7 Updating Firmware

You can update the firmware on your panel with the TX3 Configurator software by using one of the following methods.

- Firmware Upgrade Wizard
- Network Firmware Upgrade

The Firmware Upgrade Wizard can be used to update only one panel at a time. It will work on any panel. This method does not work on 64-bit versions of Windows.

The Network Firmware Upgrade procedure can update more than one panel at the same time. In order to use the Network Firmware Upgrade, all of the panels must already have firmware that supports this feature installed on them.

Refer to LT-995, TX3 Configuration and Administrator Manual, for instructions on how to perform both of these firmware upgrade methods. LT-995 can be found on the TX3 Configurator Software installation CD, USB flash drive, or on the Mircom website.

7

Adding Controllers

This chapter provides information about adding additional controllers on the same network as the Telephone Access System.

This chapter explains

- How to add the controller

7.1 Adding a Controller

The TX3 telephone access system may be integrated with other controllers, such as the TX3-CX Card Access system and Elevator Restriction Unit, through a peer-to-peer connection via the RS-485 bus, an ethernet TPC/IP network, or a combination of RS-485 and ethernet networks.

Connecting a controller to an RS-485 network requires that the controller have a unique ID address on the RS-485 network (valid addresses range from 1 to 63). See the installation manual for your controller for instructions on how to set the ID address for your controller.

To connect a controller to an ethernet network, the controller must have an IP Module. Once the controller is connected to the ethernet network and has an IP address, the controller is recognized as a Master Node on the TX3 system.

To create a combination ethernet and RS-485 network, you connect one or more controllers to the RS-485 network on a Master Node. The controllers connecting to the Master Node's RS-485 network are Slave Nodes. Each controller on the RS-485 network (including the Master Node) must have a unique ID address on the RS-485 network. See the installation manual for your controller for instructions on how to set the ID address for your controller.

Note: Ensure that each controller has a unique address (IP and/or RS-485 ID address) on the network it is connected to.

To integrate another controller on an RS-485 network

1. Ensure the Telephone Access System and the controller are setup and ready for operation.
2. Turn the power OFF for all units on the network.
3. Connect the controller to the Telephone Access System via the RS-485 bus using the RS-485 connectors.
4. Turn the power ON for all units on the network.
5. Connect the PC to either the Telephone Access System or controller using the USB port.
6. Use the TX3 Configurator Program to add and configure the controller to the network.

8 Appendix

This chapter contains additional information about the TX3 Telephone Access System.

This chapter explains

- Telephone Access System Specifications
- Telephone Access System Kits

8.1 Specifications

8.1.1 Operating Temperature

50°C (122°F) to -20°C (-4°F).

For temperatures where the Telephone Access System will operate below 0°C (32°F) at any time, install the TH-102K Thermostat Heater within the enclosure.

8.1.2 Telephone Lines

Use only Loop Start telephones (not ground start), check with your local telephone company.

8.1.3 AC Power Supply

105 Vac to 128 Vac.

Note: Maximum power consumption for an 8-line by 20 character LCD TX3 Lobby Control Unit is 6.2 Watts.

8.1.4 Power Transformer

Mircom Model PS-4. 16 Vac/ 40 VA, CSA approved Class 2 Power Transformer.

Mircom Model PS-4P. 16 Vac/ 40 VA, CSA approved Class 2 Power Transformer, plug-in.

8.1.5 Door Strikes

Select the appropriate door strike as required by your system applications. We recommend using the following Mircom door strikes below and its compatible power transformer.

- **Mircom Model M-10.** DC (silent) or AC (buzzing) Door Strike. (Use PS-3B transformer)

Note: The door strike must have its own separate power transformer. Do not tap or use the system power transformers. When using a different door strike and door strike transformer, the maximum strike load that may be switched through the control unit is 28 Vac or 3.0 Amp DC.

8.1.6 Post Office Lock

The system has a built-in micro switch and mounting hardware for a postal lock installation. If a postal service is required, contact the Post Office to obtain the lock.

8.1.7 Tamper Switch

This switch can be connected to any security or monitoring system to supervise the opening of the panel front door. This microswitch is the same type used for the postal lock. This switch is normally open when the panel front door of the TX3 is closed, and operates at 28 Vac or 28 Vdc, 1A.

8.1.8 Modem

Compatible modems are listed below:

- TFM-560U High Speed USB 2.0 Fax Modem
- TFM-561U High Speed USB 2.0 Fax Modem
- Hiro H50113 56K V.92 USB Fax Modem
- StarTech USB56KEM2 56k V.92 USB Fax Modem
- Zoom 56K V.92 56K USB Mini External Fax Modem

8.2 Kits - Electronic Scrolling Directory

8.2.1 TX3-120U and TX3-120U-A: Electronic Scrolling Directory plus Paper Directory Lobby Control Unit Kit

- Four-line by 20 character LCD display
- 120 name paper directory
- Main controller board for 200 residents
- PS-4P Transformer
- Universal Enclosure complete with Rain Hood and Light Assembly
- TX3-120U-A is IP capable

8.2.2 TX3-200-8U and TX3-200-8U-A: Electronic Scrolling Directory Lobby Control Unit Kit

- Eight-line by 20 character LCD display
- Main controller board for 200 residents
- PS-4P Transformer
- Universal Enclosure complete with Rain Hood and Light Assembly
- Designed for outdoor applications
- TX3-200-8U-A is IP capable

8.2.3 TX3-1000-8U and TX3-1000-8U-A: Electronic Scrolling Directory Lobby Control Unit Kit

- Eight-line by 20 character LCD display
- Main controller board for 1000 residents
- PS-4P Transformer
- Universal Enclosure complete with Rain Hood and Light Assembly
- Designed for outdoor applications
- TX3-1000-8U-A is IP capable

8.2.4 TX3-2000-8U and TX3-2000-8U-A: Electronic Scrolling Directory Lobby Control Unit Kit

- Eight-line by 20 character LCD display
- Main controller board for 2000 residents
- PS-4P Transformer
- Universal Enclosure complete with Rain Hood and Light Assembly
- Designed for outdoor applications
- TX3-2000-8U-A is IP capable

8.3 Kits - Telephone Access Slim-line

8.3.1 TX3-200-4U and TX3-200-4U-A: Slim-Line Electronic Scrolling Directory Lobby Control Unit Kit

- 4 Line by 20 LCD character display
- Main controller board for 200 residents
- PS-4P Transformer
- Slim-line Universal Enclosure complete with Rain Hood and Light Assembly
- TX3-200-4U-A is IP capable

8.3.2 TX3-NSL-12K and TX3-NSL-12K-A: Slim-Line NSL Starter Kit

- TX3-200-4U Slim Line Universal Enclosure complete with Rain Hood and Light Assembly (TX3-NSL-12K)
- TX3-200-4U-A Slim Line Universal Enclosure complete with Rain Hood and Light Assembly (TX3-NSL-12K-A)
- 4 Line by 20 LCD character display
- Main controller board for 200 residents
- PS-4P Transformer
- TX3-NSL-8M Master NSL Relay Cabinet complete with PS-4P transformer
- 2012K Twelve unit kit complete with a 2012 Telephone card and a 9106 Relay Cable
- RJ-71C Punch Down Block
- Designed for outdoor applications

8.4 Kits - Continental Series Enclosures

8.4.1 TX3-120U and TX3-120U-A: Electronic Scrolling Directory plus Paper Directory Lobby Control Unit Kit

- Four-line by 20 character LCD display
- 120 name paper directory
- Main controller board for 200 residents
- PS-4P Transformer
- Universal Enclosure complete with Rain Hood and Light Assembly
- TX3-120U-A is IP capable

8.4.2 TX3-200-8C and TX3-200-8C-A: Electronic Scrolling Directory Lobby Control Unit Kit

- Eight-line by 20 character LCD display
- Main controller board for 200 residents
- PS-4P Transformer
- Continental Enclosure
- Designed for indoor applications
- TX3-200-8C-A is IP capable

8.4.3 TX3-1000-8C and TX3-1000-8C-A: Electronic Scrolling Directory Lobby Control Unit Kit

- Eight-line by 20 character LCD display
- Main controller board for 1000 residents
- PS-4P Transformer
- Continental Enclosure
- Designed for indoor applications
- TX3-1000-8C-A is IP capable

8.4.4 TX3-2000-8C and TX3-2000-8C-A: Electronic Scrolling Directory Lobby Control Unit Kit

- Eight-line by 20 character LCD display
- Main controller board for 2000 residents
- PS-4P Transformer
- Continental Enclosure

- Designed for indoor applications
- TX3-2000-8C-A is IP capable

8.4.5 TX3-200-8CH and TX3-200-8CH-A: Electronic Scrolling Directory Lobby Control Unit Kit with Handset

- Eight-line by 20 character LCD display
- Handset
- Main controller board for 200 residents
- PS-4P Transformer
- Continental Enclosure
- Designed for indoor applications
- TX3-200-8CH-A is IP capable

8.4.6 TX3-1000-8CH and TX3-1000-8CH-A: Electronic Scrolling Directory Lobby Control Unit Kit with Handset

- Eight-line by 20 character LCD display
- Handset
- Main controller board for 1000 residents
- PS-4P Transformer
- Continental Enclosure
- Designed for indoor applications
- TX3-1000-8CH-A is IP capable

8.4.7 TX3-2000-8CH and TX3-2000-8CH-A: Electronic Scrolling Directory Lobby Control Unit Kit with Handset

- Eight-line by 20 character LCD display
- Handset
- Main controller board for 2000 residents
- PS-4P Transformer
- Continental Enclosure
- Designed for indoor applications
- TX3-2000-8CH-A is IP capable

9 Resident Operating Instructions

This chapter describes the Telephone Access System operating instructions for use by the resident.

This chapter explains

- NSL Resident Operating Instructions
- ADC Resident Operating Instructions

9.1 NSL Resident Operating Instructions

Mircom's state-of-the-art door entry system provides you and your guest with an increased level of confidence and security.

The TX3 Telephone Access system operates with your existing telephone. Your guest dials your code number or selects your name by scrolling through the electronic directory on the Entry unit, causing your telephone to ring.

Note: The telephone keypad numbers described in this chapter may be different for your system. If the keypad numbers do not perform as described, check with your building administrator to get the correct values.

9.1.1 Granting Access

When you answer your telephone, you will be in communication with your guest.

To unlock the main door

- Press " 9 " on your telephone keypad

To unlock the auxiliary door

- Press " 6 " on your telephone keypad

To refuse entry

- Hang up **or**
- Press "4"

9.1.2 Call Waiting Feature

Note: The Call Waiting Feature is available only on NSL systems.

When a guest places a call to you from the Lobby Control Unit while you are engaged in a conversation on your outside telephone line, you will hear a distinct tone.

To answer the call

1. Briefly push the call waiting key, "2", to answer the call. This action automatically places the outside telephone line "on hold".
2. While on-line with your guest, you can open the main door by dialling " 9 ".

Pressing “9”, “6” or “4” automatically reconnects to the previously "on hold" caller. In a similar manner, you can answer an outside call while talking to the guest in the lobby.

Note: You will be disconnected if you attempt to place your guest "on hold".

9.1.3 Keyless Entry Codes

The keyless code is a confidential number assigned to each resident by the building administrator to let you open the front lobby door without using a key.

To unlock the front door

1. Press “0”. The keyless code prompt appears.
2. Enter the keyless code. The front door unlocks.

9.2 ADC Resident Operating Instructions

Mircom's state-of-the-art door entry system provides you and your guest with an increased level of confidence and security.

The TX3 Telephone Access system operates with your existing telephone. Your guest simply dials your code number or selects your name by scrolling through the electronic directory on the Entry unit, causing your telephone to ring.

Note: The telephone keypad numbers described in this chapter may be different for your system. If the keypad numbers do not perform as described, check with your building administrator to get the correct values.

9.2.1 Granting Access

When you answer your telephone, you will be in communication with your guest.

To unlock the main door

- Press "9" on your telephone keypad

To unlock the auxiliary door

- Press "6" on your telephone keypad

To refuse entry

- Hang up **or**
- Press "4"

9.2.2 Keyless Entry Codes

The keyless code is a confidential number assigned to each resident by the building administrator to let you open the front lobby door without using a key.

To unlock the front door

1. Press "0". The keyless code prompt appears.
2. Enter the keyless code. The front door unlocks.

Warranty & Warning Information

Limited Warranty

Mircom Technologies Ltd. together with its subsidiaries and affiliates (collectively, the “Mircom Group of Companies”) warrants the original purchaser that for a period of two years from the date of manufacture, the product shall be free of defects in materials and workmanship under normal use. During the warranty period, Mircom shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labour and materials. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original owner must promptly notify Mircom in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, with the exception that Mircom shall not be responsible for any customs fees, taxes, or VAT that may be due.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of Mircom such as excessive voltage, mechanical shock or water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by Mircom);

- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to Mircom must first obtain an authorization number. Mircom will not accept any shipment whatsoever for which prior authorization has not been obtained.

Note: Unless specific pre-authorization in writing is obtained from Mircom management, no credits will be issued for custom fabricated products or parts or for complete fire alarm system. Mircom will at its sole option, repair or replace parts under warranty. Advance replacements for such items must be purchased.

Note: Mircom's liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) and of all other obligations or liabilities on the part of Mircom neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

Out of Warranty Repairs

Mircom will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to Mircom must first obtain an authorization number. Mircom will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which Mircom determines to be repairable will be repaired and returned. A set fee which Mircom has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which Mircom determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.

WARNING

Mircom recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

NOTE

Under no circumstances shall Mircom be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property.

MIRCOM MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS GOODS DELIVERED, NOR IS THERE ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, EXCEPT FOR THE WARRANTY CONTAINED HEREIN.

Special Notices

Product Model Number: TX3

AC REN (U.S.): 0.0B

AC REN (CANADA): 0.0

Complies With

Federal Communications Commission (FCC):

- TIA-968-A Technical requirement for connection of equipment to the telephone network.
- CFR 47, Part 15, Subpart B, Class B
- Unintentional Radiators

Industry Canada (IC):

- Terminal attachment programme
- CS-03, Issue 8 - Certification Specifications
- ICES-003, ISSUE 4, CLASS B
- Verification Authorization - Digital Apparatus

Registration Numbers

FCC (U.S.): 1M8TE00BTX3

IC (Canada): 1156A-TX3

Industry Canada Notice for all TX3 Products Sold in Canada

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. Industry Canada does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunication company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradations of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alteration made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the earth ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This is necessary both for proper operation and for protection.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

Note: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

FCC Notice for all TX3 Products Sold in the U.S.A.

Type of Service

The TX3 is designed to be used on standard device telephone lines. It connects to the telephone line by means of a standard jack called the USOC RJ-11C (or USOC FJ45S). Connection to telephone company-provided coin service (central office implemented systems) is prohibited. Connection to party lines service is subject to state tariffs.

Telephone Company Procedures

The goal of the telephone company is to provide you with the best service it can. In order to do this, it may occasionally be necessary for them to make changes in their equipment, operations or procedures. If these changes might affect your service or the operation of your equipment, the telephone company will give you notice, in writing, to allow you to make any changes necessary to maintain uninterrupted service.

In certain circumstances, it may be necessary for the telephone company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number and the ringer equivalence number (REN); both of these items are listed on the equipment label. The sum of all of the RENs

on your telephone lines should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be useable on a given line.

Changes to Telephone Service

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Ringer Equivalence Number

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is Customer Information 3 July 2003 part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If Problems Arise

If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance of this disconnection. If advance notice is not feasible, you will be notified as soon as possible. When you are notified, you will be given the opportunity to correct the problem and informed of your right to file a complaint with the FCC. Contact your telephone company if you have any questions about your telephone line. In the event repairs are ever needed on the Communicator, they should be performed by Mircom or an authorized representative of Mircom. For information contact Mircom at the address and telephone numbers in paragraph 1.7.

If this equipment, TX3 Telephone System, causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

Product Identifier

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back of the front panel cover of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

Telephone Connection

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. You are responsible for installing a compliant telephone cord and modular plug into this product as described in this manual. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Equipment Failure

If trouble is experienced with the TX3 Telephone/Card Access System, for repair or warranty information, please contact Mircom using the numbers paragraph 1.7. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Use With Alarm Auto Dialers

If your institution has specially wired alarm equipment connected to the telephone line, ensure the installation of the TX3 Telephone/Card Access System does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

